

## INSTRUCTIONS Wireless Earbuds

Please read these instructions carefully and retain them for future reference.

### Description of product:

 
This kit contains:

- Wireless Earbuds
- Charging Cable

### Details:

- Music play time: 1 - 2 hrs
- Talk time: 1.5 hours
- Charge time: 1 hour
- Charging Voltage: DC 5V
- Skip and Voice prompt: Support
- Function: Call control - answer/end/volume/redial;
- Music control - play/pause/next track/previous track
- Rating: 80mW
- Frequency response: 20Hz-20KHz
- S/N: 90db
- Bluetooth available distance : Up to 30ft
- Impedance: 32ohm

### Device Layout:



1. On/Off	2. Mic	3. Previous, Volume -
4. Next, Volume +	5. Micro USB Port	

### Key function:

On/Off	Press and hold the key for 3 seconds to turn on/off
Volume Increase	Press and hold the + key
Volume Decrease	Press and hold the - key
Phone	Answer Call: Press on/off End Call: Press on/off again Reject Call: Press and hold on/off for approximately 2 seconds and then release it Redial last Number: Double click on/off
Music	Play/Pause: Press on/off Next Track: Press + key Previous Track: Press - key

### Start-up:

#### Charging the battery

(Fully charge before first use)

1. Insert the Micro USB Charging Cable into the Micro USB in Port on the earbuds.
2. Plug the Micro USB Charging Cable into a power source with a USB output port.

3. The battery will charge in approximately 1 hour; **warning** - do not exceed 3 consecutive hours of charge time.
4. The charging LED indicator is red while the earbuds are charging. Once fully charged, the red charging LED will turn blue.

**Note:** To achieve optimum charging speed, a DC5V 1A power adapter is recommended. USB adapter is not included in the package.

### Pairing your device:

1. Prepare your device to pair by turning on Bluetooth and making sure the device is within 30 ft. of the earbuds.
2. Press power button on earbuds; tone will confirm "power on".
3. Select "Bluetooth music" on your device.
4. Once pairing is successful, tone will confirm "connected".

### Warning:

- Do not use any cable other than one supplied with the earbuds for charging.
- Do not charge the earbuds for longer than 3 consecutive hours. Do not leave the earbuds charging once the charging LED light has turned blue.
- Do not open, modify, or take apart the earbuds. This may cause risk of electric shock or fire.

### Cleaning and storage:

- Clean the device using a soft dry cloth
- Do not use detergent as it may damage the device

### Note about disposal:

When no longer usable, dispose of this product at a collection point for electrical and electronic equipment recycle facility.

### Declaration of Conformity:

Fourstar Group Inc. declares that this Bluetooth earbuds (GC-1) is in compliance with directive 2014/53/EU and its related information is available at the following internet address: <http://www.fourstari.com/support/electronics/>. The frequency and maximum transmitted power in EU are listed as below, 2402-2480MHz: 3.47 dBm.

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Fourstar Group Inc is under license.

FCC ID: 2AYNN-FSG2199216

### RF warning statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

### FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.