 



English

Instruction Manual

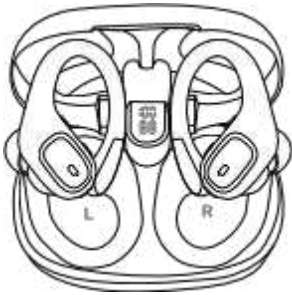

Please read the instructions before use

 Connect

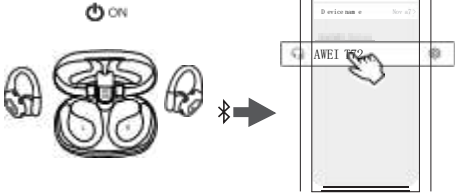

1. Take out the earbuds (Earbuds auto power on)
2. After open the phone Bluetooth, Click the <Bluetooth> to Pairing

 
 
Reset

If there are connectivity or functional issues with the headset, please reset the headset:

1. Delete Bluetooth pairing information on the device and turn off the device's Bluetooth functionality.
2. Put the headset into the charging box to charge.
3. Turn on the Bluetooth function of the device.
4. Take out the headset and wait for 20 seconds before pairing and connecting to the device again.

(If the above operation does not work, please try again)

Operation

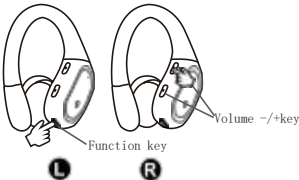

Play/Pause
single click
function keys

Switch Song
Press and hold the
volume +/- key for 2S

Adjust Volume
Click the Volume +/- key

Power on/off
Press and hold the
function key 2/5S



Answer/Hang up
single click
function keys

Reject Call
Press and hold the
function key 2S

Voice Assistant
Press and hold the
function key 2S

Restore
factory settings
Press and hold
the Volume +/- key for 3s

X1: Click Once

2S: Press and hold for 2 seconds

Problem handling

① Can be connected but there is no sound:

Click the left/right ear volume+button.

② One of earbuds cannot be charge:

Clean the charging contacts of the headset and charging box.

③ One of the earbuds cannot be connected:

Reset the earbuds (See page 2).

If the headset cannot be charged after activating the product (it is normally connected to the Bluetooth device for the first time), Contact us to send new products.



Please clean the charging contacts of the earbuds and charging case frequently to avoid charging failures.

Safety Instructions

1. Keep the product away from extremely hot and cold environments, it will damage the battery and circuit.
2. Avoid liquid immersion into the product.
3. Do not disassemble the product.
4. Do not use concentrated chemical products or detergents to clean the product.
5. Use only 5V/1A power supply. Connecting the power supply voltage too high may cause serious damage.
6. Do not randomly discard or place the product near fire or high temperature to avoid the danger of explosion.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

连接



 
使用说明




问题处理

安全说明

使用说明书

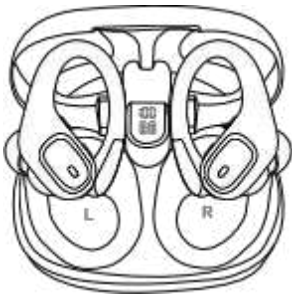

使用前请阅读说明

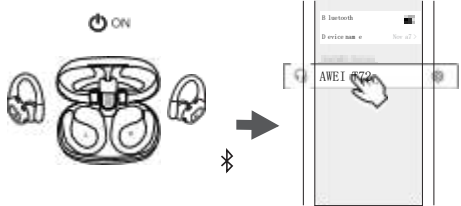 


- 1. 取出耳机
(耳机将自动开机)
- 2. 打开手机蓝牙后
单击**<BX28>** 进行配对

重置

如果耳机存在连接或功能问题，请重置耳机：

 - 1. 删除设备上的蓝牙配对信息，并关闭设备蓝牙功能。
- 2. 将耳机放入充电盒充电。
- 3. 打开设备的蓝牙功能。
- 4. 拿出耳机，等待20秒后，重新与设备配对连接。
(如果上述操作不起作用，请重试)

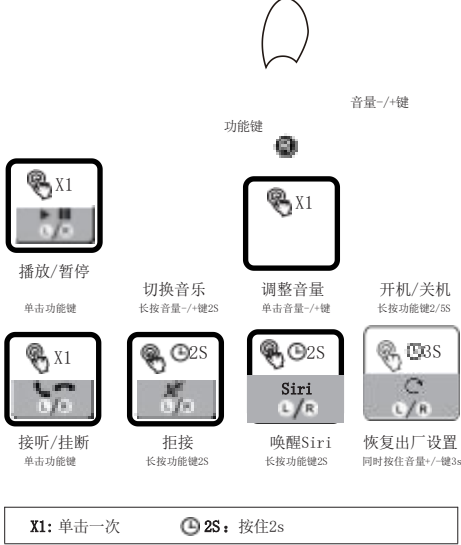

- ① 可以连接但没有声音：
单击左/右耳音量+键。
- ② 其中一个耳机无法充电：
清洁耳机和充电盒的充电触点。

- ③ 其中一个耳机无法连接：
请重置耳机（见第2页）。

激活产品（第一次正常连接蓝牙设备使用）后如耳机无法充电，
联系我们寄送新产品



请经常清洁耳机和充电盒的充电触点，
以避免充电失败。

- 1. 使产品远离酷热和寒冷，避免损坏电池和电路。
- 2. 避免液体浸入产品中。
- 3. 请勿拆卸产品。
- 4. 不要使用浓缩化学产品或洗涤剂清洁产品。
- 5. 仅使用5V/1A电源。连接电源电压过高可能会导致严重损坏。
- 6. 不要随意丢弃或将产品放置在火灾或高温附近，以避免爆炸危险。