

Additional Sensor

ES06577G **INSTALLATION INSTRUCTIONS**



Warning

PLEASE READ CAREFULLY AND SAVE THESE INSTRUCTIONS, AS YOU MAY NEED THEM AT A LATER DATE.

IMPORTANT SAFETY OPERATING INSTRUCTIONS

- 1. Please read all warning and instruction labels which are included in the box and fixture to avoid personal injury, property damage caused by fire, cuts, bruises, death and other dangers,
- 2. Please follow these general precautions before installing, maintaining, or

AWARNING

- 1. The packing contains small parts that could be swallowed by children.
- 2. Keep the packaging material away from children and pets.
- 3. Do not look directly at the LED lights for any length of time.
- 4. This light fixture is NOT A TOY and is not suitable for use by children.
- 5. We do not take responsibility if the instruction manual is not followed correctly or if the product is handled improperly resulting in damage to person or property.
- A WARNING: This product can expose you to chemicals including lead and lead compounds, Di(2-ethylhexyl)phthalate (DEHP), which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

LOCATION

Fixture can be wall mounted.


Recommended installation height: 4 - 8 feet above the ground. Environment will affects the sensor range. It is recommended not to mount the fixture near a heat source like an air conditioner, vent, or furnace exhaust, or in a direction facing a light reflecting object. Maybe the sensor detection distance will decrease lower than 16 feet in


the bright way to do home security.

What's in the box


PREPARATION

Tools required for assembly (not included); phillips screwdriver, safety goggles, power drill and ladder.

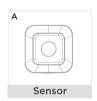

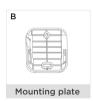



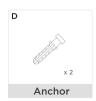

Parameter


- Detection range: 16 feet x 110 degree
- Power source: 3 AAA batteries (not included)
- 4 channels selection
- Transmission distance: up to 164ft (50m)

How to installation and operation



Slide the mounting plate (part B) off the back of the sensor (part A).




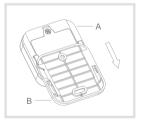



Insert three 1.5V AAA size batteries (not included) and choose your desired channel (4 channels option, based on the selected channel of the product that you want to link) next to the inside of the battery chamber. Then close the battery cover and lock the screw tightly

Note: Make sure the polarity of the batteries is correct.

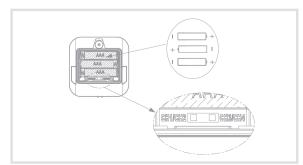




Switch the power switch to "ON".




5 Use a power drill (not included) to drill the holes on your chosen

Place the mounting plate (attached on the back of the light fixture) over the holes & use 4 of the Plastic Anchors (Part D) and Screws (Part C) to fasten the mounting plate to the surface.

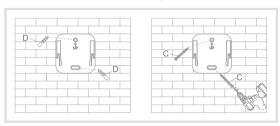

Slide the sensor into the grooves of the mounted plate in parallel. (the side with ON/OFF switch faces down)

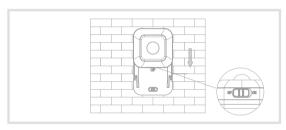



FCC

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including

interference that may cause undesired operation.

This device complies with FCC Part 15 of FCC Rules.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to

Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in

a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance

with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off

and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with a minumum distance of 20 cm between the radiator and your body.

Cleaning and Maintenance




To prolong the original appearance, clean the sensor with a soft, damp cloth. Do not use paints, solvents, or other chemicals on this light fixture. They could cause a premature deterioration of the finish

Battery replacement

Use 3 new 1.5V AAA size batteries for replacement.

Note: Replace 3 new batteries every six months.

- · Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Exhausted batteries must be removed from the product.
- · Do not dispose of batteries in fire
- Must follow state and local regulations to recycle and dispose of batteries.
- · Batteries must be placed at the correct polarity.

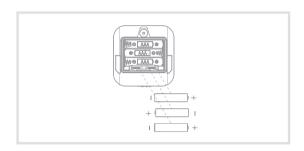

Register & Subscribe today to protect your investment and join our email list!



Scan below for link:



homezonesecurity.com support@homezone-usa.com US: +1 888-782-5618

Why Register?

- · Receive your extended warranty
- Get professional warranty support
- Be the first to hear the latest product news.
- Get exclusive deals delivered to you email.

Get exclusive offers and deals when you subscribe!

and register your product for additional benefits. Products must be sold by an authorized reseller or distributor to be valid.

Horizon Marketing Group, LLC 🧇 4198 Industry Way Flowery Branch, GA 30542 USA