

**Wireless Optical Mouse with
Mini Folding Receiver
User's Guide**

Wireless Optical Mouse with Mini Folding Receiver

User's Guide

Notice:

Federal Communications Commission (FCC) requirements, Part 15

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications not expressly approved by the grantee of this device could void the users authority to operate the equipment.

Congratulations on your purchase of this Wireless Optical Mouse. Please carefully read the User's Guide to learn about the installation and the powerful functions of your new Wireless Optical Mouse.

1. Contents of the Package

- 1) Wireless Optical Mouse *1
- 2) Mini Folding Receiver *1 (USB or USB to PS/2 Combo)
- 3) AC to DC Adaptor *1
- 4) USB to DC Cable *1
- 5) Two AAA Rechargeable Batteries for the Mouse
- 6) Mouse Driver *1 (Disk or CD-ROM)
- 7) User's Guide *1

2. Install Hardware

2-1. Install the Mini Folding Receiver with a USB Connector

- 1) You can turn on the PC before connect the USB connector with the PC.
- 2) Plug the USB connector of the receiver into the USB mouse port of the PC.

2-2. Install the Mini Folding Receiver with a USB to PS/2 Combo Connector

 
 
- 1) The combo connector is a USB connector with a USB to PS/2 adaptor.
- 2) Please check the mouse port of your PC. If the mouse port of the PC is USB, please plug the USB connector to the PC without using the USB to PS/2 adaptor.
- 3) If the mouse port of the PC is PS/2, please turn off the PC. Connect the USB connector with the USB to PS/2 adaptor, and then connect the receiver with the PC.

2-3. Select the Mouse Channel

- 1) The two-channel switch is located at the back of the mouse. Select channel 1 or 2.
- 2) Put the batteries into the battery box.

2-4. Link the Mouse with the Receiver

- 1) Turn on the PC. The LED indicator on the receiver will light.
- 2) Press the ID Link Button on the receiver and the LED indicator will blink. The receiver is ready to automatically link with the mouse.
- 3) Press the ID Link Button on the back of the mouse and the LED

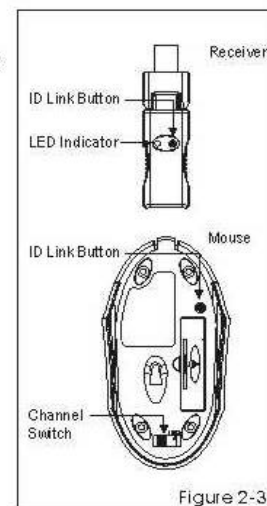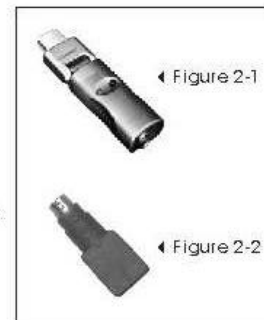

indicator on the receiver will blink quickly. The indicator will stay in light while successfully finish the linkage.

- 4) The LED indicator will blink while you move the mouse.
- 5) If you need to re-link the mouse or after changing the mouse batteries, please repeat the above linkage instructions.
- 6) If the selected channel is interfered by other wireless-mouse users nearby, please change the selected channel to the other channel immediately.

3. Install Driver

3-1. Notice

- 1) The driver supports Windows 95, Windows 98, Windows NT, Windows 2000, Windows ME and Windows XP.
- 2) The USB interface is compatible with Windows 98, Windows 2000, Windows ME and Windows XP only.

3-2. Installation



- 1) Insert the driver disk or CD-ROM to your PC. The PC system may automatically install the driver through selecting the PC auto-install function.
- 2) If the PC system does not set the auto-install function, please double click the file "Setup.exe" and follow the setup instructions to complete the driver installation.
- 3) A Mouse Setting icon will appear on the tool bar of Windows after you successfully finish the installation.

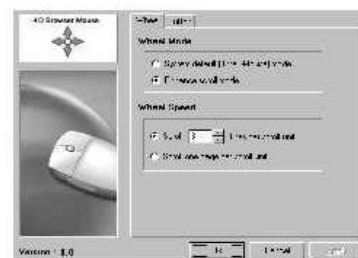 


Figure 3-3-1

3-3. Select Mouse Functions

- 1) Double click the Mouse Setting icon.
- 2) Follow the selection instructions to set the button functions.

• F1-F10	• Down	• Internet Explorer	• Minimise All	• Space
• Auto Scroll	• Drag Lock	• Backward	• Windows	• Start Menu
• Backspace	• End	• Internet Explorer	• Minimise	• System Help
• Close Application	• Enter	• Forward	• Windows	• System Property
• Connect to Internet	• Esc	• Launch Default	• Page Down	• Tab
• Control Lock	• Explorer	• Browser	• Page Up	• Undo
• Control Panel	• Find Computer	• Launch Default	• Paste	• Undo Minimise
• Copy	• Find File	• E-mail	• Redo	• All Windows
• Cut	• Home	• Left	• Right	• Universal Scroll
• Delete	• Horizontal Wheel	• Maximise Windows	• Run...	• Universal Zoom
• Double Click		• Middle Button	• Shift Lock	• Up

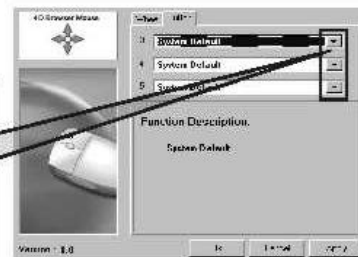 


Figure 3-3-2

4. Batteries and Charging Notice

- 1) Ni-MH rechargeable batteries are recommended for the mouse. At the first time of usage, please charge the batteries for 6 to 8 hours for charging.
- 2) The scroll wheel on the mouse will turn to red light while the mouse is low battery. Please recharge the batteries immediately.
- 3) Recharge the batteries for 8 hours and the power can remain for 3 days.
- 4) Press any mouse button or move the scroll wheel to wake up the mouse while the mouse is in the sleeping mode.

