

MECOOL

KS3 Soundbar



INSTRUCTION MANUAL

MODEL: KS3

Thank you for purchasing your new Element Soundbar.

We recommend that you spend some time reading this instruction manual so that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:



Main Unit




Instruction Manual



Mains Adapter



 HDMI 2.0 lead 1.5m



Remote Control

Product Overview

Main Unit

Front view




1. Tweeter
2. Mid-low


LED indicator show the current status list:

Power Button:	(Working and standby state:) White indicator stays on. (Power off:) Red indicator stays on.
HDMI(eARC) Button:	(Working status:) White indicator stays on.
SPDIF Button:	(Working status:) White indicator stays on.
Bluetooth Button:	(Working status:) White indicator stays on.
VOL+/- Button:	(Working status:) White indicator flashes briefly.

 
Vertical View

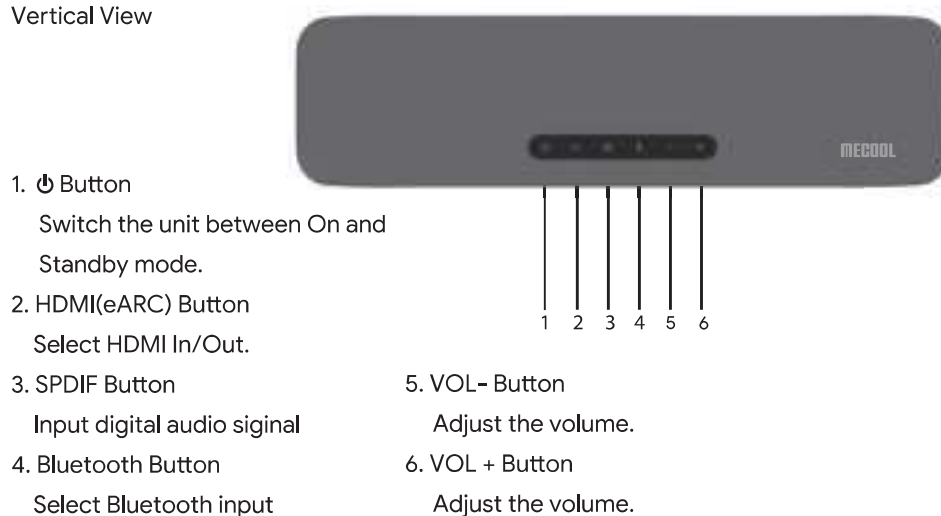

Rear View


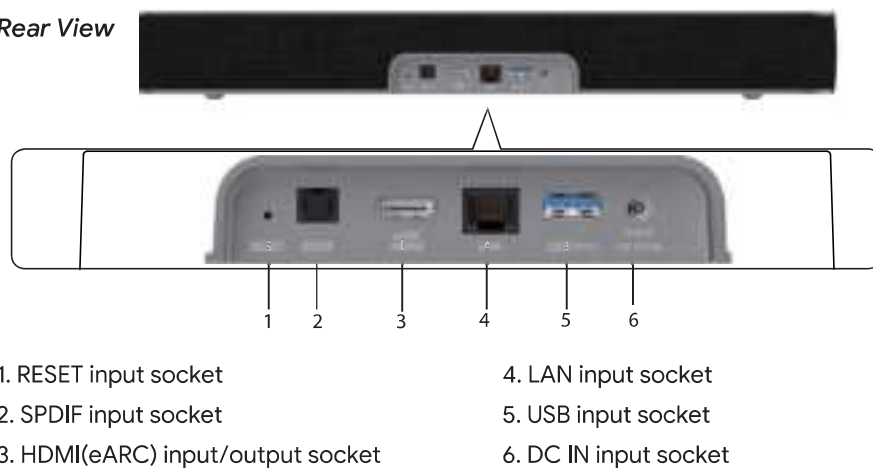 


Remote Control

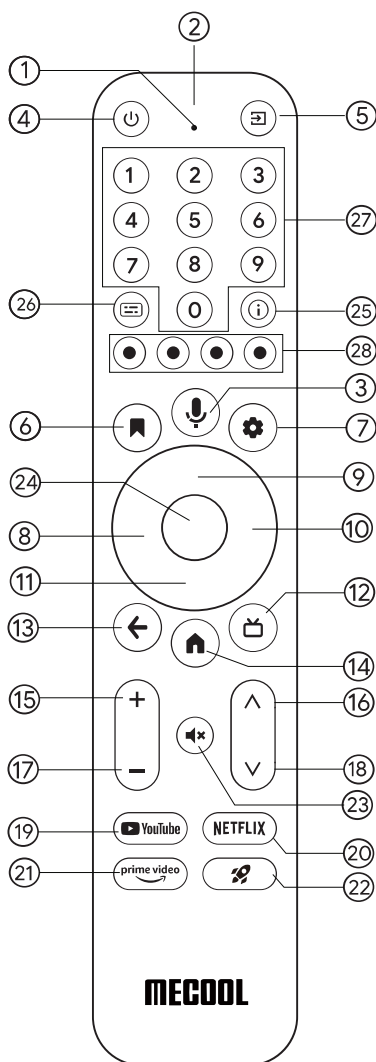 

- ① Microphone
- ② Indicator Light
- ③ Voice Control
- ④ Power On / Off
- ⑤ TV Input Switch
- ⑥ Bookmark
- ⑦ Settings
- ⑧ Navigate to Left
- ⑨ Navigate to Up
- ⑩ Navigate to Right
- ⑪ Navigate to Down
- ⑫ Live TV
- ⑬ Return
- ⑭ Shortcut Key to Home Page
- ⑮ Volume Up
- ⑯ PAGE+
- ⑰ Volume Down
- ⑱ PAGE -
- ⑲ Quick one-click access to YouTube
- ⑳ Quick one-click access to NETFLIX
- ㉑ Quick one-click access to Prime Video
- ㉒ The default is audio source switching.
If the user uses the "APP Key Definition" app,
supporting users' custom app shortcuts
- ㉓ Mute
- ㉔ Press to Confirm
- ㉕ Info Bar
- ㉖ Subtitles
- ㉗ Press to input Arabic number
- ㉘ Composite function keys

  
Remote Control

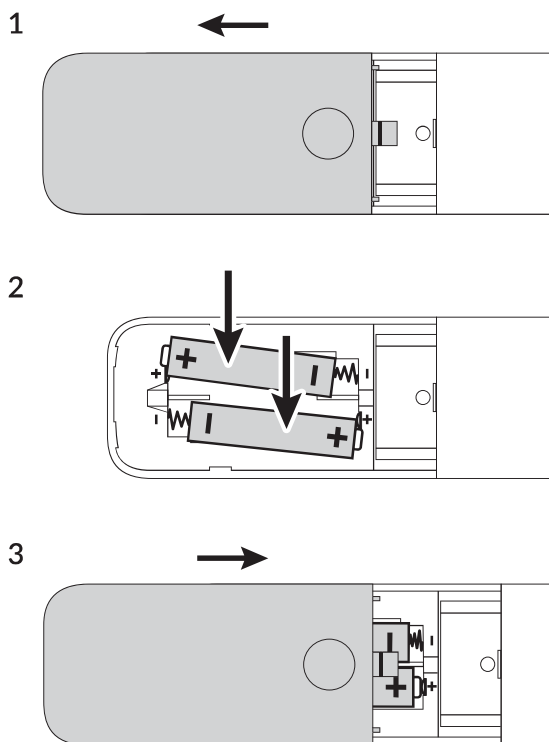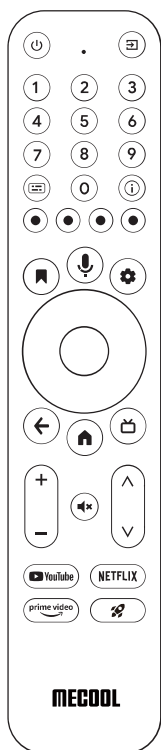

NOTE:

Before the begin, locate and insert the 2 AAA batteries into the MECOOL soundbar remote control. (This product is not equipped with AAA batteries, users should prepare by themselves).

 Soundbar placement

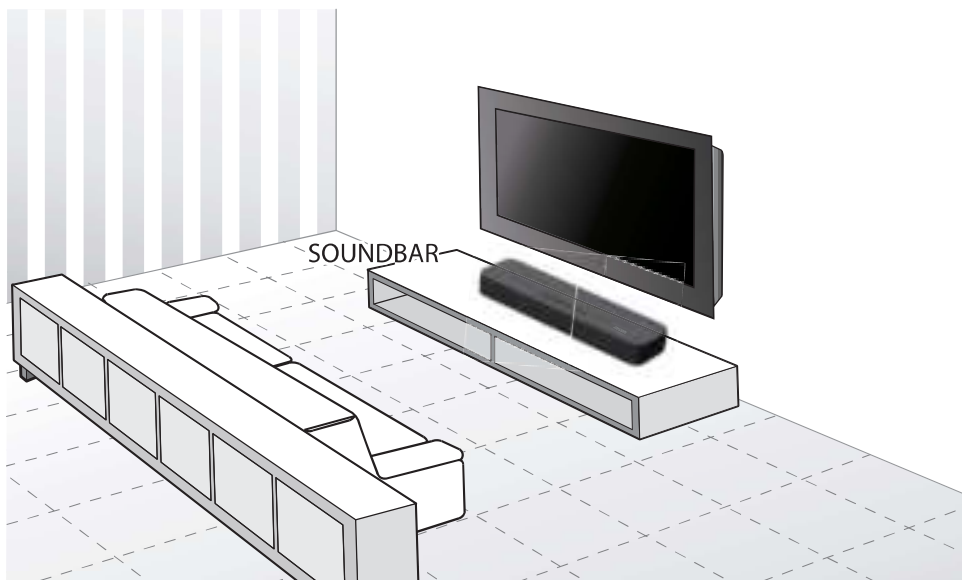

Connections



 
HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.


General Operation




Keep router neat to soundbar.
Make sure Internet is available.



 
Press and hold  +  buttons for 5 seconds to
pair the remote control.
Keep remote control near to soundbar.
The indicator light on the remote control will start
flashing and enter pairing mode.

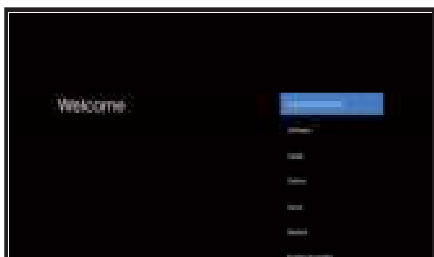

 1. Select language.

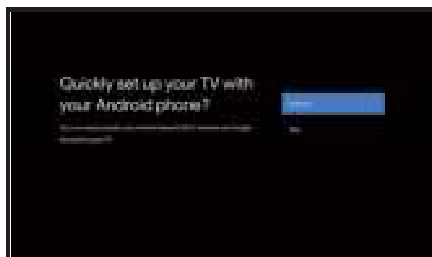

 2. Quickly set up your TV with your Android™ phone.
Or skip the phone settings and set it up via the remote control.

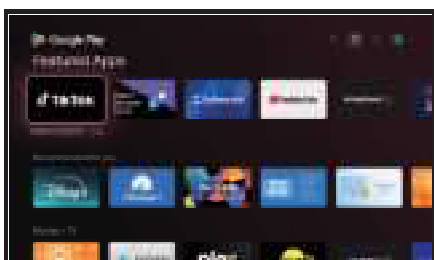

3. Get all the top apps and games on Google Play.



4. In Bluetooth mode, press the Google Assistant button on your remote to talk to Google.

Frequency band

Wi-Fi 2.4G: 2412MHz-2472MHz

Wi-Fi 5G:

band1 5150MHz-5250MHz

band2 5250MHz -5350MHz

band3 5470MHz-5725MHz

band4 5725MHz-5850MHz

Extension: 5.8G 5729~5820MHz CH1-CH47

	AT	BE	BG	CH	CY	CZ	DE
	DK	EE	EL	ES	FI	FR	HR
	HU	IE	IS	IT	LI	LT	LV
	LU	MT	NL	NO	PL	PT	RO
	SE	SI	SK	TR	UK(NI)		

Soundbar RMS 37W, Pomax 60W

Specifications

Model	KS3
Input voltage	18V \approx 2.5A
Speaker Output Power	40W
THD	\leq 1% @1W
Core	Amlogic S905X4 Quad A55
Wi-Fi	802.11ac 2x2 + BT5
Weight	2060g
Weight	L490*W128*H60mm
Extension	1 Subwoofer & 2 Surround Speakers (The extension part is optional)

Features and specifications are subject to change without prior notice.

FAQs



Manufacturer: Videostrong Technology Co.,Ltd

Address: 604, Lushi industrial building, 28 district, Ban'an district. ShenZhen. China

Importer: Stunning Evolution Unipessoal

Address: R. Particular da Estrada Nova 48, 4435-378 Rio Tinto, Portugal

