



ANC-834C Hybrid Active Noise Cancellation Earbuds User Guide

## CONTENTS

01-07 08-14 15-21 22-28 29-35 36-42

English


Français

日本語

Español

Italiano

Deutsch

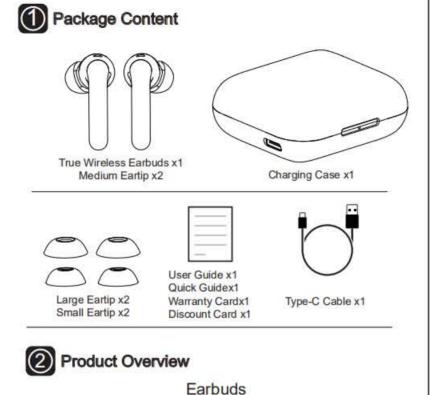


Tuning hole

Metal Charging

Multifunctional Touchpad

Noise Cancellation MIC


# **Charging Case**

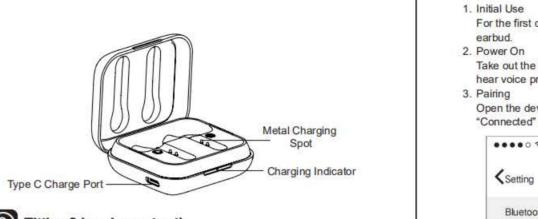




- 1. Select earlips of the most fitting size provided (large, medium, small).
- 2. Please install the fitting eartips on the earphone
- Pick up the earbud accordingly(R/L). Rotating as the arrow shows to get a better fit and better noise reduction

experience.

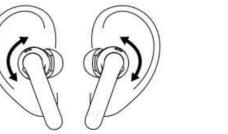

### 4 Instruction

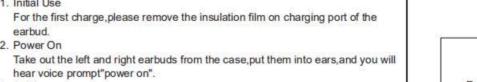

Open the device's Bluetooth to search" Coumi Ear Mate Pro" and hear the

"Connected" sound after confirm to connect.



\*The both(R/L) earbuds can be used separately.

\*The earbuds will automatically connect to device.

#### Technical Specification Item Number: ANC-834C

Bluetooth Version: 5.1 Earbuds:5V/30mA BT Profiles: HFP/HSP/A2DP/AVRCP/SPP/PBAP Charging case:5V/600mA Wireless Range: 360°10m Battery type: Lithium ion battery Playtime: ANC ON 3H, ANC OFF 5H Earbuds: 3.7V/35mAh Playtime with charging case: Charging case:3.7V/720mAh

ANC ON 18H, ANC OFF 30H Frequency response: 20Hz-20KHz Sensitivity: 97±3dB

Charging Parameter:

Due to different systems, audio formats personal usage habits (such as volume) of mobile phones and other devices, the battery life may vary for the specific


Charging time: About 1.7H

Battery Life:



#### Earbuds Operation Guide

Right Ear

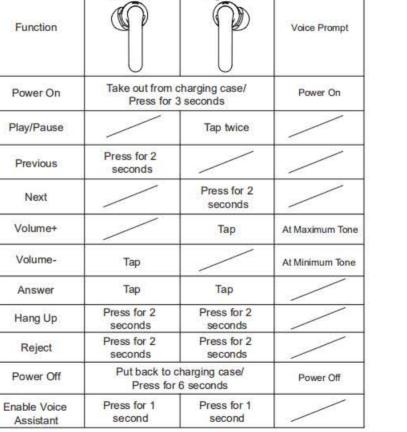

Transparency of

The earbuds do not turn on. Please confirm the earbuds have power left, if not charged please charge up

Unsuccessful Bluetooth Pairing. Make sure that the earbuds are turned on and in pairing state, the pairing

Some Bluetooth devices require a pairing password.

Please enter "00000"

Automatically Re-connect.

When Power on, it will automatically re-connect to the last connected device.

Class B digital device, pursuant to part 15 of the FCC Rules. These limits are How long will it turn off automatically when it doesn't connect?

The earbuds will automatically turn off after 5 mins if it doesn't connect with bluetooth devices.

If the left and right earbud don't sync or connect the phone because the headset is in re-connection mode or other mode, or if you can't find your preferred bluetooth device, you can perform a factory reset: Long press touch panel 15s under turn off states and earphones prompt "Resetting Earphones"

The product name trademark model MICIDandI OGO can be found in the instruction manual and the packaging.

and then power on.

distance is kept within 1m.

Warning!

- 1. Do not remove or modify the earbuds for any reason, otherwise the earbuds may malfunction or burn, electronic breakdown or even completely damage the product.
- 2. This product has built-in electric lithium-ion battery. It is forbidden to disassemble, impact, squeeze or put into fire. If there is serious swelling, please do not continue to use it. 3. Do not place the device in an environment where the temperature is too low or
- too high (below 0 °C or 45 °C or above). 4. Do not use the device during thunderstorms. Thunderstorms can cause the
- device to malfunction and increase the risk of electric shock. NOTE: This equipment has been tested and found to comply with the limits for a

designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver,

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept

any interference received, including interference that may cause undesired operation.

happening around you

Charging Case Indicator

Case on Charge 50%~75%:lashes three times / 75%~99%:flashes four times

00%: lights on 25s then lights off

Earbuds on Charge 25%-50%:slowly flashes twice / 10%-25%:slowly flashes once

10%:double flashes 3 times

Case Fully Charged LED indicators on both earbuds stay white

flashes three times

LED indicator Status

0%~25%:flashes once / 25%~50%:flashes twice

75%-100%:slowly flashes four times / 50%-75% :slowly

The lights last 10s and then goes out when fully

ANC on for

ANC mode

Charging Case Status

Earbuds

Fully Charged charged.

\*ANC: Active Noise Cancellation

Light Indication

FCC ID: 2AG68-ANC-834C