20

# FIG-F31tx



User Manual

TABLE OF CONTENTS
FCC STATEMENT
SAR INFORMATION STATEMENT
WARNINGS
YOUR PHONE
LED NOTIFICATION LIGHT INSTRUCTIONS

F31tx UserManual

WARNINGS	
YOUR PHONE	
LED NOTIFICATION LIGHT INSTRUCTIONS	
KEYPAD INSTUCTIONS4	
START TO USE4	
CHARGE THE BATTERY	

CHARGE THE BATTER MAKE A CALL . ANSWER A CALL EMERGENCY SERVICE ..

CONTACTS.. INPUT METHOD ... CALCULATOR ... CALENDAR.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: correct the interrerence by one or more or ine tollowing measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and received. Connect the equipment into an outlet on a circuit different from that to which the receiver is Consult the dealer or an experienced radio/TV technician for help.

conditions:
(1)This device may not cause harmful interference.

Specific Absorption Rate (SAR) information
This device meets the government's requirements for FCC exposure limits set forth for an
uncontrolled environment. This device was tested for typical body-worn operations with the back of
uncontrolled environment. This device was tested for typical body-worn operations with the back of
requirements, use accessories that maintain an 5 mm separation distance between the user's
body and the back of the mobile phone. The use of belt clips, holsters and smilar accessories
should not contain metallic components in its assembly. The use of accessories that do not satisfy
these requirements may not comply with FCC RF exposure requirements, and should be avoided.

F31tx User Manual

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two

(2)This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INTERFERENCE All wireless phones may be sensitive to interference, which may affect its performance.

TURN OFF IN HOSPITALS
Follow all restrictions. Turn off the phone near medical equipment.

TURN OFF ON AIRCRAFTS Put off the phone before boarding. Wireless devices can cause interference on aircrafts.

Obey all road safety laws. Avoid using phone and concentrate on driving instead.

F31tx UserManual

Warnings
Please follow these simple guidelines to avoid some untoward incidents. Failure to do these may

Do not turn on the phone in areas where it is prohibited or when it may cause interference and

TURN OFF WHEN REFUELING
Do not use the phone near refueling stations or combustible chemicals.

USE SENSIBLY Only qualified personnel may install or repair this product.

ENHANCEMENTS AND BATTERIES

WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

BACKLIP COPIES

It is advisable for you to back-up copies or keep a written record of all important information stored in your phone.

When connecting to any external device, read its user's guide for detailed and safety instructions. Do not connect with incompatible products.

Attenti End key/ Power on/or Camera/ Hands-free End key/ Power on/off T9 Numeric keypad 🖟

F31tx User Manual

2/8

### F31tx User Manual

### LED notification light instructions

Status	Instructions
Blue light flashing	Your phone is charging.
Green light always on	Your phone charging completed.
Red light flashing	Your phone has missed calls.

Note: You can turn on/off the light reminder in Settings - Display - LED notification light.

### Keypad instructions

Kir	In constitute
Power Key	Long press the key to power on the phone. In the power on status, press the key to wake up the screen or hang up the phone; long press the key to power off or Restart.
Sub screen on / off	When the top cover of the phone is closed, the button can wake u $\!\!\!/$ turn off the sub screen
Volume Keys	To adjust incoming call ring tone volume. During a call, playing music press the keys to adjust volume.
Menu Key	In the main interface, you can enter the Apps menu.
Enter Key	When you have selected a program or an option, press it to enter the program or open the option.
Navigation Key	Move the cursor up, down, left and right.
Back Key	Return to the previous menu or directory.
Calculator Key	Calculator app shortcut key
Answer Key	Enter the call history, and answer a call.
End Key	Hang up the calling.
SMS Key	SMS app shortcut key
Camera / Hands-free	In the editing interface, you can delete characters. On the main page, you can enter the camera app Turn off and turn on speaker during cal
T9 Numeric keypad	1-9 numeric keypad and * key and # keys

Start to Use



Install SIM Card and Battery When you apply for a network phone line, you will be given a SIM card. SIM (Subscriber Identity Module)card contains phone number, service menu and can be used to store phone numbers

Do not bend or scratch SIM card and do not let it having contact with static electricity, dust or

Keep all SIM cards where children cannot reach or touch

Keep the SIM card chip contacts face downward. Make the SIM card fits in the card slot.

# Remove SIM Card and Battery

4/8

F31tx User Manual

CLOCK...

 
SETTINGS CAMERA....

CALL HISTORY...

APPLICATION SWITCHER

SHORTCUT KEY USAGE.

CARE AND MAINTENANCE ... ACCESSORIES



- Before charging, check the battery sor to ensure the patient pas been instance correctly.
   Plug one and of the charger introphone.
   Connect another end of the charger to the socket.
   Start charging. The phone charges both in power-on or power-off state.
   In the power-on state, when the battery icon on screen starts scrolling it means phone is charging. When the battery icon became full and stopped it means charging is completed.
- Unplug the charger from the socket.
- Disconnect the charger and phone, Do not plug-in the charge for much longer time other than standard. Else, if may harm the battery.

Answer a Call When there is an incoming call, you can

- In the Contacts, press option key to search contact ,add new contact or enter into settings.
- Press navigation and enter key to select contact
- Edit , delete or set ringtone for contacts

  After enter in contact, press option key to edit, delete or set ringtone for contacts.

# F31tx User Manual

If the phone is turned on, long press Power Key about 3 seconds until it displays phone options and select Power off and, then, press OK to turn off the phone. Then, remove the battery and SIM

- Before charging, check the battery slot to ensure the battery has been installed correctly.

- In the power-off state, when the battery icon on screen starts scrolling it means phone is charging. When the icon became full and stopped it means charging is completed.

- wake a Call

  I in standby mode or in main menu, press numeric keypad. Then dial the desired phone number.

  Press dialing key to dial the number.

  Press End key to cancel the call.
- You can make calls through call log, contacts. During a call, press Volume Keys to adjust the volume.

# Your phone supports intelligent dial. When inputting numbers, the phone will search the corresponding contact in phonebook or call log.

- Press Answer key to answer the call. Press End key to reject the call.

You can call emergency service number directly without SIM card. Different countries use different emergency number, please inguire from your service network operator.

- Select contacts

# Enter in settings, you can choose to display all contacts or customize contacts. Contacts sort by

- In settings, press enter in sort by, you can select contacts sort by First name or Last name. Name format of contacts
  Choose first name first or last name first in name format option.
  Phonetic name
  Select from always show or hide if empty.
- Import/Export
  Copy the contacts from SIM cards, phone storage. Then, select location to copy.
- Block numbers Under settings, enter in block number, set your pattern to block numbers.

### Input Method

Your phone has the built-in input method, in edit mode.

Press the keyboard to input characters using the T9 keyboard. And press # to switch between different input methods.

The calculator can execute simple and science calculations. By pressing the number on the keyboard, you can enter the and calculate the result.

In the calendar, you can check schedules for current month. it has alarm for the date with schedule. Select a date to check all schedules for that day. You can edit or delete the schedules.

In the clock interface, you can check time and date. Press the alarm icon. You can change or add new alarm or turn on/off existing alarm clocks In the clock interface, you can also press the key to enter count down function, stop watch, choose city, night mode, and settings.

### Call History

in the call history interface, you can view outgoing calls, incoming calls, and missed calls.

# Settings

- Networks & internet
  In this menu, you can select and set SIM management, Wi-Fi, Airplane mode, VPN, Mobile
- In this menu, you can set Bluetooth, pair with new device, send or receive files like contact list or images from other device
- In this menu, you can check the battery usage, set the power saving mode and display the
- In this menu, you can adjust the media playback volume, call volume, ringing tone and notification volume, alarm volume, vibration mode, Do Not Disturb mode, mobile phone ringing tone and other alert tones
- Display
  In this menu, you can set the brightness, theme color, eye protection mode, automatic backlight brightness switch, wallpaper, screen off time, screen rotation, and font size of the phone screen.

  Schedule power on & off
- In this menu, you can set up a schedule for power on & off. Accessibility The accessibility menu is the place to control device features like Text and display, extra dim. dark theme etc., on specifically made to interact with people to get the most out of their phone.

6/8

# F31tx UserManual

- Security
  In this menu, you can set screen lock, device admin apps, SIM card lock, encryption and
- credentials, etc.
  Passwords & accounts
- This menu is for set up and manage your accounts.
- In this menu, you can set language, input method, gesture operation, date and time, backup,
- About phone
  In this menu, you can set the device name, check the phone's SIM card, IMEI number, IP address, software version and other information, and upgrade the firmware through software

By using the camera application, you can take photos or record videos. Press the Camera icon in the main menu. Press the shutter icon or video icon to take photos or record videos. Press the icons on screen or Option Key to set parameters of the camera or recorder.

# Application Switcher

To activate app switcher hold the back key for one second. In the application switcher, you can press menu key to clear all programs running inthe background.

### Shortcut Key Usage

- Turn the flashlight on/off
  Long press the "0" key in the keyboard to quickly turn on/off the flashlight.
  Vibrate/ring switch

# Long press the "#" key in the keyboard to quickly turn vibration mode or Silent mode on/off. Care and Maintenance

- Battery Care Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifespan of the battery, consume first the power befor
- recharging.

  When not in-use for longer time, take out the battery from the phone.

  Do not leave your phone charging for longer period other than specified. Overcharging may shorten its illespan and may damage the battery.

  Extreme temperatures can affect the performance of thebattery.
- Use the battery only for its intended purpose. Never use any charger or battery that is
- Use the battery only for its intended purpose. Never use any charger or battery that is
  damaged.
   Do not short-circuit the battery. Accidental short-circuiting occurs when a metallic object such
  as coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of
  the battery. (These look like metal strips on the battery.) Short-circuiting the terminals may
  damage the battery or the connecting object.
   Leaving the battery in hot or cold places, such as in a closed car in summer or a freeze in
  winder another will object with open control of the lighting of the object of them of the processing of the lighting of the object of them of the processing of the lighting of the object of them of the processing of the lighting of the object of them of the price of the object.
- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and filelitien of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.
   Battery performance is particularly limited in temperatures below freezing.
   Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Cell phones are not considered household waste.

- access priorie mainteriance
  Keep the device dry. Precipitation, humidity, and all types of liquid intrusions or
  moisture may contain minerals that will corrode the electronic circuits. If your device
  is wet, remove the battery and allow the device to dry completely before using it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components may be damaged.

# F31tx User Manual

- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage its electronic circuits.
   Do not attempt to open the device other than as instructed in this guide. Only authorized
- technician can open and repair the device.
- Do not drop, knock or shake the device. Rough handling can break internal circuit and
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
   Do not paint the device. Paint can clog the moving parts and prevent proper operation.
   Use only the supplied or approved antenna. Unauthorized antenna, modifications, or attachments may damage the device and violates regulations governing radio devices.
- We advise you to follow above instructions and precautionary measures. Please take your phone to the nearest authorized service center when it does not operate normally.

# Caution: The manufacturer assumes no responsibility for the consequences as a result of the users non compliance of the above instructions, Phone misuse voids its warranty.

- Please use accessories in the package or those which are authorized by the Company. Else. using non-authorized accessories voids the warranty of unit. Mobile phone\*1 Lithium Battery \* 1
- Data cable \* 1
   User manual \* 1

# Technical Information

- Weight: 142g Size: 108\*56\*19.9mm
- Battery capacity: 1600mAh Main Screen size:2.8 inch.480\*640 Pixels Sub Screen size: 2.0 inch. 240\*320 Pixels
- Memory size:3GB+32GB
- Networks: GSM: B2/B3/B5/B8 WCDMA: B1/B2/B4/B5 4G: B1/B2/B3/B4/B5/B7/B8/B12/B13/B17/B20/B28AB/B66/B71
- The actual situation of the phone usage is related to local environment, SIM card and way of

Note:
The company reserves the right to revise the content of this User Manual without prior.
The company has the final interpretation of the user manual.
The pictures in this User's Manual serves only as reference, please use your actual phone as the

8/8