

Let's get started.

Quick Start

1. Make sure your Ring Alarm is disarmed.
2. In the Ring app, tap **Set Up a Device** and find the **Contact Sensor** in the **Security Devices** menu.
3. Follow the in-app instructions to complete setup.

Installation


1. Install the sensor and magnet on a door or window and frame.
2. Clean the area before you peel the backing and stick on the sensor and magnet.
3. Make sure there is no more than 1 inch (25.4 mm) between the sensor and magnet when the door or window is closed.

If you're using the Contact Sensor on a door you use often, choose **Main Door** as the placement option. Main doors have **Entry** and **Exit** Delays to prevent you from accidentally triggering the alarm.

ring

For additional help, visit:
ring.com/help

Spacing

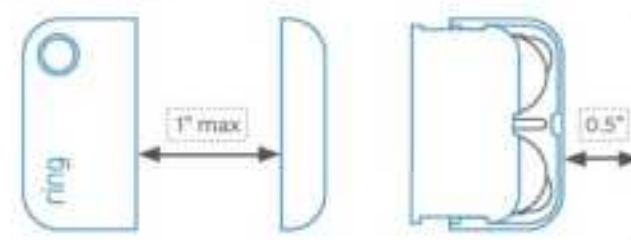

Ensure no more than 1 inch (25.4 mm) between sensor and magnet when the door or window is closed.

Leave at least a 1/2 inch (12.7 mm) space so you can open the battery compartment.

Placement



©2015 Ring LLC or its affiliates. Ring and all related marks are trademarks of Ring LLC or its affiliates.

For Z-Wave technical information, visit ring.com/z-wave.

ZS-0000612-03