



- USER MANUAL -

Item in this package


Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- ☐ Turntable
- ☐ 45 RPM adapter(attach on the turntable)
- ☐ Power adaptor
- ☐ Audio Cable
- ☐ Long Leg
- ☐ Rubber Feet

Specifications

Power	DC 6V 1.5 A
Power consumption	9 W
Output Power	8 W
Turntable speed	33 $\frac{1}{3}$, 45, 78 RPM

Product Description

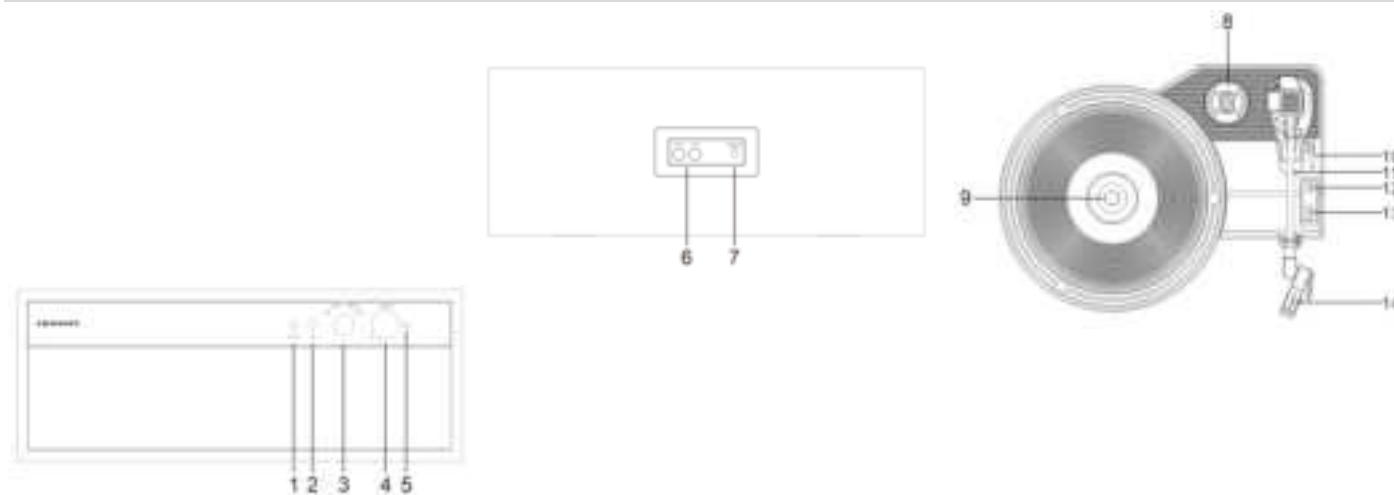

- | | | |
|-----------------------|-----------------|----------------------|
| 1. AUX IN Jack | 6. RCA Jack | 8. 45 RPM Adapter |
| 2. Headphone Jack | 7. Power Supply | 9. Turntable Platter |
| 3. Function Knob | | 10. Tonearm Lever |
| 4. On/Off-Volume Knob | | 11. Tonearm |
| 5. LED Indicator | | 12. Auto-stop Switch |
| | | 13. Speed Switch |
| | | 14. Needles |

General Operation

Essential Setup

1. Install the long legs/short feet to brackets at the bottom of the unit properly. Make sure the unit stands firmly.
2. Place the speakers on a flat and level surface. The selected location should be stable and free from vibration.
3. Plug the power cord to unit firstly and then plug the adapter to wall power outlet.
4. Rotate the On/Off-Volume knob on the unit to the turn on and off.

Bluetooth In Operation

1. Rotate the Mode knob to the **Bluetooth IN** “ ” Bluetooth In mode, the mode indicator will be blue and flashing.
2. Turn on the Bluetooth feature of your audio device, search for “CROSLEY CR6236A” and pair.
3. Once your device is successfully connected with the speakers, you will hear a short confirmation sound from the speakers and function indicator will be solid blue.
4. Play and stream music from your device to the speakers.

AUX IN Operation

Rotate the function knob to AUX IN mode, the mode indicator will be Red and Blue. Connect one end of a 3.5 mm audio cable(not supplied) to speaker’s AUX INPUT jack, then connect the other end to the output jack of your audio device(such as Mobile phone/MP3 Player).

Turntable Operation

1. Rotate the knob to the PHONO mode. The mode indicator will be Red.
2. Select the desired speed (33 $\frac{1}{3}$, 45, 78) and place the record on the platter.
(Remark: When playing a 45 RPM record, please use the 45 RPM adapter.)
3. Remove the stylus protector from the stylus. Release the tone arm from the tone arm clip.
4. Use the tonearm lever to raise the tonearm. Move the tonearm gently to desired position over the record. Push the lift lever again to descend the tonearm slowly onto the desired position on the record to start playing.
5. When the record is finished playback, push the tonearm lever again to lift up the tonearm. And return the tonearm to the arm rest. Use the tonearm lever to descend the tonearm.

Remark:

1. When the Auto stop switch is “ON”, the record will stop automatically when finished. When the Auto stop switch is “OFF”, the record will not stop automatically when finished.
2. Do not touch the stylus tip by fingers.

Bluetooth Out Operation

This function can transmit the record playing on the unit to external Bluetooth speaker/headphone by Bluetooth wireless connection.

1. Rotate the Mode knob to the **Bluetooth OUT** “ ” Bluetooth Out position, the mode indicator will be blue and flashing.
2. Turn on the external Bluetooth receiver device (i.e Bluetooth Speaker or Bluetooth Headphone) and entering the pairing mode.
3. The turntable unit and external Bluetooth receiver will connect automatically. This process can take up to approx. 30-45 seconds. (Remark: Place the Bluetooth receiver device within 1m of the unit to connect properly.)
4. Once turntable unit is successfully connected with the external Bluetooth speakers, you will hear a short confirmation sound from the speakers and function indicator will be solid blue.
5. Select the desired speed (33 $\frac{1}{3}$, 45, 78) and place the record on the platter. The music will be heard from the external Bluetooth speaker/headphone.

Remark: “Bluetooth Out” only work with record playback. “Bluetooth Out” cannot work in Bluetooth IN or Aux In function mode.

RCA Out Operation

This unit can be connected with external device(i.e. amplifier and speaker) by RCA out jack at rear cabinet.

Headphone Operation

This unit can be connected with headphone by 3.5 headphone jack.

Trouble Shooting

Problem	Solution
There is no power	-Power cord is not properly connected. -No power at the power outlet.
There is no sound from the speakers	-The speaker jack is not properly connected.
The speakers could not be connected to my Bluetooth device	-The device's Bluetooth function is not turned on. -The speakers are actively connected to another Bluetooth device.
The turntable speaker stop before the record is finished.	-Adjust the Auto-stop switch to "OFF" position.
In "Bluetooth Out" function, the unit and bluetooth receiver do not connect successfully	-Turn the unit and bluetooth receiver off. Follow the pairing step again from the beginning. -Check whether the turntable unit connect with another bluetooth receiver.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.