

H66 Wireless Earbuds

User Manual




Packing List

- Earbuds
- Charging Case
- USB Charge Cable
- User Manual

Note: The medium size is on the headset.

Product Overview

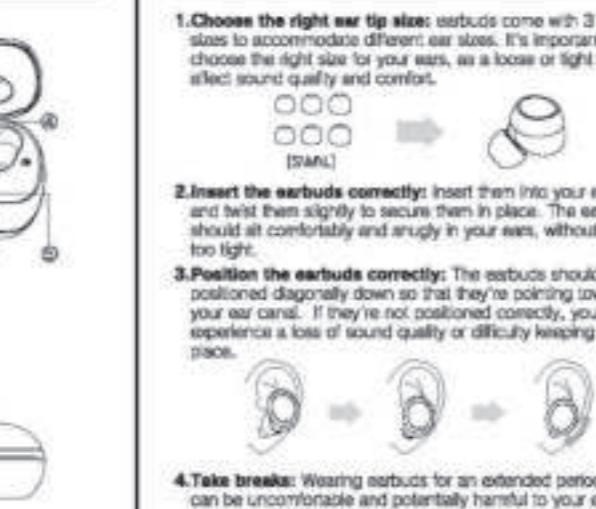

Wear

- Choose the right ear tip size: earbuds come with 3 ear tips to accommodate different ear sizes. It's important to choose the right size for your ears, as a loose or tight fit can affect sound quality and comfort.
- Insert the earbuds correctly: Insert them into your ear canal and twist them slightly to secure them in place. The earbuds should sit comfortably and snugly in your ears, without feeling too tight.
- Position the earbuds correctly: The earbuds should be positioned diagonally down so that they're pointing towards your ear canal. If they're not positioned correctly, you may experience a loss of sound quality or difficulty keeping them in place.
- Take breaks: Wearing earbuds for an extended period of time can be uncomfortable and potentially harmful to your ears. Make sure to take breaks every few hours to give your ears a rest.

Pairing

Stereo mode

- Open the charging case and take the earbuds out of the case. The two earbuds will automatically turn on and connect to each other. The light flashes to wait to connect to your phone.
- Turn on your phone's Bluetooth and search for "H66", then choose "H66". The earbuds will connect to your phone and the light off.

Single Earbud Mode

- Take an earbud (left/right) out of the charging case.
- Turn on your phone's Bluetooth and select "H66". The earbud will connect to your phone.

Power On

Auto Power On

Take out the earphones from the charging case, and they will power on automatically.

Manual Power On

When the earphones are OFF, keep the touch button of both earphones for 3-5 seconds. The led light flashes and with a sound prompt: "power on".

Power Off

Method 1:

The earphones will switch off when put into the charger case.

Method 2:

Keep the touch button of both earphones for 6 seconds, until the LED flashes with a sound prompt: "power off".

Phone Calls Control

Answer/End Call

Double tap the touch button of "Right" or "Left" Earbud".

Volume Up/Down

Long press the "MFB" button of the "Right" or "Left" Earbud".

Reject Call

Long press the touch button of "Right" or "Left" Earbud".

Music

Play/Pause

Short tap the touch button of "Right" or "Left" Earbud".

Next Track

Double tap the touch button of the "Right" Earbud".

Previous Track

Double tap the touch button of the "Left" Earbud".

Activate "Siri"

Triple tap the "MFB" button of "Right" or "Left" Earbud".


Resetting the Earbuds

Five quick tap touch buttons of both earphones at the same time to clear the connection record, five tap on the one is failed.

THANK YOU

Charging

Digital Power Display

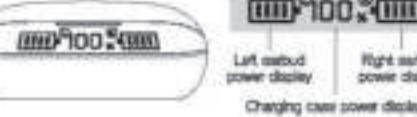

Note:

- Please close case when you put earbuds into the case. Please there is the right position and it not please adjust them tightly until achieving successful charging.
- Power level 10% starts to warn, there will be a voice prompt: "Battery is Low Please Charge" every 20s.

Charging for the Case

Use the type-c charging cable(provided) to connect your computer(with power on) or an adapter(not provided) to your charging case. The charging case power display will be 100% after fully charged.

Note: The type-c port only works for charging the charging case.

Note: Please separate the charging contacts, and mesh of ear tips with an alcohol pad to remove dust or wax that might be affecting charging or sound volume.

Specification

Model:	H66
Version:	V5.3
Operating Mode:	Touch Function
Charging Case Battery Capacity:	1800mAh
Battery capacity:	2*3.7/50mAh
Earphone Charging Time:	About 2H
Charging Case Charging Time:	About 4H
Music playing Time:	About 7H
Supporting Protocols:	HSP/HFP/A2DP/AVRCP
Operating frequency:	2.40 GHz-2.48 GHz
Working temperature range:	-10+50°C
Maximum transmission range:	< 10M

Safety Instruction

- When using while walking, pay close attention to the surrounding traffic. It may cause a traffic accident.
- To protect your ears, do not turn up the volume too much.
- If the product drop into a flammable or liquid such as water, please stop using it and contact the store where you purchased the product or us. If you still continue to use it, it may cause a fire, insulation or electric shock.
- Opening the inside may cause a malfunction or electric shock. Do not touch the inside. In addition, we do not guarantee performance if the inside is modified by people.
- Do not charge it with wet hands or touch the charging port. It may cause electric shock.
- If you feel sick while using this product, please stop using it immediately.
- If you are using a medical device such as a pacemaker, consult your doctor before using it.
- Do not allow small children to use it.
- Host device is a connection between second device and your mobile phone. It is normal status under high power consumption.

If you are often accidentally pressing the button on your wireless earbuds when you try to adjust them, there are a few things you can do to try to avoid accidentally hitting the button:

- Use a different grip - Try adjusting your earbuds with a different grip, if you are using your fingers to adjust them, try using your thumb instead, or vice versa. This might help you avoid accidentally hitting the button.
- Twist the earbuds: earbuds are designed to twist slightly into your ear canal. This can help keep them in place.

If the charging case is not charging the earbuds:

- Make sure your case is fully charged.
- Make sure the earbuds are properly plugged in or the case has enough battery to charge the earbuds.
- Check the charging ports on both the earbuds and the charging case for any debris or damage. Clean the ports with a soft, dry cloth if necessary.

If you're having trouble charging the case, here are some things you can try:

- Charge the earbuds fully before using them.
- Clean the charging contacts, and mesh of ear tips with an alcohol pad to remove dust or wax that might be affecting charging or sound volume.
- Keep the earbuds away from other electronic devices that use radio waves.
- Avoid exposing the earbuds to moisture.

If your earbuds frequently come out of your ear. There are a few things you can try to keep your earbuds in place:

- Check the charging ports on both the charging case and the case for any debris or damage. Clean the ports with a soft, dry cloth if necessary.
- Try using a different power source, such as a different USB port or a wall adapter, to charge the charging case. If the charging

成品尺寸：75*90mm
印刷：单色印黑
材质：105g铜版纸/双胶纸
折叠方式：风琴10折页

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.