


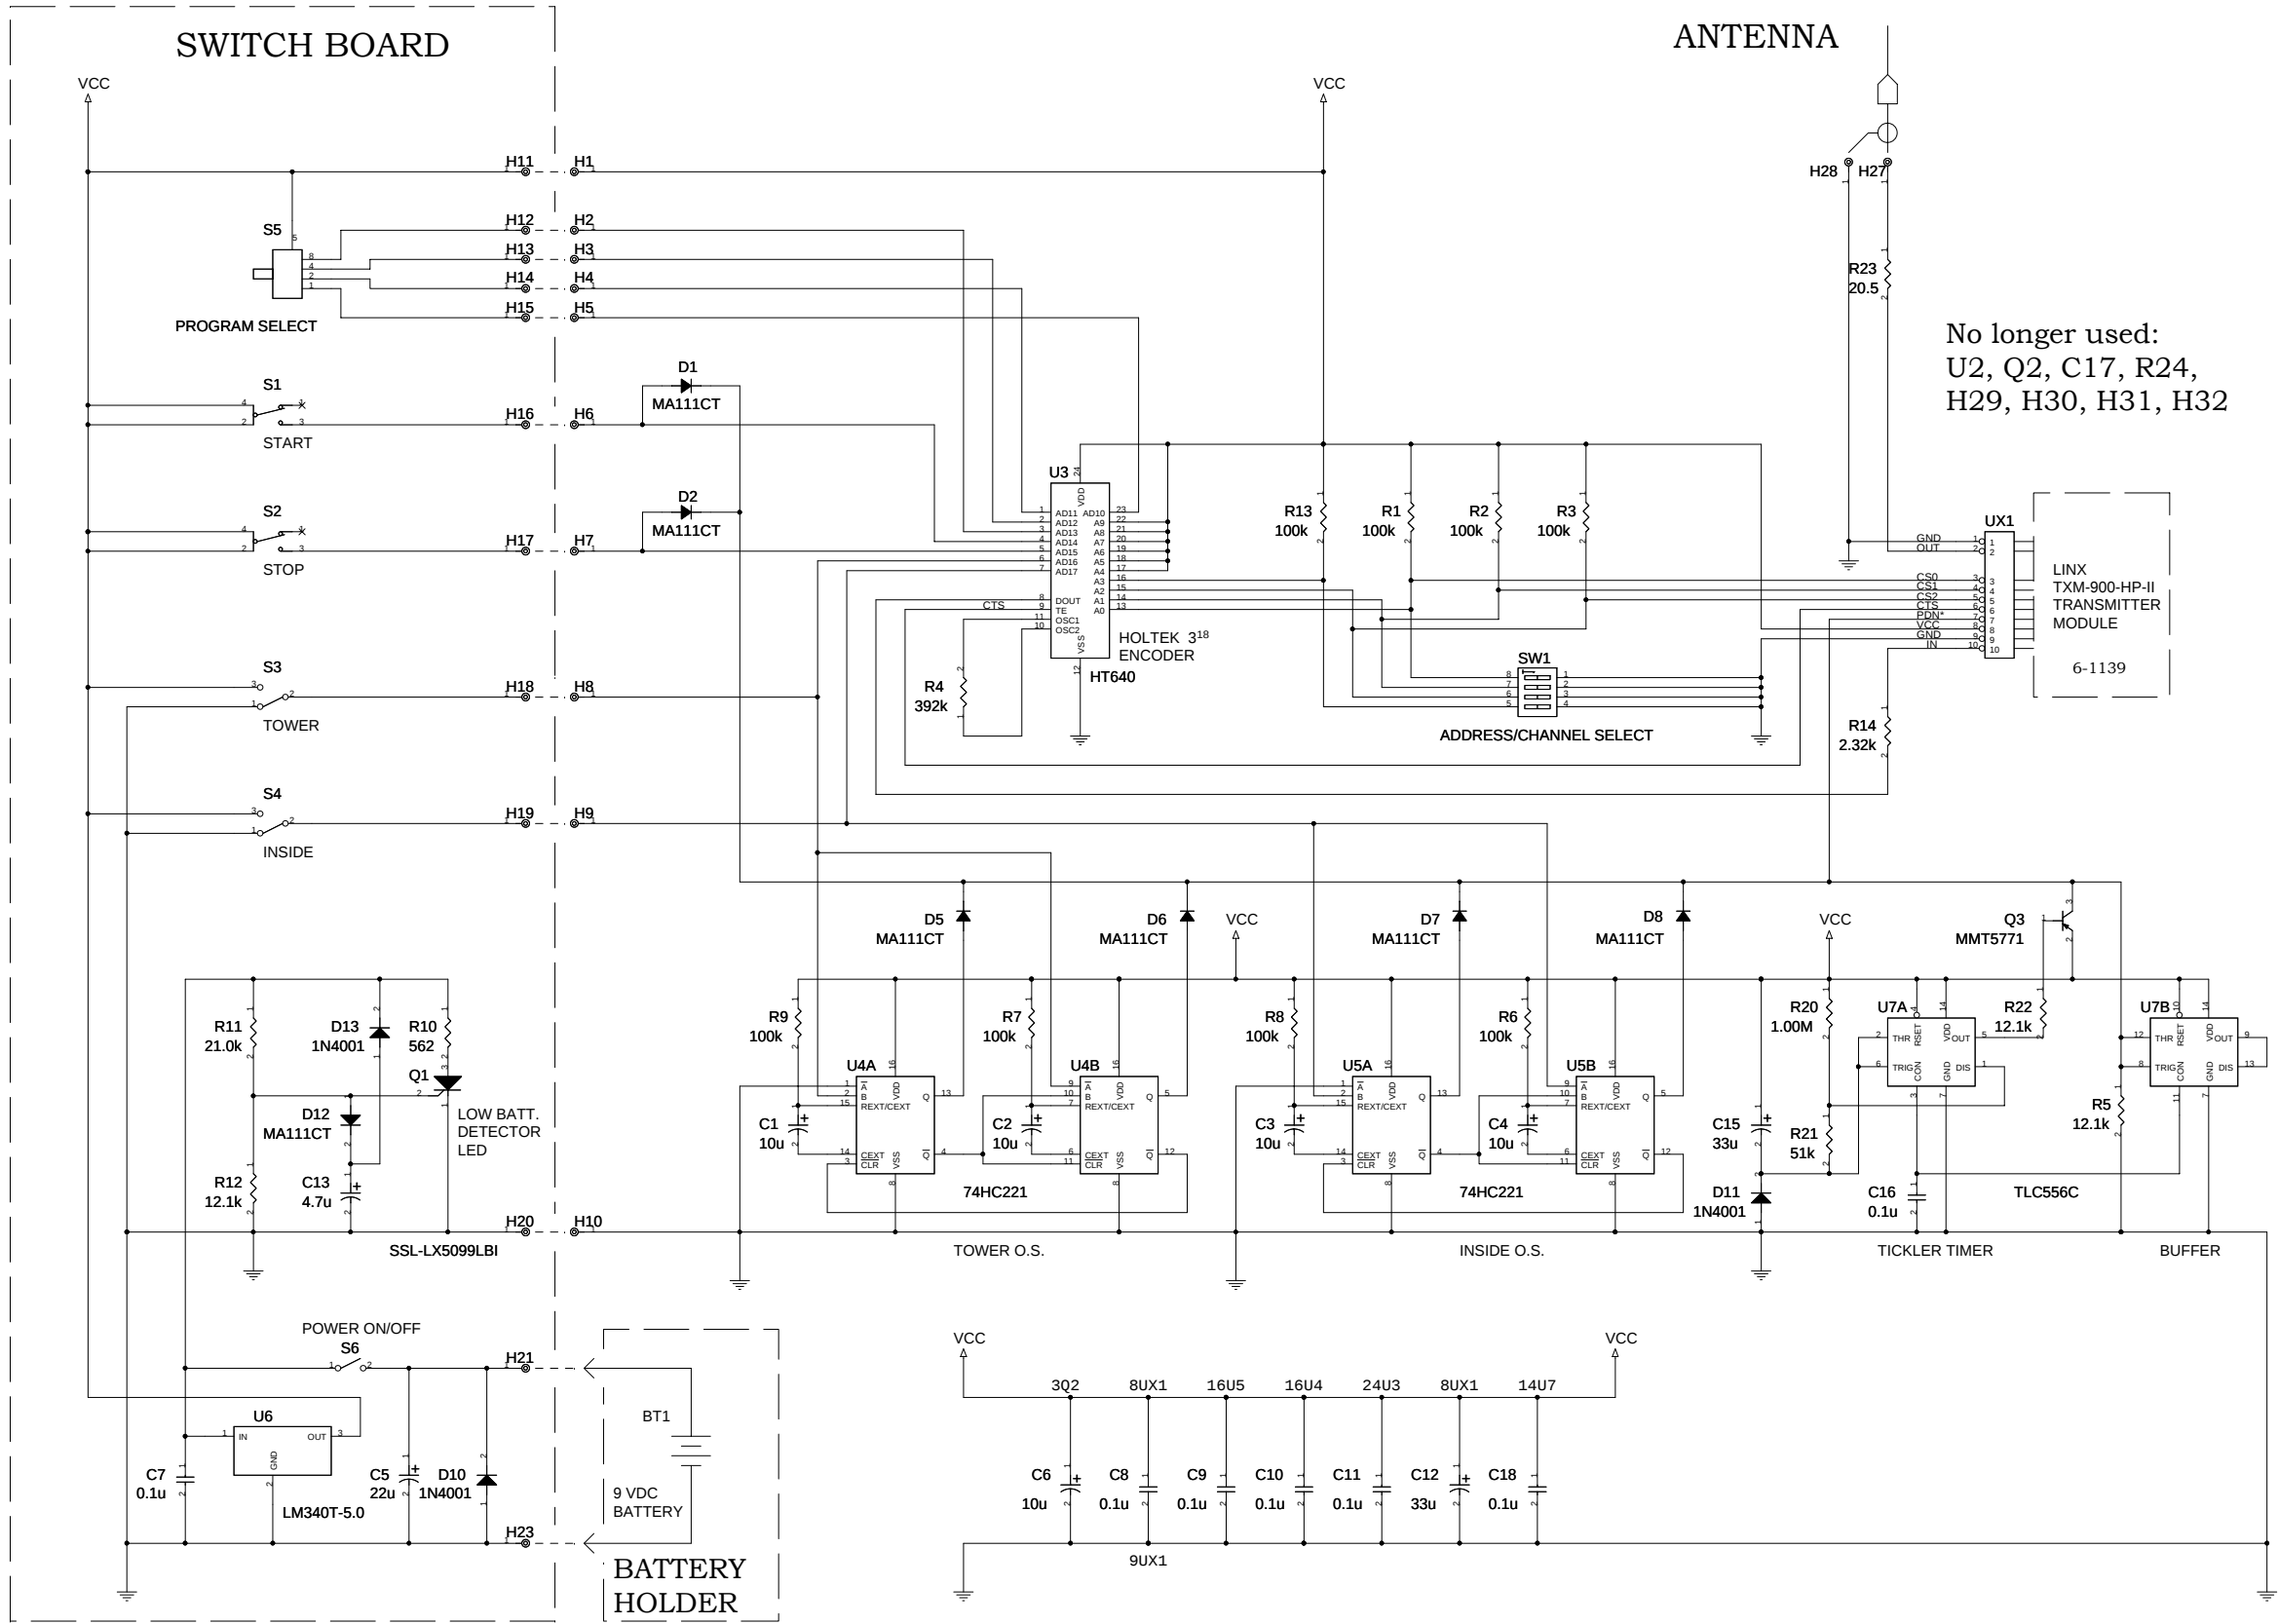

No longer used:  
U2, Q2, C17, R24,  
H29, H30, H31, H32

DIP Switch Settings:

Switches 1 thru 4 select among sixteen different ID codes.  
Switches 1 thru 3 select among eight different frequencies.

DipSwitch Chart

| 1   | 2   | 3   | MHz    |
|-----|-----|-----|--------|
| ON  | ON  | ON  | 903.37 |
| OFF | ON  | ON  | 906.37 |
| ON  | OFF | ON  | 907.87 |
| OFF | OFF | ON  | 909.37 |
| ON  | ON  | OFF | 912.37 |
| OFF | ON  | OFF | 915.37 |
| ON  | OFF | OFF | 919.87 |
| OFF | OFF | OFF | 921.37 |