




Product Introduction

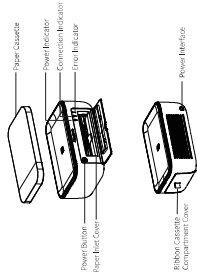

 
Accessories




21

Power On

- Connect power supply
Plug one end of the power cord into the printer's power interface, and then plug the other end into a power outlet.



 
- Power on
Hold down the power button for 3 seconds to turn on the printer.



22

Ribbon Cassette Loading

- Open the ribbon cassette compartment cover
- Insert the ribbon cassette
Hold the ribbon cassette by the top edge, and insert it into the ribbon cassette compartment in the direction of the arrow marked on the cassette, until "beep" is heard that it is in place.

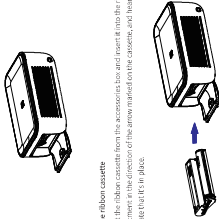

- Close the ribbon cassette compartment cover



23

Photo Paper Loading

- Open the paper cassette
Gently lift up and remove the paper cassette above the printer. Pull out part (B) and flip it down, and then lift part (C) cover upward.



- Load photo paper
Take out the photo paper from the accessories box, and load it in the paper cassette with glossy side facing up.



- Close the paper cover

 


* When the paper is loaded, the printer will automatically start printing. Do not touch the glossy side to prevent the print effect, except for the non-printable area.


24

Paper Cassette Loading

- Open the paper inlet cover



 - Load the paper cassette into the printer in the direction shown below



- Load the paper cassette into place

 
The paper cassette slides about 2 cm into the slot, and hear a "click" to indicate that it's in place.



25

Ribbon Cassette Replacing

- Open the ribbon cassette compartment cover
- Remove the old ribbon cassette
The old ribbon cassette will pop up automatically. Remove this old ribbon.
- Load the new ribbon cassette into place until hear a "click" sound, and then close the compartment cover.



26

Notes

All the drawings of product and accessories in the manual are for reference only. Due to the printing and engraving of the product, there may be some differences between the actual product and the drawings; please refer to the actual product. For more product information, please contact HP's customer service.

CP4100 Photo Printer

Product Name: Photo Printer	Dimensions: 260*187*78 mm
Product Model: CP4100A	Weight: About 2.0 kg (4.4 lb, approximate)
Print Size: A4	Operating Temperature: 5°C~40°C
Model Connection: USB, IEEE 802.11b/g/n 2.4 GHz	
Manufacturer: Hewlett-Packard Development Company, L.P.	
Address: 101, Rongguang Road, Tongcheng 201202, Shanghai, China 201208	
Web: www.hp.com	
Email: support@hp.com	

Power Button Operation

- Turn on the printer. Hold down the power button for 3 seconds, then the white power indicator is lit.
- Turn off the printer. Hold down the power button for 3 seconds, then the power indicator will be off.
- When the power indicator is lit, the printer is in the standby state. Hold down the power button for 5 seconds, and then the white connection indicator will flash quickly. Release the button, the printer network has been reset.

LED Indicator Definitions

Power Indicator	
Color	Power state
Green	Power on
White light	Power standby
Flashing green	Power standby

Connection Indicator	
Color	Connection status
Green	Connect status successful
White light	Not in sleep
Flashing green	Connect status successful
Flashing white	Connect status failed

Print Indicator	
Color	Print status
Flashing green	Printing on
Flashing white	Not in sleep
Flashing green	Print status successful
Flashing white	Print status failed

Printing from Mobile Phone

- APP Download
Scan the QR code to download the app.
- Connect to printer in Wi-Fi mode
1. Open Wi-Fi function, click "Add device" and "Connect" with "CP4100K000".
2. Click "Connect to printer" and "Connect" with "CP4100K000". (Note: We are not connected to the Wi-Fi network by the printer.)
- Connect to printer in USB mode
1. Connect the mobile phone to a USB (supported) host. See 4.2.4.2.
2. Open the USB function, click "Add device" and "Connect" with "CP4100K000". (Note: We are not connected to the USB network by the printer.)
- Print
1. Click "Share" or "Home" to share the photos you want to print and adjust the preview.
2. Click "Print" to print it.



Operating Environment

1. Please place the printer on a desktop or other flat and stable surface for use.
2. When printing, the photo paper will move back and forth. Please ensure that there is more than 40 cm space behind the printer.

Precautions

1. The best operating temperature is 5°C-35°C. If the environmental temperature is too high, the print quality may be affected.
2. Please use official color calibration and photo paper to ensure the print quality.
3. Do not touch the film of ribbon and the glossy side of photo paper in case of polluting them, this may affect the print quality.
4. Do not pull out the photo paper by force during printing, this may damage the printer.
5. When not in use for a long time, please remove the paper cassette and close the covers of it and the printer to keep things like dust out.
6. Operating this device may cause radio interference in a residential environment.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to the 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC part 15 exposure guidelines, this equipment should be installed and operated with minimum distance between the station and your body. Use only the supplied antenna.

FCC ID: 264714-HS23A

