

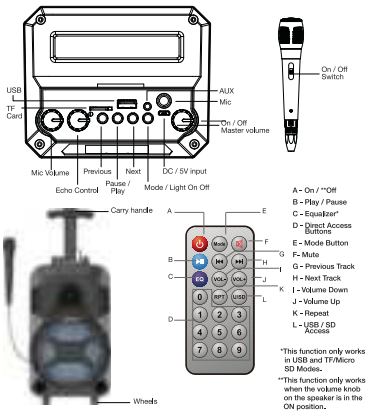


| | | | | |
|--|---|--|--|--|
| <div data-bbox="49 252 472 783"> <h2>Megabass LED Jobsite Speaker</h2>   </div> | <div data-bbox="472 252 891 783"> <h3>Introduction & Features</h3> <p>The Megabass Speaker is your new reliable speaker that you can use anywhere! It's a great way to get your music heard, whether you're at the beach or an indoor party. Equipped with a subwoofer, trolley wheels for easy portability, and a wired microphone—the Megabass Speaker is great for almost any occasion! Additional features include Bluetooth functionality, a 3.5mm AUX jack, a MicroSD card slot, USB support, and FM radio.</p> <h3>Package Contents:</h3> <ul style="list-style-type: none"> • BT Speaker • Charging cable • Remote control • Wired Mic • Aux Cable • User guide </div> | <div data-bbox="891 252 1312 783"> <h3>Product Overview & Functions</h3>  <p>Labels in diagram: USB, TF Card, Mic Volume, Previous, Next, Echo Control, DC / 5V Input, Mode / Light On Off, AUX, Mic, On / Off Master volume, Carry handle, Wheels, On / Off Switch.</p> <p>Legend:</p> <ul style="list-style-type: none"> A - On / "Off" B - Play / Pause C - Equalizer* D - Direct Access Buttons E - Mode Button F - Mode G - Previous Track H - Next Track I - Volume Down J - Volume Up K - Repeat L - USB / SD Access <p>*This function only works in USB and TF/Micro SD Modes. **This function only works when the volume knob on the speaker is in the ON position.</p> </div> | <div data-bbox="1312 252 1731 783"> <h3>Charging the Speaker</h3> <p>The speaker has an internal rechargeable battery.</p> <ul style="list-style-type: none"> • The battery must be charged prior to use. • Charging time is approximately 3-4 hours. • When charging, the power indicator will light up red. • When the speaker is fully charged, the indicator light will turn off. • To charge the speaker, plug the Micro-USB cable into the Micro-USB port and the other end into a USB power source. • Note: When the speaker detects that the built-in battery voltage is low, it will emit a low power alarm. When the battery level is critically low, it will automatically shut down. <h3>Pairing Devices to the Speaker</h3> <ul style="list-style-type: none"> • Make sure that the Bluetooth function is available on your device. • Specific pairing procedures will differ depending on device. • Turn on the speaker by turning the volume control knob. • Keep the distance between the cell phone and the speaker within 3 feet for pairing only. </div> | <div data-bbox="1731 252 2157 783"> <h3>Pairing Devices to the Speaker (Cont.)</h3> <ul style="list-style-type: none"> • Activate the Bluetooth function on your device and search for available devices. • Select "Tzumi Mega Bass" from devices list and follow prompts to finish the pairing process. • After successfully pairing, a tone will sound. • Once paired, open a music app of your choice and enjoy. • Adjust the volume on the back of the speaker or via the wireless remote. <p>Note: After successfully pairing, devices will remember each other. No pairing will be needed next time.</p> <h3>How to Play Music using the TF/MicroSD cards</h3> <p>TF/MicroSD Card Mode</p> <ul style="list-style-type: none"> • When the speaker detects a MicroSD card, it will automatically enter card mode. • Simply load your MicroSD card with your favorite music, insert it in the MicroSD card slot, and the music will start playing. • The display shows the playback time and pause symbol when paused. </div> |
| <div data-bbox="49 804 472 1335"> <h3>How to Play Music using AUX Mode and FM Mode</h3> <p>AUX Mode</p> <ul style="list-style-type: none"> • When connecting a device via the AUX jack, the speaker will automatically detect it and enter AUX Mode. • An AUX input plug allows you to play music/audio from any phone or computer. • Plug one end of the 3.5mm audio cable into the speaker AUX jack and connect the other end to a phone or computer. • Press the play/pause to play or pause music. <p>FM Mode</p> <ul style="list-style-type: none"> • Press the mode button to switch to FM Mode. • The FM frequency range is from 87.5 MHz -108.0 MHz. • Press and hold the Play/Pause button to automatically search and save stations. • Press the backward/forward button to select a station. • The speaker has an internal antenna, you don't need an external one. </div> | <div data-bbox="472 804 891 1335"> <h3>Controlling the Speaker Lights</h3> <p>Press and hold the mode/light button to turn the speaker lights ON/OFF.</p> <h3>Troubleshooting</h3> <ul style="list-style-type: none"> • The music will not play from MicroSD card. Make sure the music is in MP3 format and that the SD card is formatted prior to use. • Can't turn the speaker on. Check if the battery charge level is low. • There is poor FM reception. Try moving the unit to another location. • Can't see the USB, TF, AUX mode on display. USB, TF and AUX Mode are only displayed when there is a USB, TF, or AUX inserted. <h3>Using the included Mic</h3> <ul style="list-style-type: none"> • Plug it in Turn it on by flipping the ON/OFF switch. Adjust echo and mic volume on back of speaker. </div> | <div data-bbox="891 804 1312 1335"> <h3>Specifications</h3> <p>Speaker Type: 8" subwoofer + 2" tweeter Output Power: 20W Bluetooth Version: 5.0 Signal to Noise Ratio: 85dB Battery: 1800 mAh Play Time: Up to 3 Hours Display: LED Display Connections: Bluetooth/MicroSD/USB/FM/AUX Measurements: 17.5 x 10 x 9.2 in. (44.5 x 25.5 x 23.5 cm) Weight: 5.45 lbs.</p> <h3>Battery Disposal</h3> <p>This product contains a lithium polymer battery. Lithium polymer batteries are environmentally safe when fully discharged. You cannot dispose of this product along with household waste. It must be disposed of safely at a hazardous waste collection site, recycling facility, or an electronic retailer that recycles. Check your local or state laws for disposal procedures.</p> </div> | <div data-bbox="1312 804 1731 1335"> <h3>Safeguards:</h3> <ul style="list-style-type: none"> • Do not use this unit for anything other than its intended use. • Keep the unit away from heat source, direct sunlight, humidity, water, or any other liquid. • Do not expose the device to extremely high or low temperatures as it may damage the battery. • Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit. • Do not use the unit if it has been dropped or damaged in any way. • Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk. • Keep the unit out of reach of children. • This unit is not a toy. <p>If you have any other questions or issues with product use and/or care, please contact tzumi Technical Support at: support@tzumi.com or 1-855-60-TZUMI.</p> </div> | <div data-bbox="1731 804 2157 1335"> <h3>FCC Warning:</h3> <p>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules and industry Canada license-exempt RSS standard (s). Operation is subject to the following two conditions:</p> <ol style="list-style-type: none"> (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p>NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE. PURSUANT TO PART 15 OF THE FCC RULES, THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION, THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION, IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:</p> <ul style="list-style-type: none"> • REORIENT OR RELOCATE THE RECEIVING ANTENNA. • INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER. • CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED. • CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP <p><small>Megabass Jobsite Speaker. Distributed by Tzumi Inc. NY, NY. ©Copyright 2022 Tzumi. All Rights Reserved. Made in China. All pictures shown are for illustration purposes only. Actual product may vary due to product enhancement. Other trademarks and trade names on this package are those of their respective owners. Subject to change without prior notice.</small></p> </div> |