




HEADRUSH®

TRUE WIRELESS
EARBUDS


HRB 5036

INTRODUCTION

Thank you for purchasing the HRB 5036 true wireless earbuds. In order to maximize your listening experience please read the following instructions.

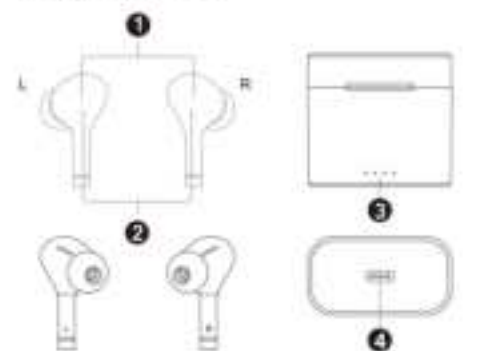

 - 1 MFB (Multi-function button)
- 2 Earbuds LED indicator/microphone
- 3 Charging case LED indicator
- 4 USB-C charging port



WHAT'S INCLUDED

- HRB 5036 earbuds
- Charging case
- Small, medium and large earbud tips
- USB-C charging cable
- Instruction manual

OPERATING INSTRUCTIONS

Prior to first use, remove the plastic battery isolator tab located between the earbuds and the charging case.

TO	DO THIS
Power ON	Take the earbuds out OR press and hold both MFB buttons for 3 seconds.
Power OFF	Place earbuds back in the charging case OR touch and hold both MFB buttons for 5 seconds.
Play/Pause	Touch either MFB button twice.
Next song	Touch and hold the right MFB button.
Previous song	Touch and hold the left MFB button.
Answer/end a call	Touch either MFB button twice.
Reject an incoming call	Touch and hold either MFB button for one second.
Voice assistant	Touch either MFB button 3 times.
3 EQ modes Standard mode Movie mode with more bass Gaming mode with more treble	Press either MFB button 4 times to move between these modes. NOTE: EQ level will return to standard mode every time the earbuds are turned off or returned to the charging case.

NOTE: The function compatibility may vary among different smartphones or devices. Not all functions are available on all devices.

CHARGING THE CASE

Use the included charging cable to fully charge the case before first use. It will take approximately 2.5 hours to fully charge.

- The blue LEDs will flash while the case is charging (and then stay ON depending on the case charge)
- The 4 blue LEDs will turn ON after the case has charged and then turn OFF



CHARGING THE EARBUDS

The earbuds will automatically power OFF and begin charging when they are placed in the charging case. The white LED will turn ON to indicate the earbuds are charging and turn OFF when charging is complete. It will take approximately 1.5 hours to fully charge the earbuds. The earbuds can be charged 3 times using a fully charged case. When the earbuds are in the case fully charged and the case lid is opened, the earbud LEDs will light for approximately 10 seconds and then turn OFF.

NOTE: During use, the white LED will flash twice and the earbuds will beep once to indicate the battery level is low. Please charge the earbuds.

PAIRING

The earbuds will automatically enter Bluetooth® pairing mode when used for the first time. The left and right earbuds will automatically connect to each other.

1. Remove both earbuds from the charging case. The blue LED will flash 3 times to indicate both earbuds have powered ON. Both earbuds will flash blue/white to indicate they are pairing. When one of the earbud's LED flashes blue and white and the other earbud's LED turns OFF, it indicates the earbuds have connected to each other successfully.
2. Select "HRB 5036" from your Bluetooth® device list to pair the earbuds automatically.
3. The white LEDs on both earbuds will be ON for about 4 seconds, then turn OFF. The earbuds will then beep twice to indicate the Bluetooth® device has connected.
4. After initial pairing, the earbuds will automatically connect to your device when turned ON, provided Bluetooth® is ON and your device is within range.

TO USE ONLY THE LEFT OR RIGHT EARBUD

If both earbuds are turned ON and paired to your device, you can return the right or left earbud to the charging case and the earbud (R or L) in your ear will continue to play. To use the right or left earbud

only, remove it from the charging case. It will turn ON and connect automatically to your device.

CLEAR PAIRED MEMORY

If the left and right earbuds do not connect to each other, you will need to reset the earbuds and clear paired memory.

1. Remove "HRB 5036" from your device and turn Bluetooth® OFF on your device.
2. When the white and blue LEDs are ON, press each MFB button 5 times until both LEDs flash 4 times.
3. One earbud will stop flashing while the other will flash white/blue to complete the process.
4. Turn Bluetooth® back ON in your device settings and select "HRB 5036".

OPERATION

- While playing music, touch either MFB button twice to pause, touch twice again to resume
- Touch and hold the right MFB for a second for the next song. Touch and hold the left MFB for the previous song
- The music will pause and the earbuds will ring when there is an incoming call. Touch either MFB button twice to answer the call, touch and hold to reject the call
- Touch and hold either MFB button for 5 seconds. The earbuds will beep and power OFF

To change between the 3 different EQ modes:

- Touch either MFB button 4 times till you hear a beep. This is movie mode with more bass
- Touch either MFB button 4 more times and you will hear another beep. This will be gaming mode with more treble
- Touch either MFB button another 4 times till you hear another beep. This will indicate you have returned to standard mode

NOTE: The EQ level will return to standard mode when the earbuds are turned OFF and then ON again or returned to the charging case. To disconnect from your device while still wearing both earbuds and you are not listening to music or having a phone conversation:

- Touch and hold either MFB button for 5 seconds. The earbuds will beep and power OFF
- NOTE:** Both earbuds will automatically power OFF if no Bluetooth® device is paired after approximately 4 minutes.

WARNING!

- Supervise children when using equipment. This product is not a toy
- Listening to earbuds at high volume levels, particularly over extended periods of time may damage your hearing
- If you have a pacemaker or other electrical medical devices, you should consult your physician before using this product
- The operation of switching on your Hi-Fi system or plugging in the earbuds may cause clicks which at high volume setting may affect your hearing. Therefore, always set the volume control to minimum before switching between different sources (tuner, turntable, CD player, etc.) or plugging in the earbuds
- DO NOT use earbuds while driving or cycling
- The small parts included with this product can be a choking hazard. This product is not intended for use by small children and should be kept away from children under 3 years of age
- If not used for long periods, it is recommended to charge the earbuds and case at least every 3 months
- Please dispose of rechargeable batteries properly. DO NOT dispose of batteries in fire to prevent an explosion

TROUBLESHOOTING

No sound

- Check the volume on your audio device to make sure it is outputting sound

Connection Problems

- Return the earbuds to the case and then remove them again if there are any connection issues
- Refer to the cleared paired memory and reset section

The earbuds are not fitting comfortably

- Please switch out the earbud tips to a different size to find the appropriate fit

Improving the Sound

- Sound may sometimes be improved by switching to a different eartip size. The eartips still need to fit comfortably in your ear

CLEANING

Your earbuds may require periodic cleaning. Remove the tips from the earbuds and wash them with a mild detergent and water. Make sure the tips are dry before putting them back on the earbuds.

IMPORTANT SAFETY INFORMATION

CAUTIONS

- Keep in a safe place free from dust, liquid and extreme temperatures
- DO NOT attempt to disassemble the product
- DO NOT use chemicals to clean the product

SPECIFICATIONS

EARBUDS

Bluetooth® version:	V5.0
Bluetooth® profiles*:	A2DP Profile v1.3/AVRCP Profile V1.6/QS
Wireless range:	15m
IPX Rating:	IPX4
Playback time:	Approx. 5 hours**
Standby time:	Approx. 4 days
Rated input:	DC 5V/40mA
Driver diameter:	6mm
Sensitivity:	98dB
Frequency response:	20Hz-20kHz
Impedance:	16Ω
Battery:	Polymer Lithium
Battery Capacity:	45mAh
Charging time:	Approximately 1.5 hours

CHARGING CASE

Rated input:	DC 5V, 500mA
Output:	DC 5V, 250mA
Battery capacity:	500mAh
Charging time:	Approximately 2.5 hours
Fully-charged case:	Provides up to 3 charges

*A2DP=Advanced Audio Distribution Profile, AVRCP=Audio Video Remote Control Profile, HSP=Handsfree Profile, HFP=Headset Profile.
**Approximate playback time, battery life depends on individual use and may be more or less than specified.
--- Bluetooth® connected, power ON, no music playing.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by The Source (Bell) Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.

RF EXPOSURE COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-003(B)/NMB-003(B)

FCC REGULATORY COMPLIANCE

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

RF EXPOSURE COMPLIANCE

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

ISED REGULATORY COMPLIANCE

This device contains licence-exempt transmitters that comply with Innovation, Science and Economic Development Canada's licence-exempt RSSd. Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC 853-102 radiation exposure limits set forth for an uncontrolled environment.



THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of twelve (12) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:
The Source, Barrie, Ontario, Canada, L4M 4B5
Manufactured in China
www.thesource.ca
© 2021 The Source. All rights reserved.



Please Recycle

