

H5s

Wi-Fi · Real 4K · Electronic Image Stabilization

action camera

CE 
Made in China



THE BASICS



ACCESSORIES



Waterproof Housing



Mount 1



Mount 2



Mount 3



Mount 4



Mount 5



Frame



Handle Bar/
Pole Mount



Helmet Mounts



Battery



Tethers



 
USB Cable



Tripod

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.

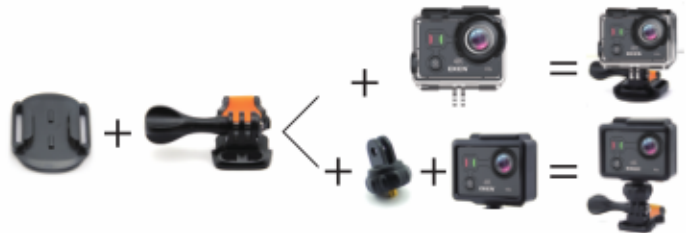

GETTING STARTED

HELLO

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:

 
Press the **Power/Mode Button**.

To power OFF:

Press and hold the **Power/Mode Button**.

OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:

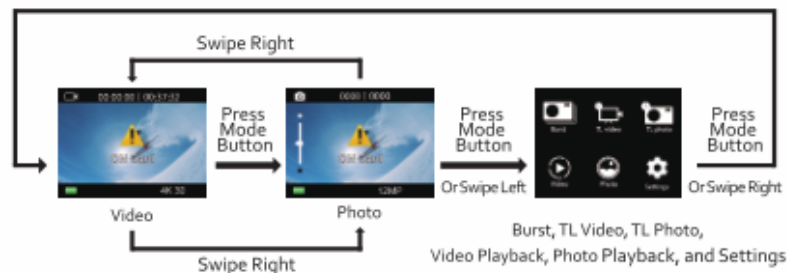


TOUCH DISPLAY GESTURES

Use these gestures to navigate the touch display. When swiping, swipe from the edge of the screen.




Tap

 Selects an item, turns a setting on/off.

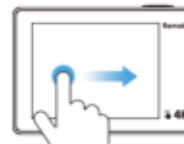

Swipe Right

 From the main screen, switches between Video and Photo mode.

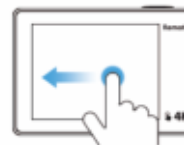

Swipe Left

From the main screen, accesses Burst, TL Video, TL Photo, Video Playback, Photo Playback, and Settings.



Swipe Up

From the Video, Burst, TL Video, TL Photo mode, accesses advanced settings.

	Video	Record Video
	Photo	Capture a single photo
	Burst	Capture photo bursts
	TL Video	Record Time Lapse Video
	TL Photo	Shoot a series of photos at set time intervals (Make sure that you turn on TL Photo in settings)
	Video playback	Video playback
	Photo playback	Photo playback
	Settings	Adjust camera settings, resolution and more.

VIDEO MODE

Video

To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep and start recording.

To stop recording:

Press the **Shutter/Select Button**. The **Camera** emits one beep to indicate recording has stopped. This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

PHOTO MODE

Photo (12M)

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

BURST MODE



Burst

To capture a **Burst** series, verify the camera is in **Burst** mode. If the **Burst** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Burst** mode, your camera takes 3 photos/1 sec, 7 photos/2 sec, 15 photos/4 sec.

To take a Burst series:

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

TL (TIME LAPSE) VIDEO



TL (Time Lapse) Video

To record a **TL(Time Lapse)** Video, verify the camera is in **TL Video** mode. If the **TL Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **TL Video** mode, your camera captures a series of photos at **0.5, 1, 2, 3, 4, 5, 10, 15, 20, 30** or **60** second intervals.

To record a TL Video:

Press the **Shutter/Select Button**. The camera will emit one beep and start recording.

TL (TIME LAPSE) PHOTO



TL (Time Lapse) Photo

To capture a **TL(Time Lapse)** Photo, verify the Time Lapse is **ON** and camera is in **TL Photo** mode. If the **TL photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **TL photo** mode, your camera captures a series of photos at **2,3,5,10,20,30** or **60** second intervals.

To take a TL Photo:

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.

VIDEO/PHOTO PLAYBACK

 
 Video  Photo

Playing Back Videos and Photos

To enter the Playback menu:

1. Press the **Power/Mode Button** to select **Video playback** or **Photo playback**.
2. Press the **Shutter/Select Button** to enter the **Playback** menu.
3. Use **Power/Mode Button** to cycle through the various options.
4. Press the **Shutter/Select Button**.
5. To return to the **Playback** menu, press the **Wi-Fi Button**.

SETTINGS



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. To go back to the previous screen or exit the settings menu, press the **Wi-Fi Button**.

Video Resolution:

4K30/2.7K60/2.7K30(EIS)/1080p100/1080p60(EIS)/720p200

MicroSD Card	4K30	2.7K30(EIS)	1080p60(EIS)	1080p30(EIS)
32 GB	80 mins	120 mins	60 mins	120 mins
64 GB	160 mins	240 mins	120 mins	240 mins

Photo Resolution: 12M

Video Interval: 1 Min/ 5 Min

Looping Video: Off/On (4K & 2.7K not supported)

Time Stamp: Off/Date/Date & Time

Exposure: +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0

Burst Mode: 3 Photos/ 1S, 7 Photos/ 2S, 15 Photos/ 4S, 24 Photos/ 8S

TL Photo Interval: 3s/5s/10s/30s/60s

TL Photo: Off/On

TL Video Resolution: 4K30/2.7K30

TL Video Interval:

0.5s/1s/2s/3s/4s/5s/10s/15s/20s/30s/60s

*TL(Time Lapse)

Power Frequency: 50Hz/60Hz/Auto

Language: English/Traditional Chinese
/Italian/Spanish/Portuguese/German/
Dutch/France/Czech/Polish/Turkish/
Russian/Japanese/Korean/Thai
Simplified Chinese/Finland/Denmark
Sweden/Norway/Hungary/Slovakia/
Greece

Remote control: Off/On

Date & Time: MM/DD/YY, DD/MM/YY,
or YY/MM/DD

Sound Indicator: Shutter On/Off, Start Up On/Off,
Beep On/Off, Volume 0/1/2/3

Screen Saver: Off/1 min/3 min/5 min

Power Saver: Off/1 min/3 min/5 min

 
Format: No/Yes

Reset: No/Yes


Version

SWIPE UP FOR MORE SETTINGS


From the **Video mode**, swipe up to access **Video Resolution** and **Exposure** settings. To change an advanced setting, tap the setting that you want to change.

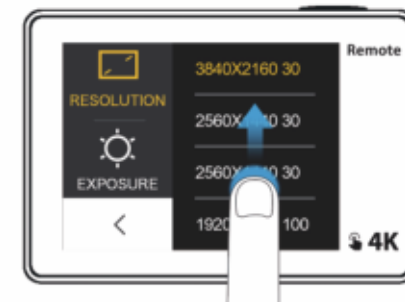

 
From the **Burst mode**, swipe up to access **Burst** settings. To change an advanced setting, tap the setting that you want to change.

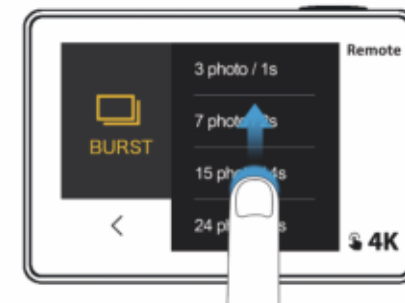

 From the **TL Video mode**, swipe up to access **TL Video Resolution** and **TL Video Interval** settings. To change an advanced setting, tap the setting that you want to change.

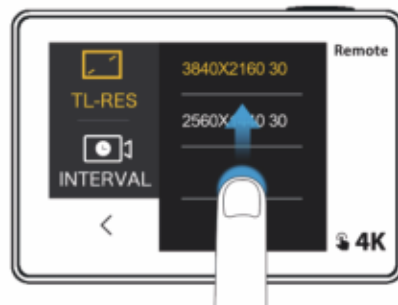

 From the **TL Photo mode**, swipe up to access **TL Photo Interval** and **TL Photo** settings. To change an advanced setting, tap the setting that you want to change.

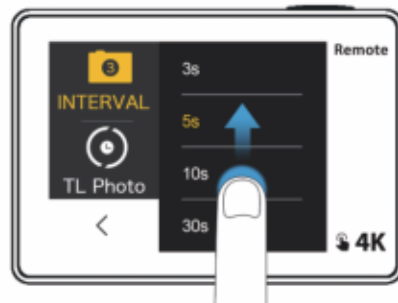

BATTERY

To charge the battery

Use the **1.5A USB charger** (not included) and **USB cable**.

*Charging Time: 3 hours.

*You can NOT record or take photos while charging the camera.

CAMERA APP

Connecting to the Ez iCam App

The **Ez iCam App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **Ez iCam App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Make sure the camera is in **Camera modes**.
4. Press the **Wi-Fi Button** to turn on **Wi-Fi***.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "**iCam-H5s**" followed by a series of numbers.
6. Open the **Ez iCam App** on your smartphone or tablet.

* Press and hold the **Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smartphones and tablets listed below.

For Apple iOS

* iPhone 6/6s/7 (Plus)(iOS10)

* iPad Air & Mini (iOS10)

For Android:

* Android 4X Quad-core devices
(Android 4.4 and above)

APP DOWNLOAD & COMPATIBILITY



iOS / Android
App Download

* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

SET THE DATE/TIME

Your camera's date and time are automatically set when you connect your camera to the Ez iCam App. If the battery is removed from the camera, you must reset the date and time (automatically or manually).

STORAGE/MICROSD CARDS

This camera is compatible with **32GB** and **64GB** capacity **microSDXC** memory cards. Be sure to use a **microSDXC** card with at least a **U3 (90MB/s)** speed rating and format your card using the camera before first use. Cards can also be formatted to **FAT32 (32GB)** or **exFAT (64GB and above)** using your PC or Mac.

MICROSD CARD CONSIDERATIONS

U3 or higher microSD cards are required, and we strongly recommend only purchasing name brand cards through official resellers. The cards below are known to work well with this camera.

Card Name and Manufacturer Part Number:



SanDisk Extreme microSDXC U3 64GB
(SDSQXNE-064G-ZN6MA)



SanDisk Extreme microSDHC U3 32GB
(SDSQXNE-032G-ZN6MA)



SanDisk Extreme PRO microSDXC U3 64GB
(SDSDQXP-064G-Z46A)



SanDisk Extreme PRO microSDHC U3 32GB
(SDSDQXP-032G-Z46A)



Transcend Ultimate 633x microSDXC U3 64GB
(TS64GUSDU3)



Transcend Ultimate 633x microSDHC U3 32GB
(TS32GUSDU3)



Samsung Pro microSDXC U3 64GB
(MB-MG64E)



Samsung Pro+ microSDXC U3 64GB
(MB-MD64D)



Photo

To capture a **Photo**, verify the camera is in **Photo** or **Video** mode.

To take a photo:

Press the **Red Photo Button**. The camera will emit a camera shutter sound.



Burst

To capture a **Burst** series, verify the camera is in **Burst** mode.

To take a Burst series:

Press the **Red Photo Button**. The camera will emit camera shutter sounds.



TL Video

To record a **TL(Time Lapse) Video**, verify the camera is in **TL Video mode**.

To start recording:

Press the **Grey Video Button**. The camera will emit three beeps and Camera Light will flash while recording.

To stop recording:

Press the **Grey Video Button** again. The Camera Light will stop flashing while recording.



TL Photo

To record a **TL(Time Lapse) Photo**, verify the camera is in **TL Photo mode**.

To take a TL Photo

Make sure that you turn on **TL Photo** in settings and press the **Red Photo Button**.

*To power OFF camera:

Press and hold the **Red Photo Button**.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.