



MODEL	4001924	4001925
type	active speaker	active speaker
input	AC100-240V, 50/60Hz DC12V, or battery	AC100-240V, 50/60Hz DC12V, or battery
woofer	15 inch	15 inch
voice coil	1" (25mm)	1.5" (38mm)
magnet	18 Oz	30 Oz
sensitivity	90dB (+/-3dB)	91dB (+/-3dB)
frequency response	50Hz-2000Hz	50Hz-2000Hz
tweeter	25mm	25mm
power	50W RMS / 8,000 PHPO	120W RMS / 20,000 PHPO
function	AUX, USB, SD, Bluetooth	AUX, USB, SD, Bluetooth
remote control	yes	yes
battery capacity	12V, 3AH	12V, 5AH
Bluetooth name	RS_0,000W	RS_20,000W

[illegible]

A diagram of an MP3 player with the following numbered labels:

- 1: Volume slider
- 2: Power button
- 3: Play/Pause button
- 4: Stop button
- 5: Previous button
- 6: Next button
- 7: Headphones jack

- ### CONNECTION BLUETOOTH
1. To pair the speaker with a Bluetooth phone or audio device, press "MODE" repeatedly on the MP3 player until select this mode.
 2. Put your phone or device to be used in Bluetooth device discovery mode.
 3. When your phone or device shows the BLUETOOTH device, confirm the link.
Model 4001974 is called "RS 8,000W" and model 4001925 is called "RS 20,000W."

A diagram of a 4x4 grid of 16 cells. The cells are arranged in 4 rows and 4 columns. The cells are numbered 1 through 11 as follows: 1 points to the top-left cell (row 1, column 1); 2 points to the cell in row 1, column 2; 6 points to the cell in row 1, column 3; 7 points to the cell in row 1, column 4; 8 points to the cell in row 2, column 1; 10 points to the cell in row 2, column 2; 9 points to the cell in row 2, column 3; 11 points to the cell in row 2, column 4; 3 points to the cell in row 3, column 1; 4 points to the cell in row 3, column 2; 5 points to the cell in row 3, column 3; 12 points to the cell in row 3, column 4; 13 points to the cell in row 4, column 1; 14 points to the cell in row 4, column 2; 15 points to the cell in row 4, column 3; 16 points to the cell in row 4, column 4.

1. Press to play a song or pause while playing a song.
2. In play mode press to set one equalizer mode.
3. **Vol - / Vol +**
4. **Previous:** press once to jump previous song, press and held to rewind.
5. **Next:** press once to jump next song, press and held to fast - forward.
6. **Keys:** use this key to select the number of a desired track.
7. **Pick song:** allows you to select the song want to listen to so direct, for example: If you want to hear the song No.11, first press the number 11 then press this button.
8. **Enter:** choose repeat mode.
9. **Mode:** select an operating mode, the options are: Bluetooth, AUX, SD, USB and FM.
10. Battery compartment (CR2025)
11. FM channel+ and FM channel-

- Avoid exposing the speaker box to moisture. If they are set up outdoors, be sure they are under cover.
- Do not use or store the equipment near wet damp places. It may cause a malfunction or shock hazard.
- If the power cord is broken, it must be replaced by a professional, a service agent or qualified personnel to avoid risks.
- To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.
- Clean only with a soft, dry cloth.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.