

## HD SOUND QUALITY WALKIE TALKIES

## PACKAGE CONTENTS

- Two Walkie Talkies
- Instruction Manual with Warranty Information

## INSERTING BATTERIES

Each walkie talkie requires three AAA batteries (not included) for power. To insert or replace batteries, use a screwdriver to remove the screw on the battery compartment door. Note that the battery compartment is located on the rear of each walkie talkie. Once the battery compartment is open, insert batteries with the correct polarity (+,-) as displayed in the battery compartment. Once the batteries have been inserted, close the battery compartment, and once again use a screwdriver to screw the battery compartment door in place.

## USING YOUR WALKIE TALKIES

Once batteries are inserted you can follow the steps below to use your walkie talkies:

1. Slide the ON/OFF Switch on each walkie talkie to the ON position.
2. Hold one walkie talkie close to your mouth.
3. Press the PUSH TO TALK button, and speak clearly to transmit a message to the other walkie talkie.
4. Release the PUSH TO TALK button when you are finished talking so that you can hear any incoming messages from the other walkie talkie.
5. When you are finished using your walkie talkies, make sure the ON/OFF Switch is in the OFF position.



## FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in the portable exposure condition without restriction.

## CSI ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

### What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but not limited to, repair by unauthorized parties, tampering, modification or accident. To obtain Warranty Service and

Troubleshooting information:

Call 1-800-592-9541 for 24/7 support

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unpaired.



### WARNING:

CHOKING HAZARD—Small parts.  
Not for children under 3yrs.

### BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadmium) batteries.
- Batteries are not to be inserted with the wrong polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

Please recycle or dispose of the battery properly. Contact local recycling facilities and/or the manufacturer of your battery for further information

**392311-19062-003-040524**  
**DISTRIBUTED BY**  
**GREENBRIER INTERNATIONAL, INC.**  
**500 VOLVO PARKWAY,**  
**CHESAPEAKE, VA 23330**  
**MADE IN CHINA**

**2024 CSI**  
**EDISON NJ 08817**  
**TECH SUPPORT**  
**1 800 592 9541**

\* All brands, product names and logos are trademarks or registered trademarks of their respective companies.  
Keep All Relevant Information for Future Reference

ITEM #  
VA90800PDQ