

MA-960-B QUICK START GUIDE

Portable Outdoor Bluetooth Speaker

CHARGING THE SPEAKER

⚡ Charge the speaker before using it for the first time.

🕒 Connect the USB cable to a computer USB port and the DC5V plug to the charging jack of the speaker to charge for at least 3 hours. When the battery is fully charged, the LED light will turn off.

● Red is charging.



PAIRING YOUR SPEAKER

Your speaker will work best if it is within 30 ft. of your smart device. You may experience sound briefly cutting off if you are out of range or if your wireless connection is weak. Make sure Bluetooth® is enabled on your smart phone or tablet before starting the pairing process.

MA-960-B QUICK START GUIDE


Portable Outdoor Bluetooth Speaker

PAIRING YOUR SPEAKER (continued)

Make sure the speaker is turned off before attempting to pair it with a smart phone or tablet. Press the "ON/OFF" button to turn on the speaker.



Press and hold the "ON/OFF" button for 5-7 seconds until the blue LED light turns on. Your speaker is ready to pair!

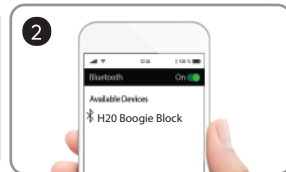

From your smart phone or tablet, find a list of nearby devices and choose "H2O Boogie Block". Enter "0000" if asked. Pairing is complete!

MA-960-B QUICK START GUIDE

Portable Outdoor Bluetooth Speaker

SPECIFICATIONS

Bluetooth®: V3.0
Operating Distance: Up to 33ft (10m)
Play Time: Up to 3 Hours
Frequency: 2.4 Ghz
Battery: 3.7V 800mAh Lithium-Ion
Charging Input: DC 5V, 500mA
Charging Time: ~3 Hours

Bluetooth® QDID: 58614
Bluetooth® ID: D022951
FCC ID: 2AAPKMA960B

MEDIA KEY FUNCTIONS



Press & Hold -
Turn device on/off

Play/Pause
Press button once while
music is playing to
play/pause.



Press & Hold -
Decrease volume

Press Once
Previous Track



Press & Hold -
Increase volume

Press Once
Next Track

MA-960-B QUICK START GUIDE

Portable Outdoor Bluetooth Speaker

CONNECTION LOST?

- If pairing the speaker does not work, turn off the speaker and repeat the steps in "Pairing your Speaker."
- Make sure your speaker is within range of your smart device.
- Charge your speaker. Connection may be lost due to low battery.
- When charging your speakers, only use the enclosed USB cable.

WARNING: Do not submerge speaker.
Keep away from heat sources.
Do not disassemble



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

MA-960-B QUICK START GUIDE

Portable Outdoor Bluetooth Speaker

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help