 


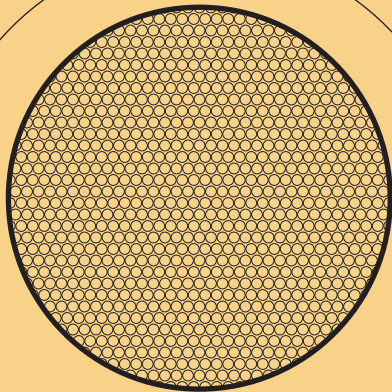

TEAM8

AUDIBLE GPS + PERSONAL SPEAKER
MANUAL / USER GUIDE



SERIAL # HERE

WARRANTY / CONTACT

THE FOLLOWING ARE INCLUDED:

- 30 DAY MONEY-BACK GUARANTEE
- 1-YEAR LIMITED WARRANTY
(ONLINE REGISTRATION REQUIRED)
- ENROLLED AS A TECTECTEC! MEMBER
- RECEIVE EXCLUSIVE DISCOUNTS
- PRE-RELEASE INSIDER ACCESS TO NEW PRODUCTS

CONTACT:

US@TECTECTEC.COM

(833)-383-2669

ALL SOCIAL....@TECTECTECUSA



THE **TEAM8**TM IS A PERSONAL, AUDIBLE,
GPS DEVICE + SPEAKER. WE CREATED
THIS PRODUCT WITH ONLY **YOU** IN MIND.

GOLF IS A SPORT OF ETIQUETTE AND FUN.
HERE AT TECTECTEC!, OUR MAIN FOCUS IN
THIS PRODUCT IS TO OFFER THE FIRST
AND ONLY AUDIBLE GPS / SPEAKER DESIGNED
FOR YOUR SINGULAR NEEDS ON THE COURSE.
YES, THE **TEAM8** IS LOUD ENOUGH FOR
OTHERS IN YOUR FOURSOME TO GET INTO THE
GROOVE, BUT THIS LIGHT WEIGHT AND
VERSATILE DEVICE KEEPS YOU IN CONTROL
AND IN THE RIGHT MINDSET FOR OPTIMAL
ON-COURSE JOY AND PERFORMANCE.

TecTecTec!
ONLY WHAT YOU NEED

PRODUCT DETAILS

POWER

VOLUME +

 
 
DISTANCE

VOLUME -


STRAP TETHER

CHARGE


USB-C

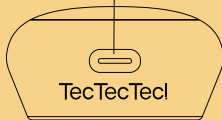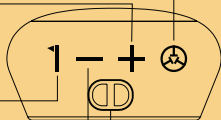

PRODUCT DETAILS

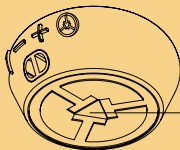 

MAGNET

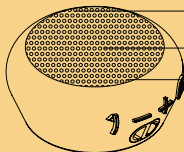 

RED LIGHT

SPEAKER GUARD

BLUE LIGHT

FLASHING BLUE LIGHT: SPEAKER IS LOOKING FOR DEVICE TO BE PAIRED WITH.

SOLID BLUE LIGHT: SPEAKER IS CONNECTED TO ONE OF YOUR DEVICES.

RED LIGHT: SPEAKER IS CHARGING.

STEP 01 / APP

DOWNLOAD

ONLY NEED TO DO THIS ONCE

DOWNLOAD OUR **TECTECTEC! GOLF GPS APP**



USE THE CORRECT QR CODE ABOVE BASED ON THE COMPATIBILITY OF YOUR MOBILE DEVICE. ONCE DOWNLOADED, YOU WILL BE ABLE TO PAIR THE **TEAM8** WITH YOUR PHONE. NOW YOU'RE READY TO ENJOY.

STEP 01 / APP

 
SIGN UP

OPEN THE TECTECTEC! GOLF GPS APP AND
CLICK ON THE BUTTON TO "SIGN UP".

FOLLOW THE INSTRUCTIONS PROVIDED ON
THE SCREEN, SELECT "TEAM8" AND THEN
CLICK ON THE BUTTON TO "SUBMIT".

THE "**DEVICE SERIAL NUMBER**" IS LOCATED
ON THE FRONT OF THIS MANUAL.

STEP 02 / DEVICE



TURN POWER ON

PRESS AND HOLD THE TECTECTEC BUTTON UNTIL YOU HEAR THE AUDIBLE CHIME AND THE BLUE LIGHT IS ILLUMINATED.

POWER OFF: PRESS AND HOLD THE POWER BUTTON FOR 5 SECONDS. IF YOUR SPEAKER IS NOT CONNECTED TO ANY DEVICE FOR 10 MINUTES, IT WILL AUTOMATICALLY SHUT DOWN.

STEP 06 / APP

BLUETOOTH PAIRING

GO TO THE BLUETOOTH SETTINGS OF YOUR PHONE TO PAIR THE DEVICE. SELECT “TEAM8” TO PAIR.

STEP 04 / APP

QUICK PLAY

PRESS QUICK PLAY TO START.



TecTecTec!

TEAM8

#12:34:56:78:D1:2D



QUICK PLAY



SPEAKER
SETTINGS



REMOVE
DEVICE

STEP 05 / APP

PAIRING

FOLLOW PROMPT / PRESS NEXT

PAIR YOUR DEVICE

1. ON YOUR SMARTPHONE, MAKE SURE YOU HAVE BLUETOOTH TURNED ON.
2. POWER ON YOUR SPEAKER.
3. SELECT **NEXT** BUTTON BELOW.

CANCEL

NEXT

STEP 06 / APP

AUTHORIZATION

ALLOW ACCESS TO FIND DEVICE.



QUICK PLAY



SPEAKER
SETTINGS



REMOVE
DEVICE

ALLOW **TECTECTECMOBILE** TO FIND, CONNECT
TO AND DETERMINE THE RELATIVE POSITION
OF NEARBY DEVICES?.

ALLOW

DON'T ALLOW

STEP 06 / APP

AUTHORIZATION

ALLOW ACCESS TO FIND DEVICE.

***** IMPORTANT*****

PLEASE FOLLOW THE PROMPTS AND CLICK
THE CORRESPONDING OPTIONS HIGHLIGHTED.

ALLOW **TECTECTECMOBILE** TO ACCESS
THIS DEVICE'S LOCATION?.

⬆ **PRECISE**

WHILE USING THE APP

ATTENTION

THIS APP COLLECTS LOCATION DATA TO
ENABLE DISTANCE READOUTS IN PLAY GOLF,
EVEN WHEN THE APP IS CLOSED OR
NOT IN USE.

ALLOW ALL THE TIME

STEP 07 / APP

SELECT GOLF COURSE

CHOOSE COURSE FROM NEARBY, RECENT OR SEARCH

←

SELECT GOLF COURSE

≡

SEARCH GOLF COURSES

NEARBY

RECENT

AWESOME GOLF COURSE 1 SEATTLE, WA	1.8 MI
AWESOME GOLF COURSE 2 SEATTLE, WA	3.5 MI
AWESOME GOLF COURSE 3 SEATTLE, WA	7.1 MI
AWESOME GOLF COURSE 4 SEATTLE, WA	8.4 MI
AWESOME GOLF COURSE 5 SEATTLE, WA	10.5 MI
AWESOME GOLF COURSE 6 SEATTLE, WA	13.2 MI
AWESOME GOLF COURSE 7 SEATTLE, WA	15.7 MI
AWESOME GOLF COURSE 8 SEATTLE, WA	15.9 MI
AWESOME GOLF COURSE 9 SEATTLE, WA	18.0 MI

STEP 08 / APP

SELECT TEE BOX

CHOOSE TEE BOX FROM LIST BELOW



SELECT TEE BOX

- | | | |
|----------------------------------|--------------|---------|
| ☐ | BLACK | 419 YDS |
| ☒ | BLUE | 395 YDS |
| ☐ | WHITE | 375 YDS |
| ☐ | RED | 305 YDS |

IN PLAY / APP

HOLE OVERVIEW

CLICK < **HOLE** > TO MOVE HOLES MANUALLY

HOLE OVERVIEW

< **HOLE 1** >

PAR **4** | LENGTH **413** | RANK **5**

LAST SHOT DISTANCE --- YDS



DISTANCE TO HOLE

396

FRONT

410

MIDDLE

424

BACK

HAZARDS

← **397**

BUNKER

283 →

BUNKER

294 →

BUNKER

 
END GAME

SETTINGS

DISTANCE

*** IMPORTANT ***

GPS DISTANCE IS MEASURED FROM THE LOCATION OF THE PHONE, NOT FROM THE DEVICE.



DISTANCE

THE FLAG STICK CONTROLS THE FOLLOWING:

 
 
- **SINGLE PRESS** - MEASURES DISTANCE TO FRONT / MIDDLE / BACK OF GREEN.
- **HOLD SINGLE PRESS** - MEASURES DISTANCE FROM SHOT TO SHOT.
- **DOUBLE PRESS** - MEASURES DISTANCE TO CLOSEST HAZARD.

CONNECTION RANGE

DISTANCE FROM DEVICE TO PHONE

TEAM8 MUST BE WITHIN 15 YDS
TO HAVE CONSISTENT PAIRING
WITH APP.

15 YDS

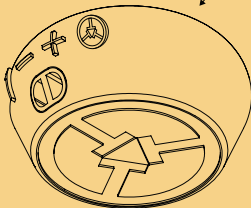

MAGNETIC ECOSYSTEM

THE TEAM8 IS A PART OF THE TECTECTEC!

MAGNETIC
ECOSYSTEM



MAGNETIC SOLE
ON **TEAM8**.



GOLF CART



GOLF CLUB



 
BAG CLIP



BELT CLIP

MUSIC

PLAY /
PAUSE MUSIC



VOLUME /
SONG SELECTION

 
THE - / + BUTTONS CONTROLS BOTH SPEAKER
VOLUME AND SONG SELECTION:

- **SINGLE PRESS** - CONTROLS VOLUME
- **HOLD VOLUME BUTTON** - CONTROLS SONG
SELECTION

PHONE

**ANSWER /
END CALL**

**VOLUME /
ON CALL**




THE TECTECTEC BUTTON WILL ANSWER YOUR PHONE CALL. THE SPEAKER HAS A BUILT IN MICROPHONE SO YOU CAN CONTINUE YOUR HANDS-FREE ON-COURSE JOY.

- **SINGLE PRESS** - ANSWERS / ENDS CALL
- THE - / + SIGN CONTROL CALL VOLUME

RINGTONE FROM PHONE CALLS ARE DEACTIVATED AS WE DO NOT WANT YOU TO BE DISTURBED WHEN PLAYING. CALLS FROM SOCIAL MEDIA APPS (WHATSAPP, MESSENGER, SNAPCHAT, ETC.) MIGHT STILL RING. PLEASE VISIT OUR WEBSITE TUTORIALS TO LEARN HOW TO SETUP DO NOT DISTURB MODE.

CHARGING

 **CHARGE
USB-C**

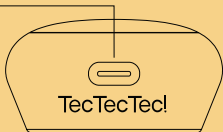

THE **TEAM8** COMES WITH A USB TO USB-C CABLE. PLUG CABLE INTO PORT ABOVE THE TECTECTEC! LOGO.

A SINGLE CHARGE LASTS 1-2 ROUNDS DEPENDING ON THE USAGE. PLEASE MAKE SURE YOUR PHONE IS FULLY CHARGED BEFORE PAIRING TEAM8.

GPS USES SUBSTANTIAL POWER.

FAQ

THE **TEAM8** IS A GPS DEVICE THAT REQUIRES A CONSTANT WIFI OR CELLULAR CONNECTION TO RETRIEVE INFORMATION FROM THE SERVER.

- THE SOUND COMES OUT FROM MY PHONE, NOT FROM THE SPEAKER, WHAT SHOULD I DO?
GO TO YOUR BLUETOOTH SETTINGS, THEN PAIR TEAM8. PLEASE NOTE THAT YOU MIGHT SEE TWO TEAM8 ON YOUR BLUETOOTH SETTINGS.

- DO I HAVE TO PAIR MY DEVICE MANUALLY EVERY TIME I OPEN THE APP? NO, THE APP WILL RECOGNIZE THE DEVICE AND AUTO PAIR.

-LOW BATTERY: WHEN THE BATTERY IS LOW, THE SPEAKER WILL PLAY A CHIME SOUND.

SAFETY

FOR YOUR SAFETY AND FOR LONG ENJOYMENT OF OUR PRODUCT, PLEASE FOLLOW THE SAFETY INSTRUCTIONS:

- PLEASE USE AS DESCRIBED IN THE MANUAL.
- TO PROTECT YOUR HEARING AND WIDEN THE LIFE SPAN OF THE SPEAKER, MAXIMUM VOLUME SHOULD NOT BE HELD DIRECTLY TO THE EAR.
- PLEASE KEEP THE POWER ADAPTER AND SPEAKER DRY AND USE THEM IN A DRY ENVIRONMENT ONLY.
- DO NOT TOUCH WITH WET HANDS.
- KEEP AWAY FROM DAMP, HIGH TEMPERATURE, DUSTY, EROSION AND OXIDATIVE ENVIRONMENTS.
- DO NOT DROP THE UNIT
- TURN OFF POWER WHEN DEVICE IS NOT IN USE.
- DO NOT OPEN OR DISASSEMBLE THE UNIT.

FCC WARNING STATEMENT

 
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

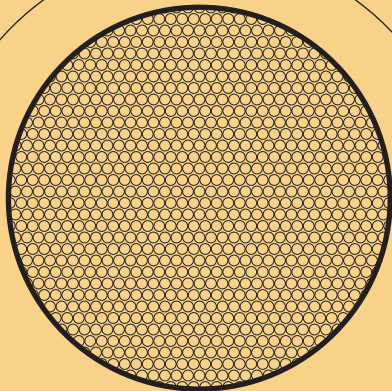

TEAM8

GPS AUDIO + HAUT-PARLEUR INDIVIDUEL
MANUEL D'UTILISATION

GARANTIE / CONTACT

LES ÉLÉMENTS SUIVANTS SONT INCLUS :

- 30 JOURS SATISFAIT OU REMBOURSE
- 2-ANS DE GARANTIE (ENREGISTREMENT EN LIGNE)
- ACCÈS A LA COMMUNAUTÉ TECTECTEC !
- ACCÈS AUX PROMOS EXCLUSIVES
- ACCÈS AUX PRODUITS EN AVANT-PREMIÈRE

CONTACT:

CS@TECTECTEC.COM

RÉSEAUX SOCIAUX....@TECTECTECUSA



LE **TEAM8**TM (TEAMMATE = COÉQUIPIER)
EST UNE ENCEINTE BLUETOOTH PERSON-
NELLE PERMETTANT D'ENTENDRE LES
DISTANCES ET VOTRE MUSIQUE SANS
DÉRANGER LES AUTRES JOUEURS.

LE GOLF EST UN SPORT DE RESPECT ET DE
PLAISIR. ICI CHEZ TECTECTEC!, NOTRE OBJEC-
TIF PRINCIPAL DANS CE PRODUIT EST
D'OFFRIR LE PREMIER ET SEUL GPS AUDIBLE /
HAUT-PARLEUR CONÇU POUR VOS BESOINS
PERSONNELS SUR LE PARCOURS.

OUI, LE TEAM8 EST ASSEZ FORT POUR QUE
VOS COÉQUIPIERS PUISSENT AUSSI EN
PROFITER. SON POIDS LÉGER ET SA POLYVA-
LENCE VOUS PERMET DE GARDER LE
CONTRÔLE.

TecTecTec!
ONLY WHAT YOU NEED

DÉTAILS DU PRODUIT

POWER

VOLUME +

DISTANCE

 
 
VOLUME -

ENCOCHE

DRAGONNE

PRISE


CHARGEUR USB-C



DÉTAILS DU PRODUIT



 AIMANT

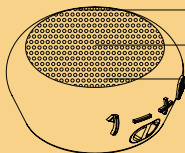

LED ROUGE

GRILLE HAUT-PARLEUR

LED BLEUE

LED BLEUE CLIGNOTANTE : L'ENCEINTE RECHERCHE UN APPAREIL À QUI SE CONNECTER.

LED BLEUE CONTINUE : L'ENCEINTE EST CONNECTÉE À L'UN DE VOS APPAREILS.

LED ROUGE : L'ENCEINTE SE RECHARGE.

ÉTAPE 01 / APP

TÉLÉCHARGEMENT
À RÉALISER QU'UNE FOIS.

TÉLÉCHARGER NOTRE APPLICATION
TECTECTEC ! GOLF GPS



UTILISEZ L'UN DES CODES QR CI-DESSUS EN
FONCTION DU MODÈLE DE VOTRE
TÉLÉPHONE. UNE FOIS TÉLÉCHARGÉ, VOUS
ALLEZ POUVOIR APPAIRER VOTRE **TEAM8**
DEPUIS NOTRE APPLICATION.

ÉTAPE 01 / APP

S'INSCRIRE

 
OUVREZ L'APPLICATION GPS TECTECTEC !
GOLF ET CLIQUEZ SUR "S'INSCRIRE".

SUIVEZ LES INSTRUCTIONS À L'ÉCRAN ET
CLIQUEZ SUR "VALIDER".

LE "**NUMÉRO DE SÉRIE DE L'APPAREIL**" SE
TROUVE SUR LA **COUVERTURE** DE CE MANUEL.

ÉTAPE 02 / ÉQUIPEMENT

ALLUMER

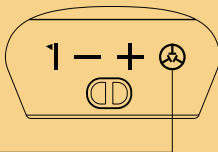

ALLUMER

MAINTENEZ LE BOUTON ENFONCÉ JUSQU'À CE QUE L'ENCEINTE S'ALLUME.

POUR ÉTEINDRE MAINTENEZ LE BOUTON POWER PENDANT CINQ SECONDES. LE HAUTPARLEUR S'ÉTEINDRA AUTOMATIQUEMENT APRÈS 10 MINUTES S'IL N'EST PAS CONNECTÉ EN BLUETOOTH.

ÉTAPE 03 / iOS

BLUETOOTH AUDIO

ALLEZ DANS LES PARAMÈTRES BLUETOOTH DE VOTRE TÉLÉPHONE, PUIS SÉLECTIONNEZ « TEAM8 ».

ÉTAPE 04 / APP

QUICK PLAY

PRESSEZ QUICK PLAY POUR COMMENCER.



TecTecTec!

TEAM8

#12:34:56:78:D1:2D



QUICK PLAY



SPEAKER
SETTINGS



REMOVE
DEVICE

ÉTAPE 05 / APP

APPAIRAGE

APPUYEZ SUR SUIVANT (NEXT)

PAIR YOUR DEVICE

1. ON YOUR SMARTPHONE, MAKE SURE YOU HAVE BLUETOOTH TURNED ON.
2. POWER ON YOUR SPEAKER.
3. SELECT **NEXT** BUTTON BELOW.

CANCEL

NEXT

ÉTAPE 06 / APP

AUTHORISATIONS

DONNEZ TOUTES LES **AUTHORISATIONS NÉCESSAIRES**
À L'APPLICATION POUR SON BON FONCTIONNEMENT..



QUICK PLAY



SPEAKER
SETTINGS



REMOVE
DEVICE

AUTORISER TECTECTECMOBILE À
DÉTECTER LES APPAREILS À PROXIMITÉ,
S'Y CONNECTER ET DÉTERMINER LEUR
POSITION RELATIVE ?

AUTORISER

ÉTAPE 06 / APP

AUTHORISATION

ALLOW ACCESS TO FIND DEVICE.

***** IMPORTANT *****

DONNEZ TOUTES LES AUTORISATIONS NÉCESSAIRES À L'APPLICATION POUR SON BON FONCTIONNEMENT.

AUTORISEZ TECTECTECMOBILE À ACCÉDER À
LA POSITION DE CET APPAREIL ?

EXACTE

**LORSQUE VOUS UTILISEZ
L'APPLICATION**

ATTENTION

CETTE APPLICATION COLLECTE LA
GÉOLOCALISATION DE VOTRE TÉLÉPHONE
POUR DÉTERMINER LES DISTANCES SUR LE
PARCOURS DE GOLF MÊME LORSQUE VOTRE
TÉLÉPHONE À L'ÉCRAN ÉTEINT.

AUTORISATION D'ACCÈS À « POSITION ».
TOUJOURS AUTORISER

ÉTAPE 07 / APP

SÉLECTIONNER UN PARCOURS DE GOLF

A PROXIMITÉ / RÉCENT / RECHERCHER

← SELECT GOLF COURSE ≡

SEARCH GOLF COURSES



NEARBY

RECENT

AWESOME GOLF COURSE 1

SEATTLE, WA

1.8 MI

AWESOME GOLF COURSE 2

SEATTLE, WA

3.5 MI

AWESOME GOLF COURSE 3

SEATTLE, WA

7.1 MI

AWESOME GOLF COURSE 4

SEATTLE, WA

8.4 MI

AWESOME GOLF COURSE 5

SEATTLE, WA

10.5 MI

AWESOME GOLF COURSE 6

SEATTLE, WA

13.2 MI

AWESOME GOLF COURSE 7

SEATTLE, WA

15.7 MI

AWESOME GOLF COURSE 8

SEATTLE, WA

15.9 MI

AWESOME GOLF COURSE 9

SEATTLE, WA

18.0 MI

ÉTAPE 08 / APP

SÉLECTIONNER LE TEE BOX

CHOISISSEZ DEPUIS LA LISTE CI-DESSOUS



SELECT TEE BOX

- | | | |
|----------------------------------|-------|---------|
| ☐ | BLACK | 419 YDS |
| ☒ | BLUE | 395 YDS |
| ☐ | WHITE | 375 YDS |
| ☐ | RED | 305 YDS |

IN PLAY / APP

APERÇU DU TROU

PRESSEZ < HOLE > POUR CHANGER MANUELLEMENT DE TROU

HOLE OVERVIEW

< HOLE 1 >

PAR 4 | LENGTH 413 | RANK 5

LAST SHOT DISTANCE --- YDS



DISTANCE TO HOLE

396

FRONT

410

MIDDLE

424

BACK

HAZARDS

← **397**

BUNKER

283 →

BUNKER

294 →

BUNKER

 
END GAME

SETTINGS

DISTANCE

*** IMPORTANT ***

LA DISTANCE GPS EST MESURÉE DEPUIS LA POSITION DU TÉLÉPHONE ET NON DE L'ÉQUIPEMENT.



DISTANCE

LE BOUTON DRAPEAU VOUS PERMET :

 
 
- **UN APPUI SIMPLE** – MESURE LA DISTANCE AU-DEVANT/CENTRE/DERRIÈRE DU GREEN.
- **UN APPUI PROLONGÉ** – MESURE LA DISTANCE D'UN TIR
- **DEUX APPUIS SUCCESSIFS** – MESURE LA DISTANCE AUX DANGERS

PORTÉE DE LA CONNEXION

DISTANCE DE L'ÉQUIPEMENT AU TÉLÉPHONE

TEAM8 DOIT ÊTRE DANS UN RAYON DE 10 MÈTRES POUR MAINTENIR LA CONNEXION AVEC L'APPLICATION. VOUS DEVEZ RESTEZ DANS CE RAYON POUR PROFITER DES DISTANCES ET DE LA MUSIQUE.

10 MÈTRES

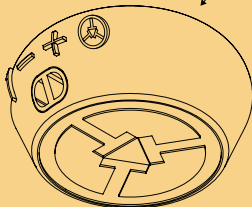

ÉCOSYSTÈME MAGNÉTIQUE

LE TEAM8 FAIT PARTIE DU

MAGNETIC
ECOSYSTEM



SOCLE MAGNÉTIQUE
SUR LE **TEAM8**.



VOITURETTE



CLIP POUR SAC



 
CLUB DE GOLF



CLIP CEINTURE

MUSIQUE

JOUER /
METTRE EN PAUSE



VOLUME /
SÉLECTION DE LA MUSIQUE

 
LES BOUTONS -/+ PERMETTENT DE RÉGLER LE
VOLUME DE L'ENCEINTE ET CHANGER DE PISTE :

- **UN APPUI SIMPLE** – CONTRÔLE DU VOLUME
- **UN APPUI PROLONGÉ** – CHANGEMENT DE PISTE

TÉLÉPHONE

RÉPONDRE /
RACCROCHER

VOLUME




L'ICÔNE TECTECTEC ! RÉPONDRA À VOTRE APPEL GRÂCE AU MICRO INTÉGRÉ DANS L'ENCEINTE TEAM8.

- **UN APPUI SIMPLE** - RÉPONDRE / RACCROCHER
- - / + POUR CONTRÔLER LE VOLUME

LA SONNERIE DES APPELS TÉLÉPHONIQUES A ÉTÉ VOLONTAIREMENT DÉSACTIVÉE SUR L'ENCEINTE AFIN DE NE PAS ÊTRE DÉRANGÉ PENDANT UNE PARTIE. NÉANMOINS, LES APPELS PROVENANT D'AUTRES APPLICATIONS (WHATSAPP, MESSENGER, SIGNAL...) NE PEUVENT PAS ÊTRE DÉSACTIVÉS PAR NOTRE ENCEINTE. VOUS POUVEZ CONSULTER NOS TUTORIELS AFIN DE CONFIGURER VOTRE TÉLÉPHONE POUR QU'IL NE SONNE PAS.

RECHARGEMENT

 **PRISE CHARGEUR
USB-C**

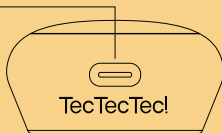

LE **TEAM8** EST LIVRÉ AVEC UN CABLE USB VERS USB-C. CE CABLE SE BRANCHE AU-DESSUS DU LOGO TECTECTEC !

UNE CHARGE PERMET DE RÉALISER ENTRE 1 ET 2 PARCOURS EN FONCTION DE L'UTILISATION DE L'ENCEINTE (MUSIQUE ACTIVE OU NON). ASSUREZ-VOUS D'AVOIR BIEN CHARGÉ VOTRE TÉLÉPHONE AVANT DE FAIRE VOTRE PARCOURS.

LA GÉOLOCALISATION CONSOMME BEAUCOUP D'ÉNERGIE.

FAQ

LE **TEAM8** REQUIÈRE UNE CONNEXION PERMANENTE À VOTRE TÉLÉPHONE POUR FONCTIONNER, VOTRE TÉLÉPHONE DOIT AUSSI AVOIR ACCÈS À INTERNET POUR ACCÉDER AUX DONNÉES DU PARCOURS.

-COMMENT ÉTEINDRE L'ÉQUIPEMENT ? APPUYEZ SUR LE LOGO TECTECTEC ! PENDANT 10 SECONDES. SI VOUS N'APPUYEZ PAS ASSEZ LONGTEMPS, L'APPAREIL PASSERA EN RECHERCHE DE BLUETOOTH ET NE S'ÉTEINDRA PAS.

-DOIS-JE APPAIRER L'APPAREIL À CHAQUE FOIS ? NON, L'APPLICATION RECONNAÎTRA L'APPAREIL ET SE RECONNECTERA AUTOMATIQUEMENT.

-LE BOUTON DRAPEAU FONCTIONNE MAIS LE SON SORT DU TÉLÉPHONE, QUE DOIS-JE FAIRE ? OUVREZ LES PARAMÈTRES BLUETOOTH DE VOTRE TÉLÉPHONE ET APPUYEZ SUR TEAM8 POUR FORCER SON APPAIRAGE.

-BATTERIE FAIBLE : LORSQUE LA BATTERIE EST FAIBLE, L'ENCEINTE ÉMETTRA UN SON RÉGULIÈREMENT.