 
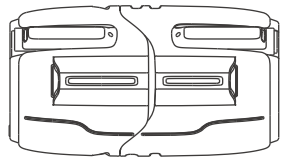 




# TRANSFORMERS

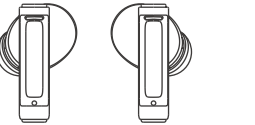


## TF-T01 Pro 真无线蓝牙耳机

- 使用说明书 -
  
### 包装清单



### 产品示意图

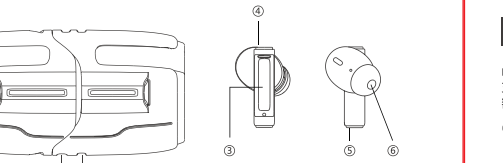 

①充电仓指示灯 / ② Type-C 充电口 / ③ MFB 键 / ④耳机指示灯  
⑤耳机充电触点 / ⑥耳机出音口 / ⑦复位键

### 温馨提示

- 除说明书有特殊标示的操作方式以外，请勿尝试拆卸或更换产品内的任何零件。
- 请勿将产品放入水或其他任何液体中，此产品非防水设计。
- 如果有任何液体不小心进入产品内时，请立即断开连接并移开此产品。
- 为避免触电，请在安装或卸载产品时，确保手上没有沾水。
- 请勿将此产品放置于热源附近或直接暴露在火源附近。
- 请勿将本产品放置在有强大电磁力的环境中，否则会导致产品故障。

 
### 产品规格

蓝牙版本：5.4  
传输距离：≥ 10M  
喇叭直径：φ10mm  
喇叭阻抗：32Ω  
灵敏度：108±3dB @1kHz  
频率范围：20-20kHz  
充电时间：约 1.5 小时  
音乐时间：约 5 小时  
电池容量：30mAh/3.7V  
额定输入：5V === 30mA

### 充电仓规格

电池容量：300mAh/3.7V  
充电时间：约 1.5 小时  
额定输入：5V === 300mA

(所有技术信息以实际性能为准)



额定输入：5V === 30mA (耳机)

额定输入：5V === 300mA (充电仓)

给充电仓充电，用 Type-C 充电线连接充电仓到 5V 电源适配器。

温馨提示：耳机电量低于 3.3V 开始播报低电量提醒（每 1 分钟提醒一次），耳机蓝灯快闪。

### LED 指示灯与提示音

状态	指示灯	提示音
开机	蓝灯快闪	Power on
关机	蓝灯亮一秒熄灭	Power off
TWS 相互配对	配对成功，主耳蓝灯闪，副耳蓝灯灭	Pairing
连接设备成功	主副耳灯灭	Connected
回连状态	蓝灯快闪	/
耳机低电量提示	蓝灯每 5S 闪烁 1 次	Low battery
耳机充电	充电中：蓝灯常亮；充满电：蓝灯熄灭	/

### 充电仓状态

状态	指示灯
充电仓充电状态	红灯闪烁
充电仓充满电状态	红灯熄灭
仓给耳机充电状态	入仓检测灯常亮10秒后熄灭
仓给耳机充满电状态	蓝灯熄灭
充电仓低电状态	红灯闪烁5次后熄灭

### 恢复出厂设置

- 耳机在充电仓内，连续按 5 下复位键清除所有连接记录。
- 耳机在充电仓内，长按复位键 8 秒，清除与手机连接记录。

### 产品操作说明

#### 1. 开机

方法一：充电仓取出耳机自动开机；  
方法二：长按左 / 右耳机功能键 3 秒开机。

#### 2. 关机

 
方法一：耳机放入充电仓内自动关机；  
方法二：耳机在 3 分钟后没有连接设备则自动关机。

#### 3. 配对

步骤一：左右耳机配对：从充电仓取出耳机，并自动进行左右配对。  
步骤二：左右耳机自动配对成功后则进入配对模式，耳机等待与设备的连接。  
步骤三：打开设备的蓝牙功能，选择“TF-T01 Pro”进行连接，3 分钟内未连接设备则自动关机。



连接设备成功提示音：  
“Connected”



### 触摸操作

#### ■ 常规模式

音量 +：单击右耳机 MFB 键（最大提示音“咚咚”）

音量 -：单击左耳机 MFB 键（最小提示音“咚咚”）

#### ■ 音乐播放模式

播放 / 暂停：双击左 / 右耳机 MFB 键

上一曲：三击左耳机 MFB 键

下一曲：三击右耳机 MFB 键

#### ■ 通话模式

接听来电：双击左 / 右耳机 MFB 键

结束通话：双击左 / 右耳机 MFB 键

拒接来电：长按左 / 右耳机 MFB 键 2 秒

#### ■ 游戏/音乐/ANC降噪/通透/普通模式

长按右耳机 MFB 键 2 秒切换游戏/音乐模式

长按左耳机 MFB 键 2 秒切换普通模式/ANC模式/通透模式  
(开机默认为普通模式)

### 产品中有有害物质名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据 SJ/T11364 的规定编制  
○：表示有害物质在该部件所有均质材料中的含量均在 GB/T26572 规定限量要求以下。  
X：表示该有害物质至少在该部件的某一均质材料中的含量超出 GB26572 规定的限量要求。  
表中标记“X”的部件，皆因全球技术发展水平限制而无法实现有害物质的替代。

本表格依据 SJ/T11364 的规定编制  
印刷电路板组件\*：包括印刷电路板及其零部件，电子元器件等；  
根据产品型号不同，您所购买的产品可能不会含有以上所有部件。

指不含有6种有毒有害物质或含有但小于限量值，字母“e”代表英文字母电子(electronic)；电子(electrical)和环境(environment)的首字母；环绕的曲线箭头表示可回收利用。

产品及随附物料的齐备和外观完好不属于保证范围，您应在接收产品时当场检验并对任何不符提出异议。

以上保证是我们就产品做出的全部保证，且仅在中国大陆地区境内适用。  
本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权利。

服务监督热线：400-885-8808



### 保修声明

#### 免责声明

本使用手册没有任何形式的担保、立场表达或其他暗示，本使用手册所提到的产品、规格及信息仅供参考，内容亦会随时更新于网页，恕不另行通知。

#### 保修声明：

就本文件附随的产品做如下保证：如产品在您购买日起十二(12)个月“(保修期)”内，在正常使用情况下因质量瑕疵发生损坏，能修理的，免费修理，经厂家确认无法修理的，免费更换，修理或更换后的产品，在剩余保修期（最短不少于 30 天）内继续享有保修。  
购买日以销售发票日期为准，如无法确定购买日，则保修期自产品生产日期起按十三(13)个月计算。  
如申请保修，请先致电产品服务热线，并按我们指示的方式执行。申请保修时，您需要提供准确、完整和清晰填写的有效销售发票。以上保证不适用于下列情况：

- 超过三包有效期；
- 涂改保修卡、产品编码与产品本体不符；
- 因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏；
- 因不可抗力（如地震、战争、火灾等）或意外导致的故障或损坏；
- 拉链、塔扣因受力过大而损坏；
- 因超载过重造成的脱线或撕裂；
- 任何因尖锐物体造成的损坏；
- 有烧损或水浸迹象的产品；
- 因擅自拆改导致的损坏；
- 产品正常使用过程中发生的老化、脱色、磨损、破裂和其他损耗；
- 如产品原有标识标签被更改或损毁，本保证将失效。

产品及随附物料的齐备和外观完好不属于保证范围，您应在接收产品时当场检验并对任何不符提出异议。

以上保证是我们就产品做出的全部保证，且仅在中国大陆地区境内适用。  
本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权利。

服务监督热线：400-885-8808

# TRANSFORMERS

### 保修卡

尊敬的用户，本保修卡是您将来申请保修的凭证，请您配合销售商填写并妥善保管备用！

### 用户信息

用户姓名		电子邮件	
联系电话		邮政编码	
通讯地址			

### 产品信息

产品名称		产品型号	
产品条码 / 编号 / 批号			

### 销售商信息

用户姓名			
地址			
联系电话		邮政编码	
销售日期		发票号码	
备 注			

### 合格证

产品编号：\_\_\_\_\_  
生产日期：\_\_\_\_\_  
检验员：\_\_\_\_\_  
合格

## Warranty card

Dear user, this warranty card is a proof of your future warranty application. Please cooperate with the seller to fill it out and keep it properly for future use!

### User Information

User Name		E-mail	
Telephone		Postal Code	
mail address			
Products			
product name		Model	
Product barcode/ number/batch number			

 
 
### Seller Information

User Name	
Address	
Telephone	Postal Code
Sale date	Invoice number
Remarks	

### Certificate of Approval





Product No: \_\_\_\_\_  
Production Time: \_\_\_\_\_  
QC: \_\_\_\_\_

# TRANSFORMERS

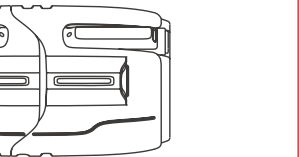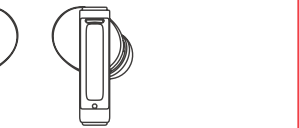

## TF-T01 Pro True Wireless BT Earphones - Instruction manual -
    
## Packing list



## Tips

- Do not attempt to disassemble or replace any parts inside the product, except for the operation methods specified in the manual.
- Do not put the product into water or any other liquid, as this product is not designed to be waterproof.
- If any liquid accidentally enters the product, please immediately disconnect and remove the product.
- To avoid electric shock, please ensure that your hands are not wet when installing or uninstalling the product.
- Please do not place this product near a heat source or directly expose it to a fire source.
- Do not place this product in an environment with strong electromagnetic force, otherwise it may cause product malfunction.

## Product specifications

Bluetooth version: 5.4  
Transmission distance: ≥10M  
Speaker diameter: φ10mm  
Speaker impedance: 32Ω  
Sensitivity: 108±3dB @1kHz

Frequency range: 20-20kHz  
Charging time: about 1.5 hours  
Music time: about 5 hours  
Battery capacity: 30mAh/3.7V  
Rated input: 5V === 30mA

## Charging compartment specifications

Battery capacity: 300mAh/3.7V  
Charging time: About 1.5 hours  
Rated input: 5V === 300mA  
(All technical information is subject to actual performance)



Rated input: 5V === 30mA (Earphone)

Rated input: 5V === 300mA (Charging compartment)

## Factory data reset

- When the headset is in the charging bay, press the reset button five times to clear all connection records.
- Long press the reset button in the charging compartment for 8 seconds to clear the connection record with the mobile phone.

## LED indicator lights and warning sounds

State of affairs	Indicator light	Beep
Power on	Blue light quick flashing	Power on
Power off	The blue light goes off in one second	Power off
TWS Interconnecting	Successful pairing, blue light in primary ear flashes, blue light in secondary ear goes out	Pairing
Connected device successfully	Primary and secondary auricular lights out.	Connected
Reconnection status	Blue light quick flashing	/
Low battery warning for headphones	The blue light flashes once every 5 seconds	Low battery
Earphone charging	Charging: The blue light is constantly on; Fully charged: Blue light out	/

## Charging bin status

State of affairs	Indicator light
Charging status of the charging box	Red light flashing
charging case is fully charged	Red light out
charging case charges the headset	The warehouse detection light will be on for 10 seconds and then off
charging case gives the headset a fully charged state	Blue light out
charging box is in low power state	Red light blinks five times and then turns off

## Product operating instructions

### 1.Power on

Method 1: Remove the headset from the charging compartment to switch on automatically.  
Method 2: Long press the left/right headphone function button for 3 seconds to switch on the phone.

### 2.Power off

Method 1: Put the earphones into the charging compartment and automatically shut them off;  
Method 2: If the headphones are not connected to the device after 3 minutes, they will automatically shut down.

### 3. Pairing

Step 1: Pair left and right earphones: Remove the earphones from the charging compartment and automatically pair them left and right.  
Step 2: After the left and right earphones are automatically paired successfully, they enter pairing mode and wait for the earphones to connect to the device.  
Step 3: Turn on the Bluetooth function of the device, select "TF-T01 Pro" to connect, and if the device is not connected within 3 minutes, it will automatically shut down.

## Touch operation

### Conventional mode

- Volume +: Click the right earphone MFB key (Beep : dong)
- Volume -: Click the left earphone MFB key (Beep : dong)

### Music Mode

- Play/Pause: Double-click left/right headphone MFB button
- Previous song: Triple-click left headphone MFB key
- Next Song: Triple-click right headphone MFB key

### Talk mode

- Answer an incoming call: double-click the left/right headset MFB key
- End call: Double tap the left/right headset MFB key
- Reject call: Long press the left/right headset MFB key for 2 seconds

### Game/Music /ANC noise reduction/transparent/normal mode

- Long press the MFB button on the right headset for 2 seconds to switch to game/music mode
- Long press the MFB button on the left headset for 2 seconds to switch between Normal mode /ANC mode/Transparent mode (Boot default is normal mode)

## Name and content of harmful substances in the product

Part Name	Harmful substance					
	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as housings	○	○	○	○	○	○
This table is prepared according to the provisions of SJ/T11364 ○: Indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit requirements specified in GB/T26572. X: Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirements specified in GB26572. Parts marked with "X" in the table cannot be substituted for hazardous substances due to the limitations of global technological development.						
This form is prepared in accordance with the provisions of SJ/T11364 Printed Circuit Board Components*: Includes printed circuit boards and their parts, electronic components, and so on; Depending on the product model, the product you purchase may not contain all of the above components.						
	Does not contain 6 kinds of toxic and harmful substances or contains but is less than the limit value, the letter "e" stands for the English letter electronic; The initials of electrical and environment; The curved arrows around it indicate recyclability.					



## Warranty Statement

DISCLAIMER  
No warranty, representation of position or other implication of any kind is made in this manual. The products, specifications and information mentioned in this manual are for reference only and are subject to change without notice.  
Warranty Statement.  
The products attached hereto are warranted as follows: If the product is damaged due to defects in quality under normal use within twelve (12) months from the date of purchase, the product will be repaired free of charge if it can be repaired, or replaced free of charge if it cannot be repaired as confirmed by the manufacturer, and the product will continue to be covered by the warranty for the remainder of the warranty period (a minimum of not less than 30 days) after the product is repaired or replaced. After repair or replacement, the product will continue to enjoy the warranty during the remaining warranty period (at least 30 days).  
The date of purchase is based on the date of the sales invoice. If the date of purchase cannot be determined, the warranty period will be calculated on the basis of thirteen (13) months from the date of manufacture of the product.  
For warranty claims, please call the product service hotline first and follow our instructions. To claim the warranty, you will need to provide a valid sales invoice that is accurate, complete and legibly filled out. The above warranty does not apply to the following.

- Exceeding the validity period of the three packages;
  - Altered warranty card, product code does not match the product body
  - Failure or damage caused by misuse, abuse or improper transportation, use, maintenance or storage.
  - Failure or damage caused by force majeure (e.g. earthquake, war, fire, etc.) or accidents
  - Damage to zippers, towers, or buckles due to excessive force
  - Unraveling or tearing due to overloading.
  - Any damage caused by sharp objects
  - Products that show signs of burns or flooding.
  - Damage caused by unauthorized modification.
  - Aging, discoloration, wear and tear, cracks and other wear and tear that occurs during normal use of the product.
  - This warranty will be void if the original labeling of the product is altered or destroyed.
- The product and the accompanying materials are complete and intact appearance is not the scope of the warranty, you should receive the product on-site inspection and any discrepancies to raise objections.  
The above warranty is our entire warranty in respect of the product and applies only within mainland China.  
Nothing in this document affects the rights of consumers which cannot be excluded or restricted under the law.  
Email: service@qscxsm.com

# TRANSFORMERS

**FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.