

The image displays a 'Quick Starter Guide' for the Jade8S smartphone, organized into five vertical columns. The first column features a large, stylized 'Jade8S' logo. The second column shows a line drawing of the phone from both front and back perspectives, with numbered callouts (1-11) identifying key features: 1. Earphones jack, 2. USB port, 3. Receiver, 4. Front camera, 5. Volume key, 6. Power on/off key, 7. Mic hole, 8. Back camera, 9. Flash LED, 10. Speaker, and 11. Fingerprint. The third column contains sections for 'Basic Operations' (Switch on, Switch off, Unlock) and 'Touchscreen Usage' (Tap/Touch/Click, Touch & Hold). The fourth column includes 'Home Screen' instructions and a screenshot of the phone's home screen, followed by 'Phone Settings' instructions. The fifth column provides instructions for the 'SIM card'. The document is titled 'Quick Starter Guide' at the bottom of the first and second columns.

Widget Android 8.1 offers multiple ease-of-use widgets on the Home screen. On this screen, Long press the screen and then the Widget tab, to display the widget selection page. Tap and hold a desired widget to be put on the Home screen, drag it left or right to locate it at a proper place, and complete the Widget settings as prompted. Move/Uninstall apps 1. Access the App main menu from the Home screen. On the ALL App page, tap and hold an app to be put on the Home screen, and drag it left or right to locate it at a proper place. In this way, a desktop app is created. 2. On the All App page, tap and hold an app, and drag it to Uninstall on the desktop. In this way, the app is removed from the phone. Note: You are not allowed to uninstall basic apps of the phone. 3. On the All App page, tap and hold an app, and drag it to APP Info on the desktop. In this way, details about the app is displayed. Call This phone allows you to make or answer a call, initiate an emergency call, and launch a multi-party call. On the bottom left of the Home screen, tap the Dial-up icon. The Dial-up page is displayed. Enter a phone number and choose between card 1 and card 2 to make the call. When you enter the number, the phone will automatically search among all contacts a number that best matches the entered numerals, to facilitate your operation. During a call, tap Add a Call, and this call automatically switches to Silent mode. Enter the number of another contact, tap Dial-up, and the previous call automatically switches to On-hold mode. After the second call is answered, tap Join. In this way, a teleconference is established to achieve a multi-party talk. Note: You need to subscribe to this service from your carrier before you use it. You are also allowed to initiate a call by selecting a phone number from the list of contacts or the Message page.	Contacts Tap Contacts to open it. The Contacts page offers management functions. It allows you to view the list of contacts and related details, make a call or send an SMS to a certain contact, and share the contact. Contact import : On the Contacts page, tap the Menu button, and choose Import/Export to select a mode for importing or exporting a contact. Add a contact : On the lower right of the Contacts page, tap the Add button to add a contact to your phone or USIM/SIM. Enter the name and number, and tap Finish. In this way, a contact is created. Contact list : On the Contacts page, tap the image of a contact. Details about the contact is displayed. This allows you to quickly make a call or send an SMS to the contact. Search contact : On the Contacts page, tap Search, and enter related information about a certain contact to search it among the list of contacts. Message Tap Message on the desktop. Then you can create and send an SMS or MMS. New message: Tap the Add icon on the upper right of the Message page. The Message creating page is displayed. Enter the name or phone number of the target contact into the Recipient bar. The phone will automatically search among the list of contacts for one that best matches the entered info. (You can also select the contact from the list of contacts or groups.) Input method: Tap the text editing zone to invoke the keypad. Long press the space bar to switch your input method. Send: After an SMS is complete, tap Send and choose between card 1 and card 2 for sending the SMS. Browser Tap Browser to open it. The Browser page allows you to access and manage WAP and WWW webpages. During a browse, tap the Menu button, choose Bookmark to display	select 8 as the hour and 0 as the minute, and select a m. Multimedia Function The phone also supports many multimedia functions, such as camera, music, and recorder. Tap any icon of theirs to open any one of them. Manage File This function allows you to copy, paste, share and delete a file stored on the SD card or other memory cards. Browser settings: Tap the Menu button and choose Settings. The Browser Settings page allows you to configure the browser as desired, such as common content settings and privacy & security settings. Advanced settings allows for resetting to default settings. E-mail Tap E-mail to open it. The E-mail page is display. On this page, you can send and receive an e-mail via the phone. For the first time you use this function, enter your e-mail account and password to set up an account. You can also set more accounts for ease of uniform management of all mails. Gallery Gallery saves and manages all pictures obtained via the camera, Internet, and the MMS received. On the Home screen, tap Gallery to open it. The Gallery page is displayed. It supports management of all pictures. Open a picture and then click the share button at the top. In this way, the picture is shared via the Bluetooth, message, and mail. Clock Tap Clock to open it. The Clock page is displayed. Set clock: Tap the alarm clock on the upper left. The Alarm Clock page is displayed. Add clock: On the Alarm clock page, tap "+" on the top to add an alarm. Edit the alarm time and tap Finish. When editing the alarm time, select Hour before Minute. For example, in the 12-hour format,	may switch to another trunk line with better quality. 4. Unable to charge the battery: Your battery may fail. Please contact the dealer. 5. SIM card error: The metal surface of the SIM card is dirty. Rub the metal contact terminals with a clean dry cloth. The SIM card is not installed properly. Install it again as specified in the user manual. The SIM card breaks down. Contact the network service provider. 6. Unable to enter anything into Phone Book: This is possible because that your phone book memory is full. Please delete needless data from Contacts. Google, Android, Google Play and other marks are trademarks of Google LLC. FCC Warning Specific Absorption Rate (SAR) information SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output. Before a new model phone is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body)as required by the FCC. For body worn operation, this mobile phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.0cm from the body.	This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.
---	--	--	--	---