
Meet Your

XT2317-2, XT2317-1, XT2317DL, XT2317-3

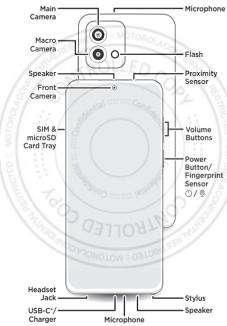

Put in the cards & power on



1 Insert the SIM tool into the hole next to the tray to pop out the tray.

Make sure you use the correct size SIM card and don't cut the SIM card.



2 Insert the SIM card with the gold contacts down, then gently push the tray into the slot.

Add a microSD card Mics (optional, sold separately) for additional storage.




3 Press and hold the Power button, then follow the prompts to get started.

Use the stylus

Navigate apps, take notes, handwrite text, edit screenshots, color images, and more.

- To remove the stylus, push the stylus inward to release it, then pull it out.
- To store the stylus, insert it into the slot, then push it until it locks in place.
- To set up your stylus, swipe up from the home screen and tap Settings > Stylus.

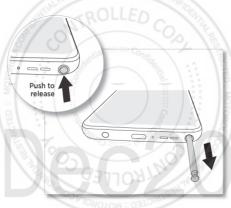

Help & more

Get answers undates and info-

- Help is here: From the home screen, swipe up and tap Settings > Help to learn how to use your phone and get support.
- Get more: Get software, user guides, and more at www.motorola.com/mymotog.
- Get apps: Tap Play Store to browse and download apps.

Caution: Your phone comes with a screen protector attached. A screen protector thicker than 0.5mm may reduce your phone's touchscreen sensitivity.

Legal information. This guide provides important legal, safety, and regulatory information that you should read before using your product. For the complete legal information, from the home screen swipe up and tap

Settings > Q, then type Legal information, or visit www.motorola.com/device-legal.

Water repellent. Your phone is not waterproof. For more about your phone's

water-repellent design and care, swipe up and tap **Settings** > **Help**. **Battery safety**. To prevent possible burning and injury, the battery in your

Battery safety. To prevent possible burning and injury, the battery in your phone should only be removed by a Motorola-approved service center or similar skilled personnel.

If your phone becomes unresponsive, press and hold the Power button until the screen goes dark and your phone restarts. Charge your phone using a compatible Motorola charger (may be sold separately). Use of other chargers is not recommended and may impair the charging performance. Don't charge your phone in temperatures below -20°C (-4°F) or above 45°C (13°F). Chargers that do not comply with applicable national standards may be unsafe, with risk of death or injury, and may cause slow charging or product damage. To view applicable standards and to learn more, see the "Legal information" section of this guide, or visit www.motorola.com/device-legal.

Warning about high volume usage. To prevent possible hearing damage, do not listen at high volume levels for long periods. When your headset volume reaches the high volume threshold, a warning shows, Tap OK to dismiss it, or wait one to five seconds, then press the Volume Up button to dismiss the alert and enable the volume to continue to be adjusted.

Disposal & recycling. For help recycling products and packaging responsibly visit www.motorola.com/recycling

Class 1 Laser. This device is classified as a Class 1 Laser product, which is safe in normal use per IEC60825-12007 CLASS 1 LASER PRODUCT and IEC60825-1:2014. This device compiles with 21 CFR 104010 and 104011, except for deviations pursuant to Laser Notice 50, dated June 24, 2007. Do not attempt to modify or disassemble.

Extreme heat or cold. Don't use your phone in temperatures below -20°C (-4°F) or above 45°C (113°F). Don't store/transport your phone in temperatures below -20°C (-4°F) or above 60°C (140°F).

Legal disclaimers. Features, services and applications are network dependent and may not be available in all areas; additional terms/charges may apply. Product specifications and other information contained in this guide are believed to be accurate at the time of printing. Motorola reserves the right to correct or change any information without notice.

Arbitration. Your purchase is governed by a binding arbitration clause. For more information and how to opt-out, see the legal guide that came with your phone.

Copyright & trademarks. MOTOROLA, the stylized M logo, MOTO, and the MOTO family of marks are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. Google, Android, Google Play and other related marks and logos are trademarks of Google LLC. microSD Logo is a trademark of SD-3C, LLC. USB Type-C* and USB-C* are registered trademarks of USB Implementers Forum. All other product or service names are the property of their respective owners.

© 2023 Motorola Mobility LLC. All rights reserved. Product ID: XXXX(Model XT2317-2, XT2317-1, XT2317DL, XT2317-3) Manual Number: 71160,8079281-A



With moto care, extend your warranty coverage up to three years, and take advantage of features like accidental damage protection. Visit <u>motorola.com/motocare</u>.





