


Appendix

Set-up photo:

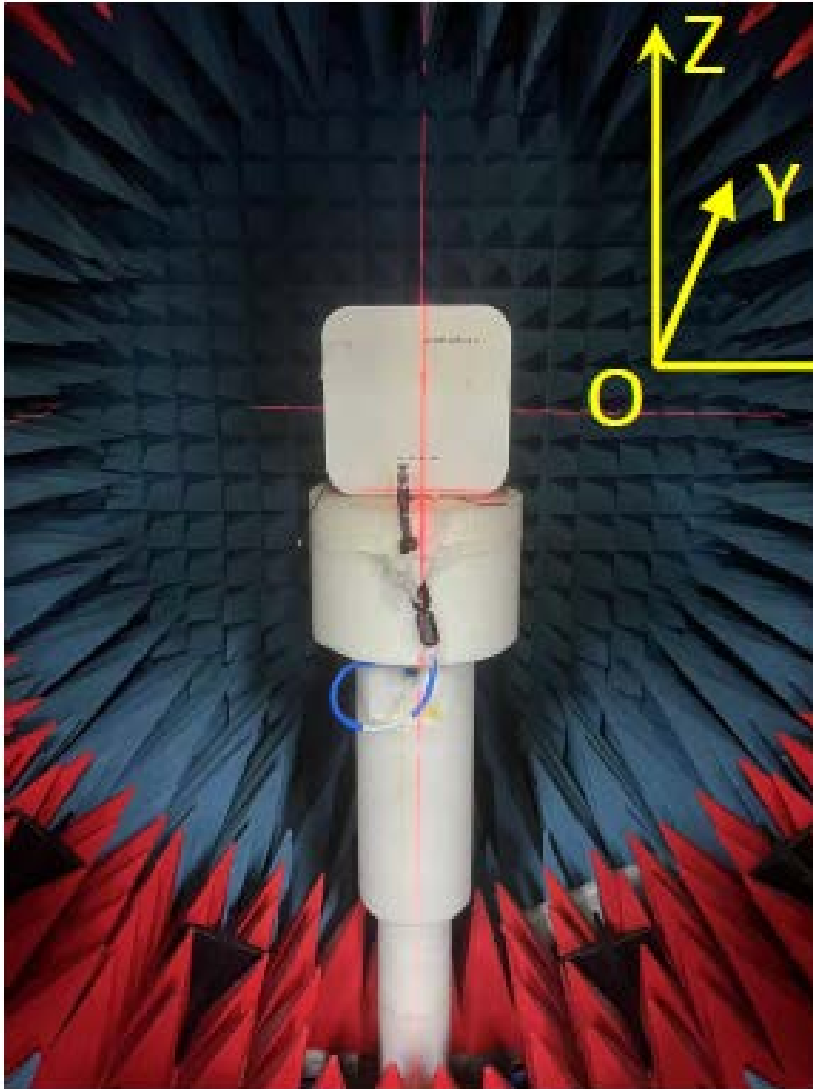

Setup Description:

- Step1: Fix the DUT on the pole in the center of the anechoic chamber.
- Step2: The whole antenna unit is connected with the coaxial line at the transmitter end of the anechoic chamber.
- Step3: Close the anechoic chamber door to avoid the external signal interference.
- Step4: Open the antenna measurement system and can select frequency or angle to test, and import the need frequency point to test.
- Step5: After testing, the test system can carry on far-field data conversion.

Antenna location

