

How to use your love egg:

1. Charge by plugging into USB charging point, and electrical connector into end of tail.
2. Slide off back of remote and remove disc. Replace cover.
3. To put egg into standby mode, press and hold button on egg's tail until light comes on. Press power button on remote to start vibrations.
4. Press right function button to explore 8 patterns. Press left function button to return to previous pattern. Press + or - buttons to explore 4 speeds.
5. Press power button on remote to return egg to standby mode. Press and hold button on egg's tail to turn off.
6. To use without remote, press and hold button on tail until light comes on. It is now in standby mode.  
  
Press button to start vibration and to explore 8 patterns.  
  
Press and hold to turn off.
7. To activate travel lock, double-click button on egg. Repeat to deactivate.
8. Use with water-based lubricant to enjoy your toy at its best.
9. Clean after use with sex toy cleaner and leave to air dry. If not in use for a few days, remove battery in remote.

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.