# **SYLVANIA**

#### **BLUETOOTH SPEAKER**

MODEL NO.: SP336

 


 
### INSTRUCTION MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

#### Orientation

Features & Controls





1. MPrevious buttor 8. TREBLE knob 2. SOURCE button 9. Right speaker

3 BASS knoh 10 POWER switch 4. VOLUME knob 11. WORKING MODE indicator

12. CHARGER indicator 5. Left speaker 6. Forward button 13. DC IN socket 7. MI Play/Pause/Pair/FM AUTO SCAN button 14. AUX IN jack

# **SAFETY INSTRUCTIONS**

"FCC RF Radiation Exposure Statement Caution: This Transmitter must be

installed to provide a separation distance of at least 20 cm from all persons.

External devices that have a built-in Bluetooth feature can connect wirelessly to the Blue

Power on the unit by slide the **Power** switch, WORKING MODE indicator will light blue and

2. Set the Bluetooth function of your external device to ON and begin searching for devices

A beep will be heard and WORKING MODE indicator light blue steadily that indicates a

Follow the "GETTING CONNECTED" steps above to pair your external device.

2. Turn on the music player program on your external device and set it to play. Normally, you

3. Audio played through the connected Bluetooth Device will now be heard through the

can control music playback with the ► II /PAIR, ► and ► buttons on the Bluetooth

Slide POWER switch to turn the unit ON and then press SOURCE button twice to select the FM radio mode.
 SOURCE Button sequence - Bluetooth -> AUX -> FM Radio
 Under the FM radio mode, press the PLAY button in 3 seconds to start AUTO SCAN all available FM radio stations.

Press the Previous/Forward button for tuning the previous or next scanned radio stations.

A few seconds later your Bluetooth connection chould be ready to used

NOTE: The effective distance between your external device and this apparatus is 10 meters(30 feet)

Once "SYLVANIA SP336" appears on the paired device list of your external device, select it.

#### FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

#### SURGE PROTECTORS:

It is recommended to use a surge protector for AC connection. Lightning and power surges ARF NOT covered

Bluetooth operation

If you are asked for a password, enter "0000"

PLAYING MUSIC FROM AN EXTERNAL BLUETOOTH DEVICE

connection has been established.

Slide POWER switch to turn off the unit.

Radio operation

This device is built-in FM radio function.

Twist the TREBLE knob and BASS knob to adjust the treble and bass levels

TREBLE AND BASS

GETTING CONNECTED

#### INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off

and on, the user is encouraged to try to correct the interference by one or more of the following measures \* Reorient or relocate the receiving

\* Increase the separation between the equipment and receiver. \* Connect the equipment into an outlet on a circuit different from that to which

the receiver is connected. \* Consult the dealer or an experienced radio/TV technician for help.

> 8A. An appliance and cart combination should be and uneven surfaces may cause the appliance and cart combination to overturn.
>
> 9. VENTILATION

VENTLATION

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheading. These openings must not be blocked or covered. The openings should never be blocked by placing the product

Auxiliary operation

TREBLE AND BASS

Specification

Bluetooth:

WORKING MODE indicator light red (AUX mode) 2. Set the volume to the minimum level with the VOLUME knob.

Plug in an AUX IN cable into the AUX IN jack on the top of the unit

wist the TREBLE knob and BASS knob to adjust the treble and bass levels.

DC 5V === 500mA (Micro USB)

built-in rechargeable lithium battery

Bluetooth V 2.1 + EDR

#### **SAFETY INSTRUCTIONS**

POWER SOURCES

This product should be operated only from the

type of power source indicated on the marking

abel. If you are not sure of the type of power

supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

GROUNDING OR POLARIZATION

This product is equipped with a polarized alter-nating-current line plug (a plug having one blad wider than the other). This plug will fit into the

power outlet only one way. This is a safety fea

the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the

To protect your product from a lightning storm

periods of time, unplug it from the wall outlet

and disconnect the antenna or cable system

This will prevent damage to the product due to

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric

or when it is left unattended and unused for long

ture. If you are unable to insert the plug fully int

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have

READ INSTRUCTIONS All the safety and operating instructions should

be read before the product is operated.

2. RETAIN INSTRUCTIONS

retained for future reference.

3. HEED WARNINGS
All warnings on the product and in the operating instructions should be adhered to.

4. FOLLOW INSTRUCTIONS

5. CLEANING Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

ATTACHMENTS

Do not use attachments not recommended by the product's manufacturer as they may cause

8. ACCESSORIES

WATER AND MOISTURE

Do not place this product on an unstable cart. stand, tripod, bracket or table. The product may fall, causing serious injury and serious da

serous injury and serious ana-age to the product. Use only with a cart, stand, tripod, brack-et or table recommended by the manufacturer os odd with the product. Any mounting of the product should fol-low the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. Ins will prevent camage to the product oue to lighthing and power-line surges.

POWER LINES

An outside antenna system should not be locat-ed in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall lint bus hower lines or circuits. When installing an outside antenna system, extreme can be list bus lices to lices from templers. noved with care. Quick stops, excessive force care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. 15. OVERLOADING

External (auxiliary) audio sources such as tablets smartphones or MP3 players can connect to the

1. Slide POWER switch to turn the unit ON and then press SOURCE button to select the

Plug the other end of the cable into the headphone or Line-Out jack of the external source.

2/3. If necessary, adjust the volume on the main unit by turning the VOLUME knob.

Turn on the external audio device and set it to play. Turn the external audio device's volume up to

16. OBJECT AND LIQUID ENTRY


#### **SAFETY INSTRUCTIONS**

voltage points or short out parts that could result in green electric shock. Never spill or spray any type

22. DAMAGE REQUIRING SERVICE
Unplug the product from the wall o of liquid on the product.

17. OUTDOOR ANTENNA GROUNDING

If an outside antenna is connected to the prod-uct, be sure the antenna system is grounded so as to provide some protection against voltage surges and buill-up static charges. Section 810 of the National Electric Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure grounding of the lead-in wire to an antenna dis charge product, size of grounding conductors, location of antenna discharge product, connec-tion to grounding electrodes and requirements for grounding electrodes.

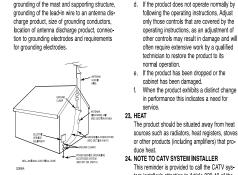

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, ectric shock or other hazards. 20, SAFETY CHECK

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
21. WALL OR CEILING MOUNTING

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

#### Table of Contents

Treble and Bass.

Specifications ...

Trouble Shooting .

Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

When the power-supply cord or plug is

b. If liquid has been spilled or objects have

c. If the product has been exposed to rain or

d. If the product does not operate normally by

The product should be situated away from hea

sources such as radiators, heat registers, stove

or other products (including amplifiers) that pro-

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the

NEC that provides guidelines for proper ground-ing and, in particular, specifies that the cable

fallen into the product.

Your Bluetooth light up speaker Charging instructions ... Charging the battery for first time Recharging the internal battery Battery Note and Care Features & Controls Bluetooth operation Getting connected Playing music from an external Bluetooth device Auxiliary operation .

#### Your Bluetooth Light up Speaker

 Supports Bluetooth v2.1+EDR 3.5mm AUX IN jack for player etc.

 Supports profile A2DP Internal rechargeable battery Supports automatic device pairing DC input for battery recharging

· Light up LED speaker

· Wireless range: 30 feet

 Pairing buttor Play/pause button

Skip forward/back buttor

 On/off switch Includes Treble/Bass/Volume control USB Cable

 Bluetooth/AUX/FM radio indicator AUX IN Cable Charge indicator User manua

 
# Charging instructions

This unit operates on a internal Li-ion battery that can be recharged either using the USB port on your computer or from a USB power adaptor (not included) with a rated output of DC 5V/500mA and

Charging the battery for first time
1). Charge the internal Li-ton battery a minimum of 3 hours prior to first use.
Plug the unit into the USB port on your computer or into a USB power adaptor

(not included) using the included USB cable.

2.) The CHARGER indicator will light red while charging and light off when the unit is fully charged. Unplug the USB cable from the power source once th



#### **Trouble Shooting**

| PROBLEM                                      | POSSIBLE CAUSE   | REMEDY  |
|--|--|---|
| GENERAL                                      |  |   |
| No Charging                                  | The USB power adaptor (not included) is not plugged into a wall outlet or the USB cable (included) is not plugged into the mini USB jack on the unit.  Wall outlet is not functioning. | Plug the USB power adaptor (not included) into a wall outlet and plug the USB cable (included) into the mini USB jack on the unit  Plug another device into the |
|  | Ů  | same outlet to confirm the outlet is working.   |
|  | Computer USB port is not functioning.  | Make sure your computer power<br>is turned on and try another USB<br>port.  |
| No Sound                                     | The unit battery is exhausted.   | Recharge the unit battery.  |
|  | Volume set too low.  | Press the volume+ button to increase the sound level.   |
|  |  |   |
| BLUETOOTH                                    |  |   |
| No sound when playing audio via<br>Bluetooth | Your Bluetooth device has been paired properly.  | Pairing your Bluetooth device according to the "Pairing a Bluetooth Device for the First Time" section.   |
|  | The unit placement out of range.   | Relocate the unit within Bluetooth operating range (30 feet).   |
|  | The volume control of your Bluetooth device is set at too low.   | Increase the volume of your Bluetooth device.   |
|  | The volume control of the main unit is set at too low.   | Increase the volume of the main unit to turn to your wish   |
| AUXILIARY                                    |  |   |
| No sound in AUX mode                         | Volume at minimum.   | Adjust the volume knob.   |

External device not connected Clear contact pins and connect

For service assistance and product information.

Please call: 1-800-968-9853.

Pour obtenir assistance et information appelez

1-800-968-9853.

Curtis International Ltd.

7045 BECKETT DRIVE, UNIT 15.

MISSISSAUGA, ON, L5S 2A3

www.curtisint.com

## LIMITED PRODUCT WARRANTY

To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853.

#### 90 day Year Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your period of littley (so) days min are date for original product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will lace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration. abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

#### FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.