

T1021P/ T1021T

Pa d



USER G UIDE



## CONTENT

FCC Warning:.....	1
TABLET PART.....	2
GETTING STARTED.....	4
Settings Menu .....	7
How to Use TF card .....	8
How to connect with computer.....	9
Connection to Internet.....	10
CAMERA.....	10
TROUBLE SHOOTING .....	12
Close Application .....	12
Mandatory Power off.....	12
Restore Default Setting .....	12
SPECIFICATIONS.....	14
WARNINGS.....	16

## User guide T1021P/T

### **FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
The device complies with RF specifications when the device used at 0mm from your body.

**Specific Absorption Rate (SAR) information:** This Pad meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. This equipment should be installed and operated with minimum distance of 0 mm the radiator to your body.

User guide  
T1021P/T

“To comply with FCC RF exposure compliance requirements, this grant is applicable to only mobile configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 0 mm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.”

## TABLET PART

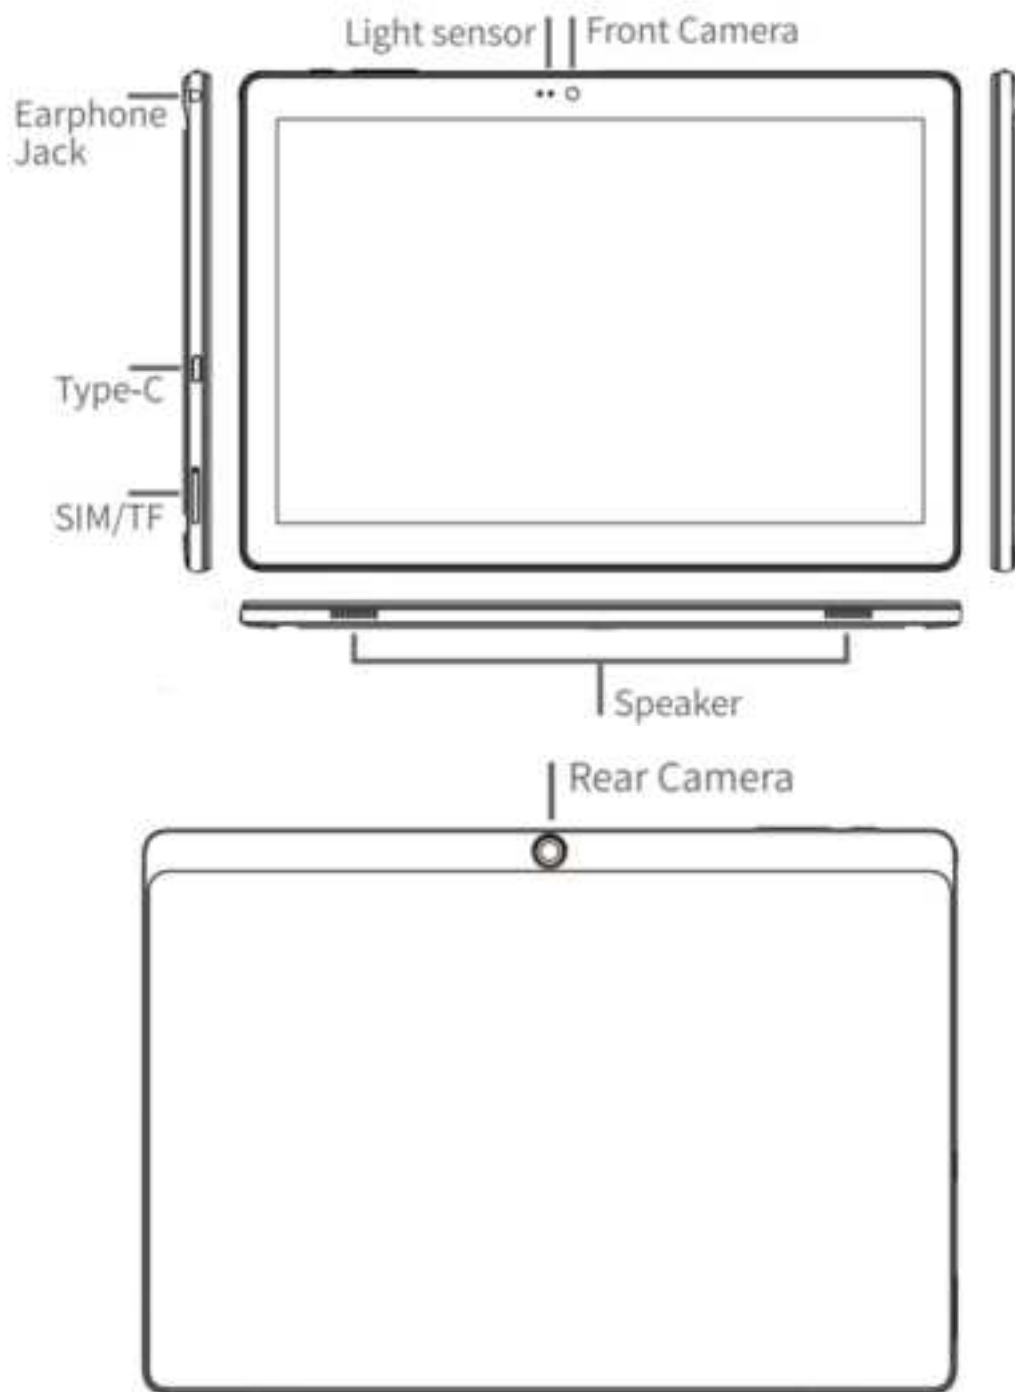

Tablet part table according to the image in previous page

NAME	FUNCTION
Volume +	Press to increase the volume.

## User guide T1021P/T

Volume -	Press to decrease the volume.
Power	Keep pressed to turn on/off the tablet. Shortly press to activate standby. Press and hold 8 seconds to do force power off.
Earphone jack	Connect earphone to this standard 3.5mm jack.
Type-C	PC connection/peripheral connection through HOST cable, for example keyboard or an USB device.
Rear Camera	5.0 MP camera.
Front Camera	8 MP camera.
SIM/TF	SIM card slot and Micro TF card slot.

## GETTING STARTED

### Battery charging

The tablet has a built-in rechargeable Li-polymer battery. To charge connect the AC power adapter to the USB jack on the left side of the tablet and the battery icon shows the battery status and charging status.

The tablet can be used even if the battery is being charged. No replacement of battery without authorization, or the explosion hazard might happen. Recharge it for at least half hour if it has been idle for long time and fails to start itself. Regularly recharge it at least one time monthly. 35° - 5° is the optimum temperature for the battery recharging or the battery performance might deteriorate slightly.

### Disposal

 
## User guide T1021P/T

The battery might contain the polluting material, please give it to the official recycling-station before disposing the tablet, and don't litter.

### How to use the protector cover

A protector cover come with the tablet in the box, there is 2 modes you can use the protector cover to stand.

User guide  
T1021P/T

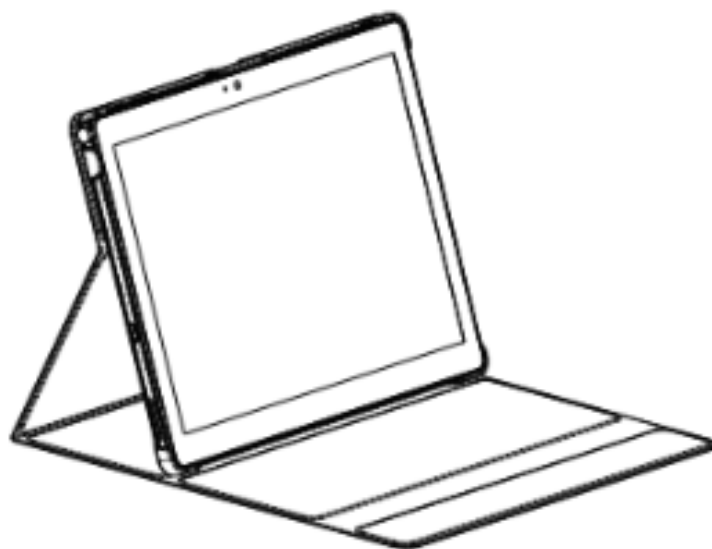



## User guide T1021P/T

### Power ON/OFF

ON: Press the power button continuous 5 seconds until the tablet turns on.

OFF: Press the power button for continuous 2 seconds and it will appear "Power off", "Airplane mode" and "Reboot" choices. Select "Power off" to turn off the tablet

Screen Lock: System is idle. The screen will turn off automatically after 1 minute inactivity. Manually activated by pressing the Power button once.

Screen unlock: Drag the lock icon up to unlock the screen.

### Home screen

The Desktop contains shortcuts to your most-used applications and widgets. Touch the screen icon to quickly search the World Wide Web using Google.

### Settings Menu

The settings menu allows you to adjust Tablet system configuration. To change settings touch the "Settings" menu icon on the Application menu, the Settings menu will open and then touch a category title to view further options:

Wi-Fi: Connect to/disconnect from wireless networks, view connection status.

Data usage: Enable/disable mobile data, view current usage, set mobile data limit (note: this function is available only on devices supplied with 3G).

Sound and notifications: Change audio profiles and notifications management.

Display: Change brightness, wallpaper, sleep settings, font size, etc.

## User guide T1021P/T

Storage: Manage NAND and Micro SD card, view available capacity, etc.

Battery: See battery status and powered-on time.

Apps: Manage applications, running services, etc.

Location services: Change approximate location detection, improve search results, GPS satellites, etc.

Security: Change screen lock type, encryption, password, credential storage, etc.

Language & input: Select language, add to the dictionary, edit on-screen keyboard settings, vocal search, etc.

Backup & reset: Backup & restore data, perform factory reset, etc.

Date & time: Set date, time zone, time, clock format, etc.

Accessibility: Set up large text, auto-rotate screen, speak password, etc.

About tablet: Information about your Android device.

### Network function:

Step 1 - At off mode insert SIM card in the slot.

Step 2 - After inserting SIM card turn on the tablet and wait to display the cell reception icon.

Step 3 - Once the connection with the operator, you can use the network connect to the internet.

## How to Use TF card

- This device support Micro SD card

1. Insert the TF card into the TF/SIMs card slot. Gently push TF card into slot until it clicks into place.

## User guide T1021P/T

2. A prompt will be seen on the screen saying "Preparing SD card".

### Removing TF card

1. Close all applications and documents which have been opened from the TF card.
2. Select "Setting" and find "Storage" then click "Unmount SD card".
3. A prompt will be seen on the screen saying "SD card safe to remove".
4. Gently press the TF card to remove and pull out the TF card.

Note: Insert the TF card in correct position, otherwise it will damage the card and the slot.

### How to connect with computer

Turn on your tablet before connect the tablet to PC by USB cable.

1. Use USB cable to connect tablet with computer.
2. The PC will detect an external disc named T1021P/T1021T, this is the internal memory of the tablet.
3. Then slide down from top to inside, click "USB for charging". Choose "File transfers", then you can transfer files from computer to the device. Please check below image for reference.



## Connection to Internet

Wireless:

1. Select "Settings".
2. Select "Wi-Fi" and slide OFF to ON status.
3. All detected wireless networks in the area will be listed. Click to select desired wireless connection.
4. Enter network key if necessary.
5. Once connected to a wireless network, settings will be saved
6. Wireless icon will appear on the taskbar when connected successfully.

\*Note: When the tablet detects the same wireless network in the future, the device will connect to the network automatically with same password record.

Connect to the internet and launch the browser.

 





## CAMERA

Touch the  icon to enter camera mode and the interface is shown as

User guide  
T1021P/T

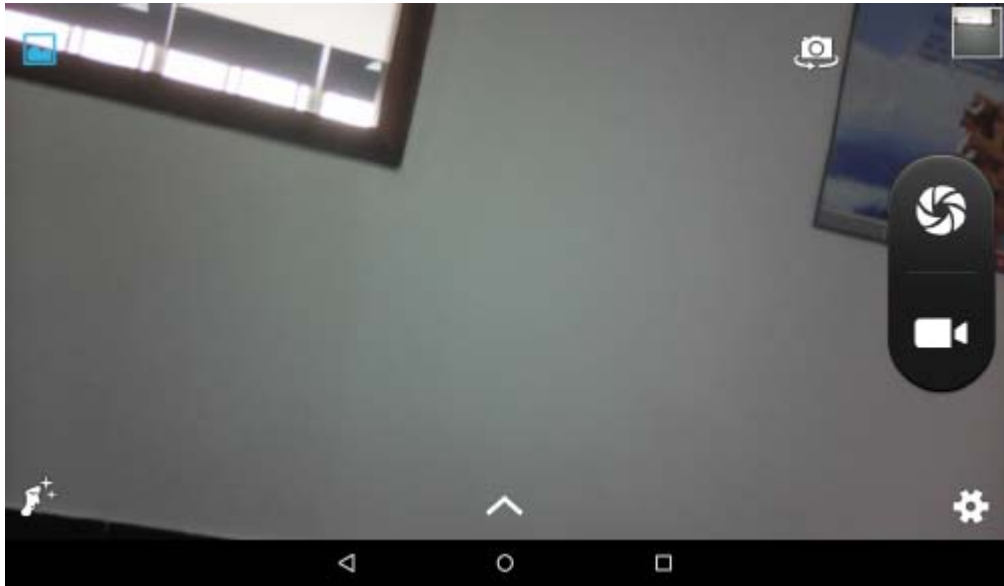follows:



1. Touch the  icon to take a photo.
2. Touch the  icon to start camera recording.
3. Touch the photo miniature on the top right to see the previous picture and you can also delete, share or set it as the wallpaper. Click return button to exit camera interface.
4. Touch the  icon to switch from front to back camera.

## TROUBLE SHOOTING

### Close Application

When an application is not responding you can close it and will make system response faster. Please shut down all idle applications to release memory and get the system speed back to normal.

To close the application, click the icon to enter the system configuration interface. Select the Apps, tap the application you want to close, a pop-up window will be displayed and finally tap "Stop" to close that application.

### Mandatory Power off

1. Press and hold the power button for 8 seconds and the device will be powered off.

### Restore Default Setting

If you want to reset the factory setting and erase all materials, please press Settings / Backup & reset / Factory data reset.

\* Warning: Factory data reset setting will delete your data and configuration of system and applications from downloading.

User guide  
T1021P/T

\*\* Please use this function carefully.

**SPECIFICATIONS**

Please visit [www.alldocube.com](http://www.alldocube.com) for the latest product information. Design, specifications and user guide are subject to change without notice.

Display: 10 inch IPS (1200\*1920) capacitive multi-touch screen.

CPU: T1021P: MTK6771(P60) Octa-Core, 2.0GHz

T1021T: Unisoc T618 Octa-Core, 2.0GHz

RAM Storage: 4GB\*

ROM Storage: 64GB\*

Expansion Memory: Micro SD card up to 1TBGB(not supplied)

Built-In Wireless: 802.11 a/b/g/n/AC

SIM 4G-LTE module:

- 3G: B2(1900)、B5(850)、B8(900);

- 4G: FDD LTE B2(1900)、B4(AWS)、B7(2600)、B8(800)、  
B28(700)

- 4G: TDD LTE B40(230)

Built-in Bluetooth: Version 5.0



# Use r guide T1021P/T

Navigation: GPS, Beidou, Glonass

FM Radio

Double camera: Front 5 MP and Rear 8 MP.








Adapter: USB adapter 5V-2A.

Operating System: Android 11










\*Note: Internal memory is divided in two partitions, system partition (hidden) and user partition (visible). In the hidden partition is included the software necessary to recovery the operative system and the installed applications, while in the visible partition you can find the user data.

# Use r guide T1021P/T




## WARNINGS

	<p>Correct disposal of this Product (Waste Electrical &amp; Electronic Equipment) (WEEE).</p> <p>Your product is designed and manufactured with high quality materials and components which can be recycled and reused.</p> <p>This symbol means that electrical and electronic equipment, at the end of life should be disposed of separately from your household waste.</p> <p>Please dispose of this equipment at your local community waste collection/recycling centre.</p> <p>In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!</p>
	<p>DO NOT place objects on top of the device, as objects may scratch the device.</p>
	<p>DO NOT expose the device to dirty or dusty environments.</p>
	<p>DO NOT place the device on an uneven or unstable surface.</p>
	<p>DO NOT insert any foreign objects into the device.</p>
	<p>DO NOT expose the device to strong magnetic or electrical field.</p>
	<p>DO NOT expose the device to direct sunlight as it can damage the device. Keep it away from heat sources.</p>

User guide  
T1021P/T

	<p>DO NOT store your device in temperatures higher than 40°C (104°F). The internal operating temperature for this device is from 20°C (68°F) to 60°C (140°F).</p>
	<p>DO NOT use the device in the rain.</p>
	<p>Please check with your Local Authority or retailer for proper disposal of electronic products.</p>
	<p>The device and adaptor may produce some heat during normal operation of charging. To prevent discomfort or injury from heat exposure, DO NOT leave the device on your lap.</p>
<p><b>RATING</b></p>	<p><b>POWER INPUT RATING:</b> Refer to the rating label on the device and be sure that the power adaptor complies with the rating. Only use accessories specified by the manufacturer.</p>
	<p>Clean the device with a soft cloth. If needed, dampen the cloth slightly before cleaning. Never use abrasives or cleaning solutions.</p>
	<p>Always power off the device to install or remove external devices that do not support hot-plug.</p>
	<p>Disconnect the device from an electrical outlet and power off before cleaning the device.</p>
	<p>DO NOT disassemble the device. Only a certified service technician should perform repair.</p>
	<p>The device has apertures to disperse heat. DO NOT block the device ventilation, the device may become hot and malfunction as a result.</p>

User guide  
T1021P/T

	<p>Risk of explosion if battery replaced by an incorrect type. Dispose of used batteries according to the instruction.</p>
	<p>PLUGGABLE EQUIPMENT the socket-outlet shall be installed near the equipment and shall be easily accessible.</p>
	<p>European Union: Disposal Information. This symbol means that according to local laws and regulations your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your product and/or its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.</p>
<p>MADE IN CHINA</p>	