 


Any maintenance and repair work must be carried out by trained experts. Failure to do so may result in the failure of the TPMS sensor. THINKCAR does not assume any liability in case of faulty or incorrect installation of the unit.

IMPORTANT: Read these instructions carefully and use this unit properly before operating. Failure to do so may cause damage and/or personal injury and will void the product warranty.

Components & Controls




Technical Parameters	
Weight	22g
Dimension(L*W*H)	About 71.5*40*15mm
Working Frequency	433.92MHz/315MHz
IP Rating	IP67

When replacing or servicing the sensor, please only use the original valves and accessories provided by THINKCAR to ensure proper sealing. It is mandatory to replace the sensor if it is externally damaged. Always remember to tighten the nut to the correct torque of 4N·m.

Installation Steps

1. Loosening the tire

 Remove the valve cap and nut and deflate the tire. Use the bead loosener to break the tire bead.



2. Dismounting the tire



2. Dismounting the tire

Clamp the tire on the tire changer, and adjust the valve at 1 o'clock to the tire fitting head. Use the tire tool to dismount the tire bead.



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not properly installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any

interference received, including interference that may cause this equipment to malfunction.

IC Statement

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1) This device may not cause interference; and
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Cet appareil contient des émetteurs / récepteurs exempts de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

5. Remounting the tire

Place the tire on the rim, ensure that the valve starts on the opposite side of the rim from the tire fitting head. Mount the tire over the rim.



Warranty

The sensor is guaranteed to be free from material and manufacturing defects for a period of twenty-four (24) months or for 31000 miles, whichever comes first. This warranty covers any defects in materials or workmanship under normal use during the warranty period. Excluded from the warranty are defects due to improper installation and usage, induction of defect by other products, damage due to collision or fire failure.