## 先风琴折

CN 基本参数



JOYROOM

使用说明书 | User Manual | Bedienungsanleitung | Manuel de l'utilisateur | Manuale dell'utente | Manual del Usuario | Instrukcja obsługi | Руководство по эксплуатации | Manual de utilizare | دليل المستخدم



①耳肌 / Earbuds / Ohrhörer / Écouteurs / Auricolari / Auriculares / Stuchawki douszne / Наушники-вкладыши / Са\$п / نطاق 相談 ( பஞ்ர ) பெல் பெல்கு பில்கு பில்கி பில்கு பில்கு பில்கு பில்கு பில்கு பில்கு பில்கு பில்கு பில்கி பில்கு பில்கு பில்கி பில்கி

CN 中文简体

EN English

产品图示

多功能触摸区域 ------

充电弹针 -----

配对操作

① 耳机从充电合 取出即可开机



常用操作说明

常见问题

安全准则

· 恢复出厂设置功能 ------

恢复出厂设置: 耳机开机状态下,同时点击左右耳机多功能触摸区域5次恢复出厂设置

温馨提示1:请每周为充电盒充电一次,避免充电盒过度放电; 温馨提示2:使用一般时间后,由于充电整点存在脏污或氧化,导致耳机无法充电甚至无法开机,您可 以使用消毒棉签蘸取酒精擦拭耳机充电触点和充电盒充电触点来解决此问题;

Q: 耳机连接不上如何解决?
 A: ①有可能是耳机低电,请将两只耳机都放入充电盒充电,30分钟后取出尝试重新搜索连接;
 ②若欲是10公系统,有可能是耳机没有及时回法您的手机,您可检查手机遮牙列表中是否已存在设备名"]少YROMO (popfireo C47",请直接点击设备名主题;
 ③请检查耳机是否已经连接上了其他设备,请在其他设备上断开连接后再尝试重新搜索连接;
 ④若以上操作无效,您可以对耳机进行恢复出厂设置。

Q: 耳机出现声音偏小的情况时如何解决? A: ①可能是手机的强改递造没有开启,请打开手机篮牙,点击已连接的耳机右侧图标,将"媒体通道 和通话通道"都开启;

②请打开手机的"设置"界面,检查手机的声音设置是否限定了最大音量; ③请查看两只耳机的出音孔和麦克风位置是否存在脏污,如果您看到有任何脏污,您可以使用消毒棉签 擦拭干净后再使用耳机。


Q: 充电盒充不进电如何解决? A: Q可能充电接口没有接好,请被出重新连接充电象,反复插坡几次,将充电线插到位; ②请使用符合QN认证的充电头搭配产品配线给充电盒充电,请勿使用三无充电头,否则可能会存在不兼 容或损坏不电盒电池号录法法使用。

清遵循本说明书的使用说明,勿以任何理由拆卸或改装产品,否则可能导致产品发生故障或烧毁;
 清勿将产品浸入任何液体或用水冲洗产品;
 清使用种合国家/地区安全性标准的适配器搭配充电配线给产品充电,否则容易造成产品电池损坏或发生危险;
 请在常温环境中使用和存放本产品,勿将产品置于温度过低或过高(0℃以下或者45℃以上)的环


來十7. 5. 请勿堵塞产品的开口处,如充电口、指示灯口等; 6. 请避免过大商量或者过长时间使用产品,避免造成头晕或对听力造成伤害。 7. 请勿在置暴天气下使用产品,置暴可能导致产品工作不正常,信号中断等现象。


① 在安装或操作本仪器之前,请参阅外部底部外壳上的电气和安全信息。 ② 请沟将电池放入火中或热烤箱中处理,或机械压碎或切割电池,可能导致爆炸。 ③ 电池承受极低的空气压力时,可能导致爆炸或产生易燃液体或气体泄漏。 ④ 请遵守安全说明否则会导致起火、触电、损坏或其他伤害。

Q: 耳机单边无音如何解决?
A: ①请将手机篮牙列表中已连接的耳机配对名删除;
②关闭手机篮牙,将两只耳机敌人充电盒;
③30秒后,将耳机从充电盒取出,重新开启手机篮牙进行搜索配对;
④若以上操作无效,您可以对耳机进行恢复出厂设置。

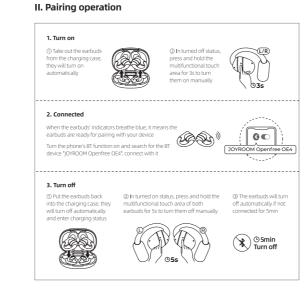

I. Product picture

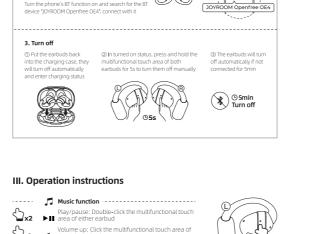

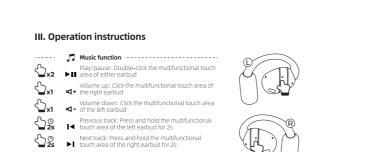

Previous track: Press and hold the multifunctional touch area of the left earbud for 2s

Next track: Press and hold the multifunctional touch area of the right earbud for 2s

Call function

Call function Answer/end call: Double-click the multifunctional touch area of either earbud Cancel call: Under dialing status, click the multifunctional touch area of either earbud © Reject call: When a call comes in, press and hold the multifunctional touch area of either earbud for 1s

Voice assistant Activate/turn off voice assistant: Triple-click the multifunctional touch area of either earbud to activate voice assistant; and then click to turn it off Restore factory settings: In turned on status, 5-click the multifunctional touch area of both earbuds simultaneously to restore factory settings

IV. FAQ

Q: Why can't the earbuds be connected?

A: ① The earbuds may be out of power, Please charge them for 30 minutes in the charging case before turning them on, and then search them for connection.
② If your phone uses iOS system, it may be that the earbuds did not reconnect to your phone in time. You can check whether the device name "JOYROOM Openfree OEA" is in the phone's BT list. If so, please directly click the device name for connection.
③ Check whether the earbuds are connected to another device. If so, please disconnect with it and make a reconnection again.
④ If above operations failed, you can restore it to factory settings. Q: Why only one earbud has sound?
A: ① Please delete the connected earbuds' name from your phone' BT list.
② Turn off the phone's BT function, put the two earbuds into the charging case.
③ After 30s, take out the earbuds from the charging case, restart the phone's BT function, and then

4. Please use and store it in normal temperatures; too low or too high temperature (below 0°C or above 45°C) is not permitted.

5. Do not block the openings of the product, such as charging port, indicator, etc.

6. Do not use it at high volume levels or for long periods of time to avoid dizziness or hearing

search and pair with the earbuds again.

(a) If above operations failed, you can restore them to factory settings.

V. Safety Criteria

Q: Why is the sound of the earbuds too low?

A: ① It may be that the playback channel of the phone is not turned on. You can turn on your phone's BT function, click the icon on the right side of connected earbuds to open the media and call channel.

② Open the "Settings" interface of your phone, check if there is a maximum volume limit on the

Q: Why can't the charging case be recharged?

A: ① The charging port and cable may not be connected properly, please pull the cable out and plug it in again repeatedly to make sure it is well connected.

② Please use a QI-certified charger together with the included charging cable to recharge the charging case. Never use unguaranteed chargers which may be incompatible or damage the charging case.

1. Please follow the instructions, do not disassemble the product or refit it for any reason, otherwise it may break down or burn down.
2. Do not immerse it in any liquid or wash it with water.
3. Please use adapters that conform to national/regional safety standards together with the included charging cable to charge the product, otherwise its battery may be damaged or cause safety problems.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

-Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. FCC Radiation Exposure statement The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.

It is hereby declared that this product model of JOYROOM, complies with the provisions of Directive 2014/53/EU and Directive 2011/65/EU The full text of the EC Declaration of Conformity can be found on the following website: https://www.joyroom.com

⚠ WARNING
 ① Before installing or operating the product, please refer to the electrical and safety information on the bottom of the shell.
 ② Disposing of the battery by throwing it into fire or a hot oven, or by mechanically crushing or cutting it may result in an explosion.
 ③ When the battery is exposed to extremely low air pressure, it may cause an explosion or lead to flammable liquid or gas leakage.
 ④ Please follow the above safety instructions otherwise it will cause fire, electric shock, damage or other injuries.

上下对折



保修服务说明 / Warranty service instructions A 在正常使用本产品过程中,如果本产品出现非人为损坏的性能故障,自购买之日起,消费者享受免费保修服务。保修期为 24 个月。 B 有下列情况之一,消费者不能享受免费保修权益:人为损坏;超过保修期;不能提供有效的购买凭证;未按说明书要求使用,维护、保养而造成产品损坏;未经授权,擅自拆卸、维修产品,或产品浸水;其他不可抗力造成的损坏。 A. If there is performance failure on this product and it's not caused by human error, we will provide a 24-month free warranty service for consumers from the date of purchase.

B. Warranty exceptions: Human damage; Expired the warranty period; Failure to provide valid purchase certificate; Product damage caused by failure to follow the use, maintenance and care instructions; Product damage caused by disassembling or repairing the product without authorization, or immersing the product without in water; Damage caused by force majeure.

RO Parametri





