

# NITRO BEE


USER MANUAL







# CONTENTS
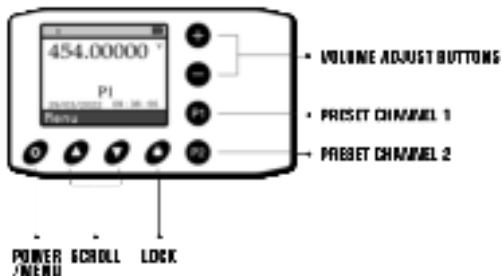
<b>Controls</b>	<b>03</b>	<b>Notes</b>	<b>13</b>
<b>Connections</b>	<b>04</b>		
<b>Rechargeable Battery</b>	<b>05</b>		
<b>Getting Acquainted</b>	<b>06</b>		
Changing Frequencies	06		
Modes of Operation	06		
Mode Selection	06		
Channel Group Selection	07		
Saving Channel Presets	07		
PC Programing	07		
Squelch	07		
Tone Codes	07		
Scan	08		
Key Beeps	08		
Backlight	08		
Dimmer	08		
Timer	08		
Autolock	08		
Charging	08		
Audio Priority	09		
<b>Specifications</b>	<b>10</b>		
<b>FCC Statement</b>	<b>11</b>		
<b>Warranty</b>	<b>12</b>		





# CONTROLS





## POWER/MENU

When off, quick-press [  ] to power on.  
When on, quick-press [  ] to open menu.  
When in menu, quick-press [  ] to accept.  
When on, long-press [  ] to power off.

## SCROLL

Quick-press [   ] to scroll up or down.  
Long-press [   ] to fast scroll up or down.

## LOCK

Quick-press [  ] when in menu to go back.  
Long-press [  ] to lock or unlock display


## VOLUME ADJUST BUTTONS

Quick-press [ + - ] to adjust volume up or down.

## PRESET CHANNELS

Quick-press [ **P1/P2** ] to shortcut to the preset channel. Long press [ **P1/P2** ] to save current channel or frequency as a preset channel.

## CONNECTIONS

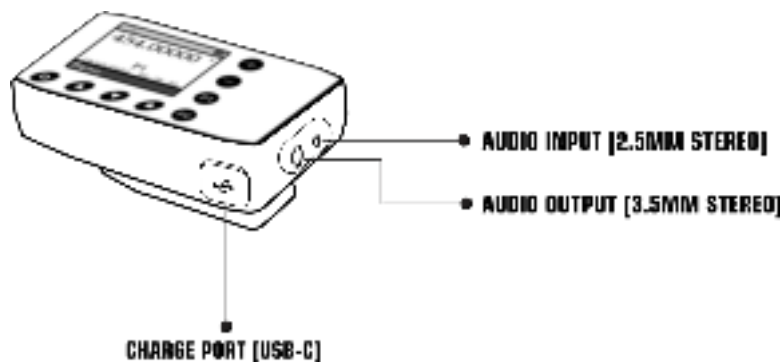

## **RECHARGEABLE BATTERY**

The Nitro Bee uses an internal, Fast-Charge, lithium-ion (Li-ion) rechargeable battery. It should be charged prior to use with the included USB-C charge cable. The battery indicator LED will illuminate red while charging and green when fully charged. When fully depleted, the Nitro Bee requires approximately 2.5 hour charge time to reach full charge.

# GETTING AQUANITED

## CHANGING FREQUENCIES

To change the frequency use the scroll buttons. Once the desired frequency is found, lock the keypad to prevent accidental changes. To lock the keypad, press and hold the Lock Button until you see "Locked!" appear on the display. To unlock the keypad, press and hold the Lock Button until you see "Unlocked!" appear on the display.

## MODES OF OPERATION

**Saved Channels:** In this mode, the Nitro Bee operates on channels that have been saved to memory. Software is available to add and remove channels.

**Manual Input:** In this mode, users can manually tune to any frequency between 400 and 480mHz.

## MODE SELECTION

Press [] > Select Ch. Mode > Select "Saved Channels" or "Manual Input", press OK

To select from the preprogrammed (Saved Channels)

Switch to "Saved Channels" mode: [] > [Ch. Mode] > [Saved Channels]

Select desired Channel Group: [] > Ch. Group > scroll to desired group and press OK.

Scroll up / down to select the desired channel, lock the keypad to prevent accidental changes.

# GETTING AQUANITED

## CHANNEL GROUP SELECTION

In the Ch. Group menu, use the scroll buttons to select the desired zone and press [⚙] to confirm selection.

## SAVING CHANNEL PRESETS

P1: To save channels to the P1 preset button, select the desired channel or frequency, then long-press P1 to save. Once saved, Pressing P1 shortcuts the Nitro Bee to the preset channel.

P2: To save channels to the P2 preset button, select the desired channel or frequency, then long-press P2 to save. Once saved, Pressing P2 shortcuts the Nitro Bee to the preset channel.

## PC PROGRAMMING

Channels can also be saved (with alpha-tags) via PC programming software, available from RT Systems Inc software.

## SQUELCH

Adjusting the Squelch setting increases or decreases the sensitivity of the Nitro Bee receiver.

A Squelch setting of 1 means the Nitro Bee is at its most sensitive setting (good for receiving weak radio signals). A Squelch setting of 9 means the Nitro Bee is at its least sensitive setting (good for blocking unwanted signals).

## TONE CODES

To add Tone Codes

Press [⚙] > [ToneCodes] > [Type] > scroll up/down to the desired tone code type, press OK

Press [⚙] > [ToneCodes] > [Code] > scroll up/down to the desired tone code, press OK.

# GETTING AQUANITED

## SCAN

This function scans Saved Channels or all frequencies between 400-480mHz (depending on active mode) [⚙️] > Settings > Scan > On / Off

## KEY BEEPS

Turns audible button press beeps on / off

[⚙️] > Settings > Key Beeps > On / Off

## BACKLIGHT

The Nitro Bee has an adjustable backlight. Both brightness and the duration of illumination can be adjusted.

## DIMMER

[⚙️] > [Settings] > [Backlight] > [Dimmer] > up / down to select desired brightness, press OK

## TIMER

[⚙️] > [Settings] > [Backlight] > [Timer] > up / down to select 5s, 10s, 15s, 20s, 25s, 30s, Press OK

## AUTOLOCK

Enabling this function automatically locks the keypad after the selected time.

[⚙️] > [Settings] > [Auto Lock] > 5s / 10s / 15s

## CHARGING

The Nitro Bee uses a USB-C programming port and can be charged using most USB-C charge cables. The charge time for a fully depleted battery is approximately 2.5 hours (varies depending on the power output of the USB port).

# GETTING AQUANITED

## AUDIO PRIORITY

The Nitro Bee can be used on its own with earbuds or speakers connected directly to the 3.5mm jack for listening to Race Control or other radio calls.

Alternatively, the Nitro Bee can be used in conjunction with a 2-way radio system (using cable PN CS-NITRO-ADPT-2) to allow two-way radio use, while giving Nitro Bee audio priority over 2-way radio calls. This audio priority function is required by many sanctioning bodies that allow 2-way radio use.

## SPECIFICATIONS

Battery Capacity: 1000mAh

Charge time: 2.5 hours (approximate)

Runtime: 4-5 hours (varies with volume setting)

Frequency Range: 400-480 mHz

Channel Capacity: 10,000 (10 separate groups, up to 1,000 channels each group)

Analog Sensitivity: 0.2 $\mu$ V @ 12dB SINAD

Digital Sensitivity: 0.25uV(BER:5%)

Adjacent channels selectivity:  $\leq$ 60dB@12.5KHz

Inter-modulation:  $\geq$ 65dB

Spurious response:  $\geq$ 70dB

Audio response: +1 ~ -3dB

Audio distortion:  $<$ 5%

Audio power: 1W

FM Noise  $\geq$ 45dB@25KHz /  $\geq$ 40dB @12.5KHz

## **FCC STATEMENT**

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference. NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy. If not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Verification of harmful interference by this equipment to radio or television reception can be determined by turning it off and then on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION OF THIS DEVICE TO RECEIVE CELLULAR RADIOTELEPHONE SERVICE SIGNALS IS PROHIBITED UNDER IC RULES AND FEDERAL LAW.

## WARRANTY

We guarantee our Radios, Intercoms & Headsets to be free from manufacturing defects in material and workmanship under normal use for a period of three (3) years from the date of purchase. Aviation headsets are warrantied 7 years. All other Rugged Radios branded products carry a one year warranty.

In the event that a defect covered by the warranty occurs during the applicable period stated above, Rugged Radios, at its discretion, will either repair or replace the product; such action on the part of Rugged Radios shall be the full extent of Rugged Radios' liability and the Customer's sole and exclusive repairation.

Rugged Radios shall not be responsible for any defects or damage that in Rugged Radios' view are a result from the mishandling, abuse, misuse, improper storage or improper operation of the device, including use in conjunction with equipment that is electronically or mechanically incompatible with, or of inferior quality to, the product, as well as failure to maintain the environmental conditions specified by the manufacturer.

**Note:** Features & Specifications are subject to change without notice. Rugged Radios is not responsible for unintentional errors or omissions on its packaging.

## This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are approximately 20 lines visible. The paper has a slight shadow on its right side, suggesting it's resting on a surface.



**WWW.RUGGEDRADIOS.COM**