



TRY IT ON

The Right Fit Equals the Best Experience:

For the best sound performance and for a secure, comfortable fit, adjust the earbuds so that they rest gently in your ear and drape around the back of your neck.

POWER & BATTERY CHECK

Use the Micro USB charging port to charge the earbuds. The earbuds need to be charged for at least one hour before the first use. The LED light will be red until fully charged.

For turning the device On and Off, press “Call” button for 2-seconds.

Check the battery’s level by pressing the “Call” button once when the power is on.

Please leave plugged in for 2.5 hours for full charge.

GETTING CONNECTED

1. First Use, Right Out of the Box:

With earbuds turned off, activate wireless pairing mode by pressing the “Call” button for 10 seconds. The device will turn on and the LED light will flash red/blue to indicate pairing mode.

When pairing other wireless devices, use the same procedure listed above.

2. Pairing to Your Earbuds:

Activate the Bluetooth feature on your mobile device or computer, then use menus to “Add”, “Search” or “Scan” for a new wireless device.

3. Selecting and Connecting:

Select “Kyte Wireless” from the list of wireless devices shown on your bluetooth menu.

If the device asks for a passcode, enter four zeros (0000). You may see it as (****) on your screen. Your device may also ask to confirm the wireless connection after pairing.

The earbud’s LED light will stop flashing red and blue once successfully connected.

You can now make a call using your device’s keypad or voice-dialing feature.

FEATURES

1. Call Options:

To take an incoming call or end a call, press the “Call” button once.

To reject a call, hold the “Call” for 2-seconds.

To hold the 1st call and answer the 2nd call, press the “Call” button once while on the line.

To switch between calls, hold the “Call” for 2-seconds while on the line.

To end the 2nd call and retrieve the 1st call, press the “Call” button once while on the line.

To redial, press the “Call” button twice quickly.

To use the voice-control feature to make a call, press the “Call”.

Reconnect lost Bluetooth connection by pressing “Call” once if the earbuds do not connect automatically.

Play or Pause Audio, press the “Call” Button once during audio playback.

Press both the “+” and “-” during a call to enable the mute function.

2. Selfie Option:

While camera applicaiton is open on mobile phone, press the “+” button twice to shot a “Selfie”.

USER’S MANUAL

3. Music Options:

To play/pause music, press the “Call” button once.

To increase volume, click and hold for 2-seconds the “+” button. Press the same button once to skip the next song.

To decrease volume, click and hold for 2-seconds the “-” button. Press the same button once to play the previous song.

KEY:

“Call” Button - Answer Call / Play / Pause

“+” Button - Increase Volume/Next Song

“-” Button - Decrease Volume/Previous Song

TIPS

1. Stay Near Your Device:

Your wireless connection has a working range of up to 33 feet before audio degrades and the connection is dropped. For the best reception, keep your mobile device next to your body.

2. Learn How to Reconnect:

Your earbuds will try to reconnect after a lost connection. If it does not connect, press the “Call” button once or manually reconnect via your phone’s wireless connection menu.

3. Decipher the Beeping Sounds:

If you have a call on hold, you will hear a beep every 5 seconds. If you are on mute, your will hear a beep every 30 seconds.

In addition, if you press a button for an extended amount of time (i.e. longer than a 2-second timeframe), a feedback beep will be heard. For example, accessing the Voice Control feaure on your phone.

Micro USB Charging Port



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help
- Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.