


# Outdoor Waterproof Bluetooth Speaker


## Manual

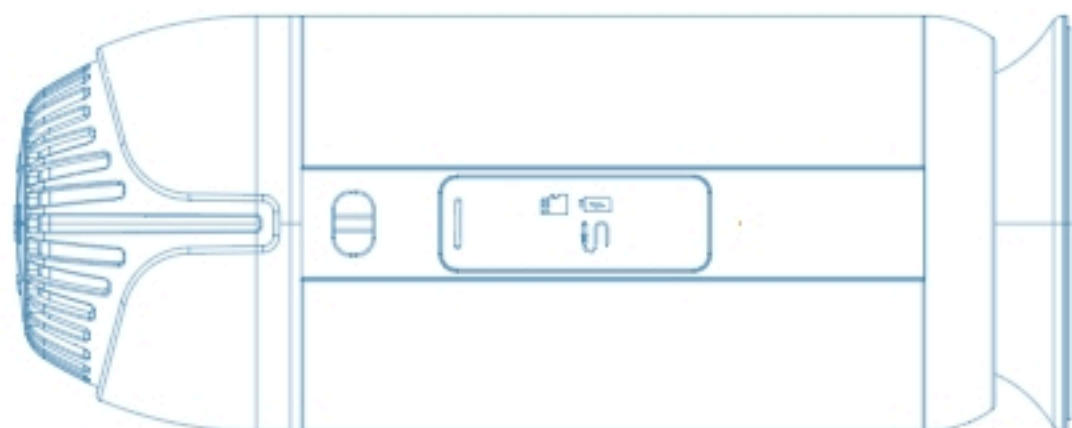


### Specifications and parameters

- Product Name A15
- Bluetooth Version 5.0
- Bluetooth Range  $\geq 18\text{M}$
- Horn Specification 52mm
- Frequency Response Range  $F0 \sim 18\text{KHz}$
- Input Power Type-C 5V/1A
- Battery Capacity 3.7V/1500mAh
- Battery Life 4H
- Charging Time  $3 \pm 1\text{H}$

### Accessories

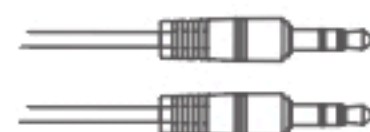

Audio Cable\*1

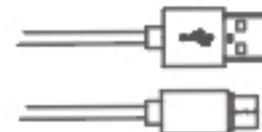

Type-C Cable\*1



Lanyard\*1

### Connect and play




- **Bluetooth**  
After turning on the speaker, the speaker enters the bluetooth waiting state; turn on the bluetooth of the mobile phone and find the bluetooth name "A 15" and click to connect.
- **TWS interconnection**
  - Two "A15"s enter the Bluetooth pairing state at the same time at close range (make sure the Bluetooth is disconnected from other devices).
  - select one of them as the main speaker and press and hold the "M" button for 2 seconds, the speaker enters the TWS automatic pairing state.
  - and the pairing is successful Then find the Bluetooth name "A15" and click to connect.
- **AUX audio cable**  
Plug the AUX cable into the mobile phone and the speaker respectively, and play after the connection is successful.




- **TF Card (supports up to 64G)**  
After inserting the TF card into the speaker, the speaker automatically reads the card and plays the songs in it.  
Supports APE/FLAC/WMV/WAV/MP3 formats for playback.

### Buttons and Functions

- ① Power on/off
- ② Volume down/ Previous song
- ③ Play/pause; answer/hang up/reject
- ④ Volume up/Next song
- ⑤ Switch play mode



Button	Operation	Function Description
	Long press	Long press 2S to turn on/off; When the audio is not working, press and hold 8S to reset
	Press	Short press to switch light mode.
	Press	Long press 2S to switch to the previous song.
	Long press	Volume down ;
	Press	1.Music playing status:short press to pause/play; 2.Incoming call status: short press to connect the call; 3.When the call has been answered: short press to hang up the call.

	Long press	Bluetooth pairing status: Long press 2S to disconnect the Bluetooth connection; There is an incoming call status: long press 2S to reject the incoming call.
	Press	Long press 2S to switch to the next song.
	Press	Long press 2S to switch to the next song.
	Long press	Volume up.
	Press	Short press to switch playback mode: Bluetooth, AUX or TF card playback mode;
	Long press	Bluetooth pending connection: Long press 2S to enter TWS pairing mode; TWS paired state: long press 2S to exit TWS pairing.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.