



NITRO 55A User Manual

Overview



- 1 Front Camera
- 2 Volume Keys
- 3 Power Key
- 4 Recent
- 5 Home
- 6 Back
- 7 Rear Camera
- 8 Flash

SIM Card Installation

A SIM card contains your phone number and other necessary data. Your device has one SIM slot that supports 4G LTE.

To Install the SIM Card

1. Make sure the device is turned off and the front facing down. Hold the keys and use the notch at the bottom corner to remove the cover. Use a metal object, thin edge such as your fingernail or a credit card to carefully pry along the seam to loosen, then lift the cover until it detaches completely.



2. Remove the battery if it is in. Locate the SIM card slot and insert the proper SIM card into the proper slot. For more information on SIM card installation, check out the included **SIM Card & Micro SD Card Installation Guide**.

3. To turn on/off a SIM card go to Settings > SIM management. Then slide the SIM card slider. To turn on/off a SIM card? 1. data connection, go to Settings > SIM management, click on the "Data connection" option, and select a SIM card that has 4G capability.

Keys/Touch Points

Power Key []: To power on/off, press and hold power key for a few seconds. When it is ON, press the power key once to activate or deactivate the screen.

Home key []: Touch the key to return to the home screen. In idle screen, touch and hold the key to view recently opened apps.

Options key []: In home screen, touch the key to set wallpaper, manage apps, and to access system settings. Touch it to view menu options.

Back key []: Touch to go back to the previous menu.

Charging battery

New batteries are shipped partially charged. Before using your device, install and charge the battery. Batteries perform best after several full charge / discharge cycles.

Charging Your battery

Please charge the battery using the following methods:

1. Charge the phone by connecting it to a computer via the USB cable.
2. Connect the USB cable to the phone and the AC adapter. Plug the AC adapter into an electrical outlet to start charging.

As the battery charges, an icon will appear in the status bar of the home screen. When the battery is fully charged, a full battery icon appears on screen.



Warning:

- Do not remove the battery while the device is charging.
 - Use only the AC adapter & USB cable provided with your device.
- Note:** For safety, the battery will stop charging if it is danger of overheating.

Audio Profile/Sleep Mode

Intelligent keyboard

From the home screen, swipe up to open "APP Drawer" and select "Settings". Go to "Sound" and change the audio settings to change sound levels and change your ring tones.



Sleep Mode

Turn on sleep mode to save your battery power.

1. On the home screen, touch "App Menu" and select "Settings".
2. Select "Display".
3. Select "Sleep" and choose a time interval from the list.

Screen Lock

1. On the home screen, touch the "APP Menu" and select "Settings".
2. Select "Security and location" then select "Screen lock".
3. Select the desired type of lock & follow the prompts to set up.

Phone Features

Description Icons

Icons	Descriptions	Icons	Descriptions
	Shows the phone's network signal strength.		Shows the phone's battery capacity.
	Speaker has been activated.		You have inserted SIM.
	Call on hold.		USB storage turned on.
	Flashlight icon is set on vibration.		Night mode.
	4G network in use.		3G network in use.
	You have missed calls.		A clock alarm is active.
	Wi-Fi.		Bluetooth ON.

Main Menu & Its Functions

Swipe up to enter the main menu. Allow you to view a list of features available in your phone.

1. **Clock**
Allow you to set the Alarm from Clock.
2. **Browser**
Browse the Internet. Search engine default set to Google.
3. **Calculator**
Allow you to make tedious calculations quickly.
4. **Calendar**
View the calendar & add events.
5. **Camera**
Allow you to click pictures anytime you want. Your Nitro 55A front & back high resolution camera with 130 flash supporting many special features like Face Detection which ensures you to take good quality of pictures and zoom. From in the Gallery, in Camera, easily choose Camcorder to record Video.
6. **Contact**
To see your list of Contacts. Access your digital phonebook through this function.
7. **Email**
Allow you set up your POP/IMAP email accounts.

Phone Features

8. Gallery Go

Gallery Go: Gallery Go is a light, fast and easy to use offline gallery.

9. Google Play

Google Play is your entertainment outboard. It brings together all of the entertainment you love and helps you explore it in new ways, anytime, anywhere.

Note:

To use the app please connect to an internet connection.

10. Messaging

Allow you to view messages sent & received as a thread.

11. YouTube Music

The music streaming app. Made by YouTube. Discover all the music on YouTube that you can't find anywhere else, organized in one new app and web player.



12. Phone

Allow you to make phone calls.

13. My Message

You could browse, view, modify and install your files.

14. My Data

This service is provided by the operator. It provides phone plan information.

15. Sound Recorder

Allow you to record sounds.

16. Videos

View from list of videos.



NITRO 55A

Phone calls/Texting

To Make Phone Calls

1. Touch the phone icon.
2. Click on a contact from your contact list to make a call.



Composing text messages

Maxwest automatically corrects and suggests words as you type.



Cut, Copy and Paste

Touch and hold text content to bring up the magnifying glass, and then slide your finger to move the insertion points. Then choose to cut, copy, or paste. It is very easy to copy text from web pages, email, or text messages.

WLAN

Turn on WLAN

Maxwest supports WLAN Direct which allows Android® 4.1 (Jelly Bean) or later devices with the appropriate hardware to connect directly to each other via Wi-Fi without an intermediate access point. Using the APIs, you can discover and connect to other devices, if each device supports Wi-Fi Direct, then communicate over a speedy connection across distances much longer than a Bluetooth connection. This is useful for applications that share data among users, such as a multiplayer game or file sharing.



- a. Enter "Settings" > Click "Networks & Internet" > Select "Wi-Fi" > Select "Wi-Fi preferences" > Select "Advanced" > Then click "Wi-Fi Direct" to access Wi-Fi Direct feature.
- b. After click "Search" at the bottom, and it will display the available devices.
- c. Click "DIRECT-48WP (Max)" (In this case specifically) and it will give you option to connect.
- d. Click "Connect" to connect and it will pop up an interface to confirm like below.

Camera



e. Click "OK" and the device will be connected.

Camera

Capture images or record videos and share with family and friends!



Connecting to E-mails

Log into your e-mail accounts

You may log-in to your e-mail accounts from the phone to access your e-mails.

From the home screen select Application "Email" (ie) and then enter your email address, password and tap "Next". Select which type of email account you are setting up and enter the proper settings: (POP3 / IMAP / Microsoft Exchange Account).

You will need to enter your user name, password, and server information depending on the type of email account or you can change the settings by tapping "Manual setup" at the top right corner screen. Tap "Next" and select "OK" to accept.

Compose new

1. Press MENU and select "Compose".
2. Add recipients by typing a name or email address in the "To" field. Matching contacts will appear. Select a recipient or continue typing in the email address to send to multiple contacts.
3. Once finished typing the mail, select "Send", "Save as draft", or "Discard".
4. The reply tab contains "Reply", "Reply all" and "Forward" options.

Delete message

1. Go to inbox to display messages.
2. Touch & hold the message you want to delete.
3. Select "Delete".

File Transfer

Connecting Smartphone to PC

Connect the USB cable to your smartphone and computer. Once connected successfully, on your phone slide the top menu down and click on "Android System". Then, press "Transfer files" button.

A new storage named Nitro 55A will appear on your PC like "My Computer". Click on it to review files in the smartphone and for to transfer documents between devices. When finished, press Disconnect device from PC.

Note: Photos taken with the camera will be saved under the "DCIM" folder. Screenshots captured will be saved under "Pictures" folder. MP3 Musicals in the "Music" folder for the file to be played properly.



Screen Capture

Press Volume+ and power button at the same time to capture screenshot. All captured screenshots will be saved under gallery.



Warning

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS (Canadian). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Note: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/television technician for help.

EMF/ELF tests are conducted using standard operating positions as specified by the FCC/ISED with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level. The actual SAR level of the device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new device is available for use to the public, it must be tested and certified by the FCC/ISED that it does not exceed the exposure limits established by the FCC/ISED. Tests for each device are performed in pattern and location as required by the FCC/ISED.

With body worn operation, this device has been tested and meets the FCC/ISED RF exposure guidelines when used with an accessory designed for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10 mm from the body.

When compliance with the above restrictions may result in violation of RF exposure guidelines.