
Full Size Wireless Keyboard

Round Membrane Pop Keys

- 1 x Full Size Keyboard
- 1 x USB-A 2.4Ghz Receiver
- 1 x Instruction Manual

Back

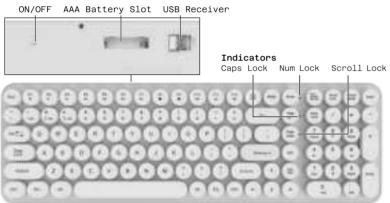

*product design may vary

Product Requirements:

- → PC with a USB-A port
- → 1PC AAA Battery

LED Indicators:

- → Num Lock indicator:Flashing Orange BT1 Pairing: Solid Orange -Successfully Paired / Num Lock
- → Caps Lock indicator: Flashing Green BT2 Pairing; Solid Green Caps Lock
- Scroll Lock indicator: Flashing Red 2 4G Pairing; Solid Red Scroll Lock

Keyboard Multimedia Keys:

- → Fn Key + F1 Media Player ⇒ Fn Key + F2 - Volume -⇒ Fn Key + F3 - Volume +
- ⇒ Fn Key + F4 Mute → Fn Key + F5 - Previous Track ⇒ Fn Key + F6 - Next Track
- → Fn Key + F7 Play/Pause → Fn Key + F8 - Stop
- → Fn Key + F9 Home → Fn Key + F10 - Mailbox → Fn Key + F11 - My Computer
- → Fn Key + F12 Collect

Connecting via the Receiver:

- -> Remove the battery cover on the back of the keyboard and install 1 AAA battery, align the "+" and "-" symbols, and switch the power to on.
- → Hold the Fn+3 key. When the Scroll Lock indicator flashes red, the keyboard is in pairing mode.
- → Plug the receiver into your computer. The keyboard and receiver will automatically pair. The scroll lock indicator will fade and the Num Lock indicator will turn solid orange when pairing is successful.
- → Note: To use the media keys hold FN and press the secondary function (play/pause, volume up/down, etc.) you'd like to use.

Connecting via Wireless Pairing:

- \Rightarrow Remove the battery cover on the back of the keyboard and install 1 AAA battery, align the "+" and "-" symbols, and switch the power to on.
- → To enter pairing hold Fn+1, the Num Lock indicator will flash orange. Hold
- Fn+2 to use secondary pairing, the Caps Lock indicator will flash green. \Rightarrow Use your device to pair with "PCWR-001". The Num Lock indicator will turn solid orange when the keyboard has paired successfully.
- → The keyboard can be connected to two devices at the same time. Press Fn+1 or Fn+2 to switch between the two devices.
- → Note: The keyboard will automatically pair the same way the next time it is powered on. The indicator will flash orange or green to show it is in wireless pairing.

Troubleshooting:

- → If the keyboard is not connecting make sure the receiver is properly plugged into the computer or make sure wireless pairing is enabled on your device and pairing is successful.
- ÷ If the keyboard is not responding check if the battery is low. If it is please replace the battery.
- → If you're still having connectivity issues, move closer to the device or reduce interference from other wireless devices by moving them away from the keyboard.
- → Having trouble with your device? Be sure you're running the latest software on your devices. You can do this by doing a 'software update' in the settings of your device.

Safety:

- → Do not use near any water source.
- → Do not modify or repair this device.
- Do not use chemical detergents to clean your device, use a soft dry cloth WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Keyboard Model: PCWR001 FCC ID: 2AO23-PCWR001 Receiver Model: HTX1 FCC ID: 2AO23-HTX1 Receiver Input: DC 5V Working distance: 8-10m

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Review or relocate the receiving antenna.

- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The devicecan be used in portable exposure condition without restriction

gemsfindyours.com 7157 Shady Oak RD.Eden Prairie, MN 55344 Distributed by Chug, Inc.

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at

FRONT

BACK