AUSDOM®

User Manual



AUSDOM' Enjoy Smart Life

Model: Bass One

Wireless Headphones

For more information, please visit our official website

Your valuable comments and suggestions on improving AUSDOM products are welcome!

support@ausdom.com sales@ausdom.com

www.ausdom.com

1. Introduction

Thank you for purchasing the Ausodm Bass One Wireless Active Noise Cancelling Headphones. Ausdom Bass One active noise cancelling technology detects and blocks out the noise around you while travelling, working or going anywhere, which enables you to focus on what you want to hear. Ausdom Bass One features IVC-Bass function that allows for free bass adjustment to a perfect balance, which delivers you an unprecedented and incredible listening

Bass One can be used in both wired and wireless modes via 3.5mm audio cable and wireless V5.0. Its powerful and rich bass speaker brings you amazing and fabulous audio


Note: Please read the user manual carefully before using, and keep it properly for future reference.

2. Package Contents

- -1 x Wireless Headphones
- -1 x Type-C Charging Cable
- -1 x 3.5mm Audio Cable -1 x User Manual
- -1 x Compact Carrying Case
- -1 x Airplane Adapter

3. Product Overview

EN-2 EN-1

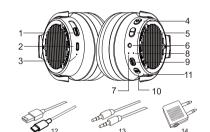

1.IVC-BASS Slider 2.Type-C Interface for Charging

3. Charging LED Indicator 4.Next Track/ V+

5.Previous Track/ V-6.3.5mm Line-in Port

7.Microphone 8.ANC LED Indicator

9.ANC Button 10.Power Button 11.Power LED Indicator

12.Type-C Charging Cable 13.3.5mm Audio Cable 14.Airplane Adapter

4. Charging the Headphones

Use the supplied Type-C charging cable to recharge the headphones. It takes about 3.5 hours for the first charge, and only 3 hours for a subsequent charge. The headphone Charging LED turns to solid red during charging. When the battery is fully charged, the Charging LED turns to green.

When the battery is low, the Power LED Indicator lights up red. At the same time, the headphones also provide a low

Note: It is strongly recommended fully charging for the first use. Playtime varies according to the volume level and audio content. The headphones will power off automatically if you plug the type-c cable in for charging. When you listening to music under Wireless mode, and you can't turn on the headphones while charging.



5V/1A USB charging adapter

5. Pairing with Wireless-Enabled Devices

- 1). Make sure the headphones are off. 2). Do not place both devices more than 3ft/1m away from
- 3). Turn on the Wireless function of your devices. 4). Press and hold the power button on the headphones

EN-3

until it powers on but don't let go just yet. Continue holding down on the power button until you see the power LED indicator flashes blue and red alternately, which means your headphones are in "pairing mode" waiting to be paired with your device. You will hear a prompt. 5). Select the "AUSDOM BASS ONE" to pair. Once

successfully paired, the power LED turns to solid blue. You will hear a prompt. Note: Before pairing the headphones with computer, please

make sure your computer or laptop has the built-in Wireless feature. If not, you must purchase a Wireless dongle. preferably version 2.1 or above. AUSDOM BASS ONE will pair with the last paired device automatically when turning on. Because of different systems, some computers or laptops may need to be manually paired every time.

6. Active Noise Canceling

Ausdom Bass One contains a noise-canceling circuit, noise mainly in an airplane, buses or trains is effectively reduced. 1) The noise-canceling effect may not be pronounced in a tranguil environment, or some noise may be heard.

2). The noise-canceling effect may vary depending on how you wear the headphones

3). The noise-canceling function works for noise in the low-frequency band primarily. Although noise is reduced, it is not canceled out entirely.

EN-4

7.IVC-BASS Function

Ausdom Bass One features IVC-BASS function. The headphones have two built-in vibrating speakers that vibrate according to the bass frequency. And it also allows you to adjust the bass level freely to a perfect balance for better music enjoyment by simply moving the slider.

Note: The Bass effect may not be pronounced while playing light music, and It's much better when play rap, rock, or heavy-bass music.

8. Making and Answering a Call

8-1 Making a Call 1.Make sure the headphones are paired with the mobile phone. Dial through the mobile phone and press the call

button on the phone. 2.To end a call, press the power button once or also end the call directly by the phone.

8-2 Answering a Call

Make sure the headphones are paired with your phone. Please refer to chapter <u>5. Pairing with Wireless-Enabled</u>

1.Press the power button on your headphones to answer the call through headphones. If there is music playback, it will

2.To end a call, press the power button once again or also end the call directly by the phone. 3.As soon as the call is ended, the music will continue to play automatically.

EN-5

Line-in port

The Line-in port can't work, no function.



- Store the headphones in a dry place when it powers off. - If you don't use the headphones for a long period, charging


the battery every 2 months for 1-2 hour. - Use a dry cloth for cleaning if needed.

Avoid dropping the headphones from high places or on hard - Avoid exposing the headphones to extreme temperature.

Recommended Storage temperature is -40°C-80°C.) - The headphones are NOT waterproof. Avoid exposing the headphones to rain or getting liquids into any button port or other openings. - Please don't twist or bend the headphones. This may cause

EN-6

- The built-in battery can't be disposed in the fire to avoid

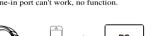



11. Protecting Your Hearing

The headphones are held close to your ears, so loud sounds pose a potential hearing risk. It is highly recommended that setting low volume level before putting on the headphones and avoiding exposing yourself continuously to high volumes. If you need to use the headphones for a long period, please rest ten minutes for a half hour using.

EN-7

12. Control Instructions





Press the "+" button Press the "-" button restart Press the power button Press the power butter. Music/video | Press the power butter. Skip to next | Press and hold the "+" for 1.5s track Skip to previous Press and hold the "-" for 1.5s Answer a call Press the power button to answer

End a call Press the power button

IVC-BASS UP/DOWN Move the slider

ANC ON/OFF Press the ANC button to turn on/off

Note: There will be an alert tone when the volume reaches the maximum level.

Press and hold the power button for about 5s till the Power LED flashes red and blue light alternatively, and you will hear

13. Troubleshooting

Q: Under Wireless mode, why do the headphones automati cally turn off when I connect it for charging? A: Normal! It turns off in order to protect the battery better

EN-8

Q: Why doesn't the headphones pair with the mobile phone? A: Please check the followings. . Check that the headphones are on a full charge Press and hold the power button for 3s, and you will see the Power LED flash blue light and hear "Power - Make sure that the mobile phone's Wireless function is on. You can clear all connection history on your phone. Make sure other paired device's wireless function is Power off Press and hold the power button for 3s, and you will hear "Power Off"

turned off - Make sure the two devices are in the effective pairing range. (3ft/1m).

Make sure that there is no obstacle between the headphones and the mobile phone, such as electronic equipment and a wall.

Furthermore, make sure that the headphones are in pairing mode, and pair it with phone again.

Q: There is some noise.

- A: Wireless is a radio technology, so it is sensitive to obstacles between the headphones and the pairing device. Please make sure that there is no obstacle between the two devices and is within 33ft/10m.

Q: Why doesn't the bass work? A: It depends on what music style it plays. The Bass effect

before searching the headphones.

may not be pronounced while playing light music, and It's much better when play rap, rock, or heavy-bass music.

Q: My mobile phone or computer cannot find the headphones. A: Please check that the headphones are in pairing mode. Refer to chapter 5. Pairing with Wireless-Enabled Devices. Sometimes when the headphones are connected too man Wireless devices, it cannot search and pair effectively. Or your mobile phone and computer are already connected to many other devices. Try removing some connections

EN-9

Note: Features and technical specifications are subject to change without notice, we apologize for any inconvenience.

14. Warranty

15. Specifications

For more information, please visit: https://www.ausdom.com/

Microphone Unit 4.0 x 1.5mn

perating Voltage 2V

Jirectivity Omni-directions
S.P.L -42dB±3dB

Wireless Distance 33ft/10m

Transmission Frequency 2.402GHz-2.48GHz
Support Profile HSP/HFP/A2DP/AVRCP

Pairing Name AUSDOM BASS ONE

Battery Type Bullt-in 750mah rechargeable lithium battery
Charging Port Type-C 5V/1A
About 50h (Wireless Mode);
About 35h (ANC ON Bass ON);
About 25h (ANC ON + Bass ON)

Standby Time About 3000 hours

Charging Time About 3 hours

EN-10

RECYCLING

DC voltage

interference, and (2) this device must accept RISK OF EXPLOSION IF BATTERY IS REPLACED any interference received, including interference that may BY AN INCORRECT TYPE cause undesired operation. DISPOSE OF USED BATTERIES ACCORDING Any Changes or modifications not expressly approved by TO THE INSTRUCTIONS the party responsible for compliance

This product bears the selective sorting symbol for Waste

electrical and electronic equipment (WEEE). This means

that this product must be handled pursuant to European

directive 2012/19/EU in order to be recycled or dismantled

User has the choice to give his product to a competent

recycling organization or to the retailer when he buys a new

to minimize its impact on the environment.

could void the user's authority to operate the equipment Note: This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential

This device complies with part 15 of the FCC Rules.

conditions:(1) This device may not cause harmful

Operation is subject to the following two

installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with

the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna. -Increase the separation between the equipment and

-Connect the equipment into an outlet on a circuit different from that to which the receiver is

connected. -Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be

used in portable exposure condition without restriction

