 


SPORTS

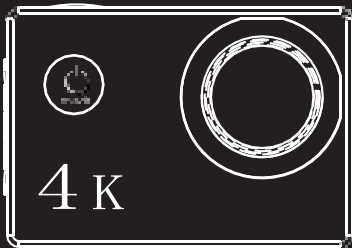

USER MANUAL

Operating Attention

1. This is a high-precision product, please do not let it fall or strike.
2. Please do not let the camera close to the objects with strong-magnetic, such as magnet and power-driven machine.
In addition, please also avoid closing to the objects which can launch strong radio wave. Because the strong magnetic field may cause product breakdown or destroy the image and sound.
3. Please do not put the camera in the place with high temperature or direct sunshine.
4. Please choose the Micro SD card with brands, because ordinary card can not be guaranteed for using regularly.
5. Please do not let the Micro SD card put in or close to the places with the strong-magnetic in order to avoid losing the data of the Micro SD card.
6. During the process of charging up the battery, if the product gives out heat and smoke or gives off peculiar smell, please immediately unplug the power to avoid the fire.
7. When charging up the battery, please let the product put in the places where children can not touch, because the power cable may cause the children stifle or suffer from electric shock.
8. Please let the product put in the shady, dry and insulated places.
9. Please take out the battery from camera if you do not use the camera in a long period. It is a must to charger the camera once 3 months.
10. Please make sure the waterproof case door fix properly & firmly .
Any damage coursed by improper use , We do not bear the lost.

Foreward

This is a high-precision product, please do not let it fall or strike. In addition, please also avoid closing to the objects which can launch strong radio wave. Because the strong magnetic field may cause product breakdown or destroy the image and sound.

 
Multipurpose



Product Features

- 1) 3840x2160 30fps, 1920x1080P 60fps, 1280x720P 120FPS
- 2) 16MP Photo resolution
- 3) 170 degree wide angle
- 4) Support time-lapse /Slow motion /Timed /Auto Photograph
- 5) Support 64GB card


■ The diagram of product

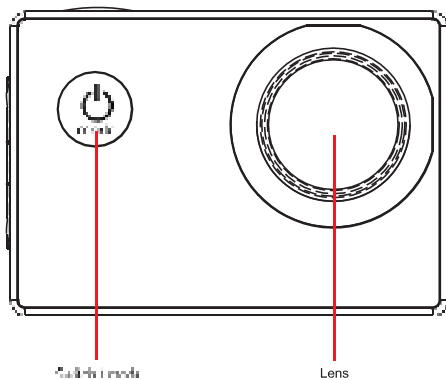

Up key/WIFI

Down key

 Speaker


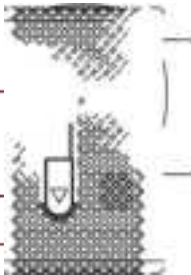


MC


Micro SD

  USB




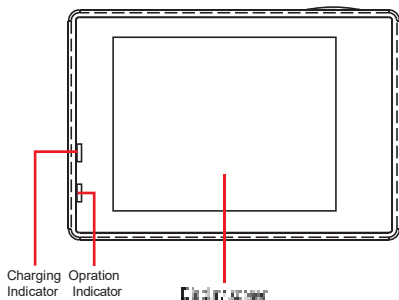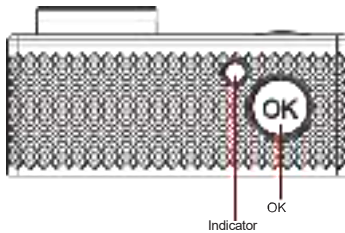

Application diagram of assemble:

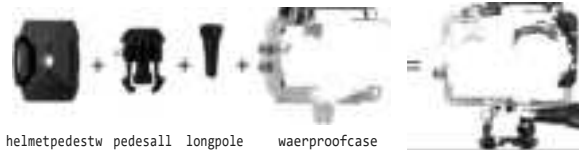 

camera

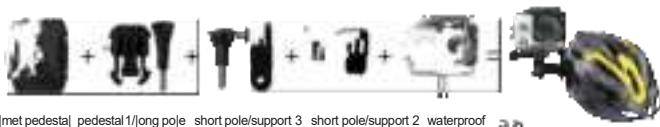 



bicycle bracket / long pole | otijg poie/support 3 waterproof case



Guide of operation

1. Plug the Micro SD card

Attentions: Please choose the Micro SD card with the brands and use it after formatting on the camera. Ordinary card can not be guaranteed to work regularly.

2. Install and take out the battery

- stir downward the battery cover and turn on it.
- according to the plus-minus pole and the arrow on the battery, take the battery into the product and install it correctly.
- the quantity of electricity of the battery: please reference the diagram.
- stir downward the battery cover then take out the battery.

3. Charge up the battery

- use the USB cable to connect the computer or the adapter to charge up the battery.
- charge up the battery and record video at the same time.
- charging up the battery is available when the product is power off.

4. Power on and power off the camera

- press the power key for about 3-5 seconds then power on/off.
- open the screen then power on and close the screen then power off.

5. Open/close the WIFI

- open the WIFI: long press the up key then open successfully, the LED light turn to flashing yellow light.
- close the WIFI: after opening the WIFI, shortly press the up key, the yellow light is black out.

6. Change the mode

Power on then shortly press the key of the power on/off, you can change the modes between record video/photography/slow photography/playback file and setting.

7. How to photography and photographic options set

a. Photography and video settings.

The camera gets into video mode, press the Enter key to start recording. When recording, the bottom • sign is flashing then press the Enter key to stop recording while • mark disappears.

Video Mode: Normal, loop recording (2 minutes, 3 minutes, 5 minutes), time-lapse video (0.5 seconds, 1 second, 2 seconds, 5 seconds, 10 seconds, 30 seconds, 60 seconds).

b. take pictures and picture-taking settings

Turn the power on, when the camera enters the mode option to select the camera mode, the upper left corner of the screen has pictures sign and then enter the camera mode. Press the Enter key to take the picture.

picture-taking Mode: Normal, the timing (3 seconds, 5 seconds, 10 seconds, 20 seconds), automatic (3 seconds, 10 seconds, 15 seconds, 20 seconds, 30 seconds), the trajectory (3P / S, 5P / S, 10P / S)

c. Slow photography and slow photographic settings

The camera enters slow photography mode option to select the shooting mode, press the Enter key to start recording. When recording, the bottom • sign is flashing then press the Enter key to stop recording while • mark disappears.

Slow photography mode: 1080P / 60FPS, 720P / 120FPS

10.2 Main use: Recorder of the camera

Image Sensor	16Mega Pixels CMOS-Sensor
LCD	2" LCD panel
Image resolution	16Mega Pixels(4608*3456)
	12 Mega Pixels(4000*3000)
	8 Mega Pixels(3264*2448)
	5Mega Pixels (2592*1936)
Video resolution	4k 30fps / 2.7k 30fps /1920*1080 60fps / 1920*1080 30fps / 1280*720 60fps
Image/Video file format	Video format:MP4 / Image format:JPG
WiFi	For android and ios device
Lens	170° HD wide-angle fish-eye lens, Nondeformable
Memory	Slot for Micro SD card up to 64GB
OSD language	English/French/German/Spanish/Italian/Portuguese/Simplified Chinese/ Japanese/Traditional Chinese/ Russian/Korean/Polish/Indonesian etc.
Connections	USB 2.0 (Full speed)
Dimensions	29.8x59.2x41 mm
Weight	44g(without batteries),58g with batteries
Applications	Extreme Sports, Outdoor Sport Activities,Bicycle,Car DVR, Diving, Home security etc
Special function	Car mode, Slow motion,Time lapse

Note: Conditions can't be applied to modification or use to approaching or exceeding. Please regard the actual product in the instruction book.

