

105 mm

105 mm

**Distributed by / Distribuido por:**

LIDL US, LLC, Arlington, VA 22202

Model No. / Modelo Núm.: **HG07157-US**Version / Versión: **01 / 2022**

FCC ID : 2AJ9O-HG7157

Made in / Hecho en: China

**SILVERCREST®****TRUE WIRELESS BLUETOOTH® IN-EAR SPORTS  
HEADPHONES STSK P4 A1**

(US-EN)

**TRUE WIRELESS BLUETOOTH® IN-EAR SPORTS HEADPHONES**

Operation and safety notes

(US-ES)

**US-ES XXXXXXXXX**

Instrucciones de utilización y de seguridad

IAN 401854\_2107



IAN 401854\_2107

(US)

|       |   |        |    |
|-------|---|--------|----|
| US-EN | Operation and safety notes                  | Page   | 5  |
| US-ES | Instrucciones de utilización y de seguridad | Página | 46 |

|   |         |
|---|---------|
| <b>Description of signal words</b> .....                      | Page 7  |
| <b>Customer service</b> .....                                 | Page 8  |
| <b>Warning remarks and symbols used</b> .....                 | Page 8  |
| <b>Introduction</b> .....                                     | Page 10 |
| <b>Intended use</b> .....                                     | Page 10 |
| <b>Trademark notices</b> .....                                | Page 11 |
| <b>Scope of delivery</b> .....                                | Page 12 |
| <b>You will need</b> .....                                    | Page 12 |
| <b>Description of parts</b> .....                             | Page 13 |
| <b>Technical data</b> .....                                   | Page 14 |
| <b>Important safety instructions</b> .....                    | Page 16 |
| Safety instructions for built-in rechargeable batteries. .... | Page 25 |
| <b>Prior to first use</b> .....                               | Page 28 |
| Charging the charging/storage box battery .....               | Page 29 |
| Charging the headphones .....                                 | Page 30 |

|   |         |
|---|---------|
| <b>Operation</b> .....                                    | Page 31 |
| Charging/storage box .....                                | Page 31 |
| <b>Headphones</b> .....                                   | Page 32 |
| Turning on the headphones .....                           | Page 32 |
| Turning off the headphones .....                          | Page 32 |
| Manually turning off the headphones .....                 | Page 32 |
| LED status .....  | Page 33 |
| Pairing the headphones to each other .....                | Page 33 |
| Pairing the headphones with a Bluetooth device .....      | Page 34 |
| Reset .....   | Page 35 |
| Headphones button functions for music playback .....      | Page 36 |
| Headset for phone calls / Playback control .....          | Page 37 |
| Voice control function with Siri / Google Assistant ..... | Page 38 |
| <b>Cleaning and maintenance</b> .....                     | Page 39 |
| Storage during periods of non-use .....                   | Page 39 |
| <b>Troubleshooting</b> .....                              | Page 40 |
| <b>Disposal</b> .....                                     | Page 42 |
| <b>Three year limited warranty</b> .....                  | Page 43 |

## DESCRIPTION OF SIGNAL WORDS

### **WARNING**

WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

### **CAUTION**

CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

### **NOTICE**

NOTICE indicates information considered important, but not hazard related (e.g. messages related to property damage).

## CUSTOMER SERVICE



Call customer service at **1 (844) 543-5872**



Visit the Website Customer Service Platform at  
**[www.lidl.com/contact-us](http://www.lidl.com/contact-us)**

Visit a LIDL store for further assistance.

**IAN 401854\_2107**

Please have your IAN number ready

### Warning remarks and symbols used

The following warnings are used in this manual:



**WARNING! EXPLOSION HAZARD!** A warning with this symbol and word “WARNING! EXPLOSION HAZARD” indicates the potential threat of explosion.

Failure to observe this warning may result in serious or fatal injuries and potential property damage.

- Follow the instructions in this warning to prevent serious injuries, a danger to life or property damage!



This symbol reminds the user to wear suitable protective hand wear! Follow this warning to prevent hand injury by objects or contact with hot or chemical materials!



A warning with this symbol notifies the user of possible hearing damage. Avoid listening at excessive volumes for prolonged periods.



**Direct current / voltage**



This symbol means that the operating instructions must be read prior to using the product.

# **TRUE WIRELESS BLUETOOTH® IN-EAR SPORTS HEADPHONES**

## **● Introduction**

Congratulations on your purchase. You have selected a quality product. The instructions for use are a part of the product. They contain important information about the safety, use and disposal of the product. Before using the product, please learn about all the safety information and usage instructions. Only use the product as described and for the specified applications. If you lend the product to someone else, please also give all the instructions.

## **● Intended use**

These headphones are a consumer electronics device. The headphones are intended for playback of audio material via a Bluetooth® connection. If the headphones are connected to a smartphone, the headphones can also be used as a headset.

The charging and storage box is intended solely for charging and storing the headphones.

The product is intended for private use only.



Any other use beyond what is specified is not intended. Do not use the product for industrial or commercial purposes.

Any claims for damages resulting from unintended use, improper repairs, unauthorized modifications or the use of unapproved replacement parts are excluded. The user carries the sole risk.

## ● **Trademark notices**

- USB® is a registered trademark of USB Implementers Forum, Inc.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by OWIM GmbH & Co. KG is under license.
- The SilverCrest trademark and trade name is the property of their respective owners.

Any other names and products may be trademarks or registered trademarks of their respective owners.

## ● **Scope of delivery**

After unpacking the product, check if the delivery is complete and if all parts are in good condition. Remove all packaging materials before use.

If you notice any damage or missing parts, please contact the dealer from whom you have purchased this product.

2x Headphones (1 x left and 1 x right)

1x Charging/storage box

1x USB cable (type A to type C)

 
1x Quick start guide

1x Instruction manual

## ● **You will need**

- USB voltage source (output voltage 5 V, min. 500 mA output current)
- Bluetooth®-capable playback device

## ● Description of parts

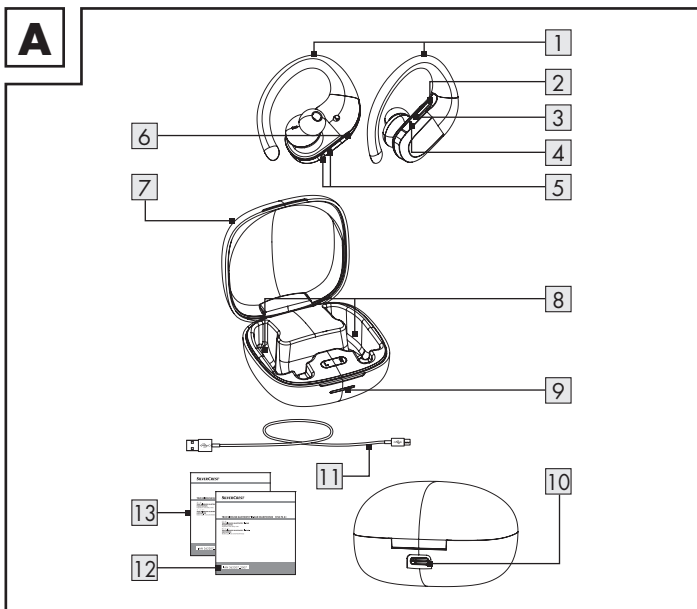

- |   |                                    |
|---|------------------------------------|
| <b>1</b> Headphones<br>(1 x left and 1 x right) | <b>7</b> Charging/storage box      |
| <b>2</b> +/– button (+ = right / – = left)      | <b>8</b> Charging ports            |
| <b>3</b> Multifunction button (MF button)       | <b>9</b> Charging status indicator |
| <b>4</b> LED                                    | <b>10</b> USB-C charging port      |
| <b>5</b> Charging contact pins                  | <b>11</b> USB cable                |
| <b>6</b> Microphone                             | <b>12</b> Instruction manual       |
|   | <b>13</b> Quick start guide        |

## ● **Technical data**

### **Charging/storage box**

|   |   |
|---|---|
| USB-C input voltage   | USB 5 V ===   |
| USB-C input current   | 500 mA  |
| Rechargeable battery  | Li-ion polymer, 3.7 V, 550 mAh,<br>2.035 Wh                       |
| Charging capacity   | up to 3 complete charge cycles for fully<br>discharged headphones |
| Charging time of the charging/<br>storage boxes' built-in battery | 3 hours (complete charging cycle)                                 |

## Headphones

|                            |   |
|----------------------------|---|
| Wireless standard          | Bluetooth® 5.0  |
| Supported profile          | A2DP, AVRCP, HSP, HFP   |
| Frequency band             | 2402 to 2480 MHz  |
| Max. transmitted power     | < 20 mW   |
| Range                      | <b>32 ft (10 m)</b>   |
| Rechargeable battery       | Li-ion, 3.7 V, 85 mAh, 0.32 Wh  |
| Charging time              | 2 hours (complete charging cycle)   |
| Operating time             |   |
| ■ Music                    | 7 hours (at medium volume)  |
| ■ Phone                    | 2.5 hours   |
| Ingress protection         | IPX4  |
| Operating temperature      | <b>+50 °F to +95 °F (+10 °C to +35 °C)</b>  |
| Humidity (no condensation) | 10 to 70 % relative humidity  |
| Storage temperature        | <b>+32 °F to +104 °F (0 °C to +40 °C)</b>   |
| Dimensions                 | <b>2.01 in x 1.1 in x 1.73 in</b><br><b>(51 mm x 28 mm x 44 mm)</b> (headphones)<br><b>2.24 in x 2.99 in x 1.97 in</b><br><b>(75 mm x 76 mm x 50 mm)</b> (charging box) |
| Weight                     | <b>0.41 oz (11.6 g)</b> (both headphones)<br><b>2.54 oz (72 g)</b> (charging box)   |

The specification and design may be changed without notification.



# IMPORTANT SAFETY INSTRUCTIONS

**READ ALL INSTRUCTIONS. KEEP FOR FUTURE REFERENCE. INCLUDE ALL DOCUMENTATION WHEN PASSING THIS PRODUCT ON TO OTHERS.**

## **⚠ WARNING**

**Failure to observe the following warnings can result in death or serious injury.**



**DANGER TO LIFE AND RISK OF ACCIDENT FOR INFANTS AND CHILDREN!**

- **Suffocation hazard!** Never leave children unsupervised with the packaging materials. The packaging materials pose a suffocation hazard. Children frequently underestimate the dangers. The packaging materials are not a toy.
- This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.  
Children should be supervised to ensure that they do not play with the product.

- Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

## **NOTICE**

This product has been tested and complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.



If this product causes harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the equipment to an outlet on a different circuit than the one the receiver is connected to.
- Consult the dealer or an experienced radio/TV technician for help.

- This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This product may not cause harmful interference, and
- (2) This product must accept any interference received, including interference that may cause undesired operation.

- **Wireless interference**

Turn the device off on airplanes, in hospitals, service rooms or near medical electronic systems. The wireless signals transmitted could impact the functionality of sensitive electronics.

Keep the device at least 7.874 in (20 cm) from pacemakers or implantable cardioverter defibrillators as the electromagnetic radiation may impair the functionality of pacemakers. The radio waves transmitted could cause interference in hearing aids. Do not place the device near flammable gases or potentially explosives areas (e.g. paint shops) with the wireless components on as the radio waves emitted can cause explosions and fire. The range of the radio waves varies by environmental conditions.

In the event of wireless data transmission, unauthorized third parties receiving the data cannot be excluded. Lidl US LLC is not responsible for interference with radios or televisions due to unauthorized modification of the device. Lidl US LLC further assumes no liability for using or replacing cables and devices not distributed by Lidl US LLC. The user of the device is fully responsible for correcting interference caused by such unauthorized modification of the device as well as replacement of such devices. The RF exposure compliance distance is 5 mm.

## **NOTICE**

This product does not contain any parts which can be serviced by the user. The rechargeable battery cannot be replaced.

## **⚠ WARNING**

**Failure to observe the following warnings may result in death or serious injuries.**

- Do not place burning candles or other open fire on or next to the product.
- If you notice smoke or unusual noise or odor, switch the product off immediately and remove the USB cable.
- Do not throw the product into fire or expose it to high temperatures.

- Do not cover the product during use or charging.
- Only charge the battery in dry environments.

### **NOTICE**

- Check the product before every use! Discontinue use if any damage to the product or the charging cable is detected!
- Sudden temperature changes may cause condensation inside the product. In this case, allow the product to acclimate for some time before using it again to prevent short circuits!

- Do not operate the product near heat sources, e.g. radiators or other devices emitting heat!
- Do not try to open the product! It has no internal parts requiring maintenance.



## Safety instructions for built-in rechargeable batteries

### **⚠ WARNING**

**Failure to observe the following warnings may result in fatal or serious injuries.**

- **DANGER TO LIFE!** Keep batteries / rechargeable batteries out of reach of children. If accidentally swallowed, seek immediate medical attention.



## **DANGER OF EXPLOSION!**

Never recharge disposable batteries. Do not short-circuit batteries / rechargeable batteries and/or open them. They may overheat, ignite, or explode.

- **Never throw batteries / rechargeable batteries into fire or water.**
- **Do not exert mechanical loads on batteries / rechargeable batteries.**
- **Batteries should not be disassembled, crushed, punctured, opened, or otherwise mutilated.**



## **Risk of battery leakage**

### **⚠ CAUTION**

**Failure to observe the following warnings may result in injuries or property damage.**

- Avoid extreme environmental conditions and temperatures which could affect batteries / rechargeable batteries, e.g. radiators / direct sunlight.
- Avoid contact with the skin, eyes and mucous membranes. In the event of contact with battery acid, thoroughly flush the affected area with plenty of clean water and seek immediate medical attention.



**WEAR PROTECTIVE GLOVES!** Leaked or damaged batteries / rechargeable batteries can cause burns on contact with the skin. Wear suitable protective gloves at all times if such an event occurs.

- This product contains an integrated battery which cannot be replaced by the user. The battery may only be removed or replaced by the manufacturer or its customer service or by a similarly qualified person in order to avoid hazards.

## SAVE THESE INSTRUCTIONS

### ● **Prior to first use**

- Remove the protective foil between the headphones [1] and the charging/storage box [7].


 
 

## ● Charging the charging/storage box battery

Before first use, the charging/storage box battery must be charged.

### Charging via USB

- Connect the charging/storage box [7] via the USB-C charging port [10] and the included USB cable [11] with a USB voltage source with an output current of at least 500 mA (e.g. a USB charger or a computer).
- When charging is completed, the 3 charging status indicators [9] light up.

**NOTICE** The charge status is shown via the charging status indicator [9] on the charging/storage box [7]:

| LEDs  | Battery charge status |
|---|-----------------------|
|  | < 30 %                |
|  | < 60 %                |
|  | < 100 %               |
|  | 100 %                 |

## ● Charging the headphones

Before first use, the headphones must also be charged.

### NOTICE

- The headphones [1] and the charging/storage box [7] can be charged simultaneously.
- The headphones only fit into one of the charging ports [8] respectively.
- Make sure that the headphones [1] are completely dry before inserting them into the charging ports [8].
- Insert the headphones [1] in the charging ports [8] of the charging/storage box [7].
- Charging begins automatically.
- The indicator LEDs [4] of the headphones [1] show the current status.

| LED                                     | Status        |
|---|---------------|
| Red                                     | Charging      |
| White<br>(lights up for 20 s, then OFF) | Fully charged |
| Off                                     | Not charging  |


 
 
## ● **Operation**

### ● **Charging/storage box**

**NOTICE** The headphones [1] begin charging automatically when at least one headphone is inserted into a charging port [8].

- Insert the headphones [1] in the charging ports [8] of the charging/storage box [7].

The current battery capacity status is indicated by the charging status indicator [9] on the charging/storage box:

| LEDs  | Battery capacity status |
|---|-------------------------|
|  | 30 %                    |
|  | 60 %                    |
|  | 100 %                   |

## ● **Headphones**

### ● **Turning on the headphones**

- To turn on the headphones, remove them from the charging ports **8**.

### ● **Turning off the headphones**

- To turn off the headphones, insert the headphones in the charging ports **8** of the charging/storage box **7**.

### ● **Manually turning off the headphones**

- To save energy, the headphones turn to off mode automatically when they receive no signal or cannot pair for 5 minutes.
- Turning the headphones to off mode manually: In paired mode, press and hold the MF button **3** for 5 seconds. When the headphones are paired to each other, this turns both headphones to off mode. The Bluetooth connection is ended automatically.
- Briefly press the MF button **3** for 3 seconds to power on the headphones again.

## ● LED status

| LED               | Status                                  |
|-------------------|---|
| Flashes red/white | Waiting for Bluetooth device to pair    |
| Flashes white     | Headphones paired with Bluetooth device |

**NOTICE** If the headphones have already been paired to each other, the right headphone is already connected to the left and flashes white only.

## ● Pairing the headphones to each other

To hear sound through both headphones in stereo, they must be paired to each other.

- When you remove the headphones from the charging ports **8**, they automatically pair.
- If the headphones do not pair to each other, reset them to the default settings (see “Resetting to default settings”).
- When the headphones are paired to each other and are awaiting connection to a Bluetooth device, one of the headphones flashes red/white and the other headphone flashes white only.

## ● Pairing the headphones with a Bluetooth device

- Remove the headphones from the charging ports **8**.
- When the headphones are ready to pair, the indicator LED on one of the headphones flashes red/white.

**NOTICE** If the headphones have already been paired to each other, one of the headphones is already connected to the other headphone and flashes white only

- On your Bluetooth playback device, search for a product named **STSK P4 A1** and pair with the product. If your Bluetooth device prompts you to enter a password, enter **0000**.



## ● Reset

To reset the headphones, follow below steps:

- Disconnect the left and the right headphone **1** from a playback device:
  - Remove one of the headphones (left or right) from the charging/storage box **7**.  
Press the MF button **3** 3 times in quick succession until the LED **4** briefly flashes red/white.  
Insert the previously removed headphone back into the charging/storage box **7** to complete the reset.
  - Remove the other headphone from the charging/storage box **7**.  
Press the MF button **3** 3 times in quick succession until the LED **4** briefly flashes red/white.  
Insert this headphone back into the charging/storage box **7** to complete the reset.
- Both headphones **1** are now successfully reset.

### **NOTICE**

However, the Bluetooth connection to the playback device remains.

## ● Headphones button functions for music playback

- Set the volume to minimum. Start a playlist on your playback device.
- Put on the headphones [1]. Adjust the volume using the +/– button [2].
- The headphones [1] feature following 3 buttons:

| Button        | Function   |
|---------------|--|
| MF button [3] | <ul style="list-style-type: none"><li>■ Turning on: Press and hold for 3 seconds.</li><li>■ Turning off: Press and hold for 5 seconds.</li><li>■ Enabling voice control: Press and hold for 2 seconds.</li><li>■ Starting/stopping playback: Press once.</li></ul> |
| + [2]         | <ul style="list-style-type: none"><li>■ Increasing volume: Press once to increase the volume by one level. A signal sounds when the maximum volume has been reached.</li><li>■ Skipping to the next track: Press and hold for 2 seconds.</li></ul>                 |
| – [2]         | <ul style="list-style-type: none"><li>■ Reducing volume: Press once to reduce the volume by one level.</li><li>■ Jumping to the previous track: Press and hold for 2 seconds.</li></ul>  |


## ● Headset for phone calls / Playback control

You can use the headphones as a headset for phone calls and to control playback.

The table describes operation with a connected smartphone. Other devices may react differently.

| Function                                  | Action  |
|---|---|
| Answer/end call                           | Briefly press MF button <b>3</b> .  |
| Ignore call                               | Press and hold MF button <b>3</b> for 2 seconds.  |
| Increase volume                           | Briefly press <b>+</b> <b>2</b> . A signal sounds when the maximum volume has been reached. |
| Reduce volume                             | Briefly press <b>-</b> <b>2</b> .   |
| End current call and answer waiting call* | Briefly press MF button <b>3</b> .  |
| Switch between 2 calls (toggle)*          | Press and hold MF button <b>3</b> for 2 seconds (until you hear a beep).                    |

## NOTICE

- \* These functions must be supported by your mobile service provider.
- The ring tone (or the voice announcement “Incoming call”, depending on your phone) and the caller’s voice are rendered through the speaker.
- The microphone  captures your voice.
- Music playback is automatically paused when a call is received. Music continues after the call has been ended.

## ● Voice control function with Siri / Google Assistant

Follow below steps to activate the voice control function:

- Activate Siri or Google Assistant on your mobile device.  
**iOS devices:** Complete the Siri setup. Then, use Siri to activate this product’s voice control function.  
**Android devices:** Open Google Assistant. Follow Google Assistant’s instructions to complete settings before using this product’s voice control function.

## **NOTICE**

Google Assistant is available on Android 5.0 or above devices.

- Activate the Bluetooth® function. Pair this product with your mobile device.
- Long press the left MF button **3** to activate the voice control function.
- Now you can use the voice control function.

## ● **Cleaning and maintenance**

### **⚠ CAUTION**

Potential damage to the product!

- Switch the product off and remove all plugs before cleaning!
- Be sure moisture does not enter the product during cleaning to prevent damage to the product and related repairs.
- Only clean the product with a slightly dampened cloth and a mild cleaning agent!

## ● **Storage during periods of non-use**

- Store the product in a dry environment, protected from dust and direct sunlight.

- Store the headphones in the charging/storage box **7**.
- Prolonged storage: To prevent battery deterioration, the rechargeable battery has to be charged at least once every 12 months.

## ● **Troubleshooting**

● = **Fault**

⊙ = Possible cause

○ = Action

● = **No functions**

⊙ = Battery drained.

○ = Recharge the battery as described in "Charging the charging/storage box battery".

● = **No Bluetooth connection**

⊙ = Error operating the headphones.

○ = Switch the headphones off and on again.

⊙ = Bluetooth device error.

○ = Separate the connection to the headphones. Reconnect.

○ = Check if the headphones work in combination with another Bluetooth device.

⊙ = Bluetooth connection error.

○ = Move closer to the device connected via Bluetooth.

● = **No sound**

⦿ = Error operating the Bluetooth device.

○ = Increase the volume on the playback device.

⦿ = Bluetooth connection error.

○ = Move closer to the device connected via Bluetooth.

○ = Disconnect the Bluetooth devices. Reconnect.

● = **Unable to use all functions**

⦿ = Error with Bluetooth device.

○ = Check whether your Bluetooth device supports all functions.

## ● **Disposal**

Dispose of the packaging through your local recycling facilities and in compliance with all federal, state and local regulations.



Please note the package markings regarding waste separation, indicated by abbreviations (a) and numbers (b), meaning: 1-7: plastics / 20-22: paper and cardboard / 80-98: composite materials.



Contact your local waste management authority for additional information on how to dispose of the used product.

To help protect the environment, please dispose of the product properly when it has reached the end of its useful life, do not throw in the garbage. Information on collection sites and their opening hours is available from your local authority.



## ● **Three year limited warranty**

### **What does this warranty cover?**

The warranty covers:

- Damage, breakage or inoperability due to defect.
- Damage not caused by normal wear and tear or failure to follow the safety and maintenance instructions provided in the user manual.

### **What is not covered by the warranty?**

The warranty does not cover damage caused by:

- Normal wear and tear of the product, including fragile parts (such as switches, glass, etc.);
- Improper use or transport;
- Disregarding safety and maintenance instructions;
- Accidents or acts of nature (e.g. lightning, fire, water, etc.).
- Tampering with the product (such as removing cover, unscrewing screws etc.)

Consequential and incidental damages are also not covered under this warranty. However, some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

## **What is the period of coverage and warranty resolution?**

The warranty is for 3 years from the date of purchase. At our discretion, product will either be refunded or replaced.

## **What will we not do?**

We will not:

- Start a new warranty period upon product exchange;
- Repair product.

## **How to process the warranty?**

To initiate, please:

- Call customer service at 1 (844) 543-5872
- Visit the Website Customer Service Platform at [www.lidl.com/contact-us](http://www.lidl.com/contact-us)  
or
- Visit a LIDL store for further assistance

To ensure the quickest warranty return process, please have the following available:

- The original sales receipt that includes the date purchased;
- The product and manual in the original package;
- A statement of the problem.

### **What must you do to keep the warranty in effect?**

- Retain the original receipt;
- Follow all product instructions;
- Do not repair or modify the product.

### **How does state law relate to this warranty?**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. All implied warranties are limited by the duration and terms of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.