

MULTIMEDIA TOWER
BT / USB / SD / AUX
TW7W



OPERATING INSTRUCTIONS

PLEASE READ THE USER MANUAL COMPLETELY BEFORE
OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE

Precautions for use

- Unpack all parts and remove protective material.
- Do not connect the unit to the mains before checking the main voltage and before all other connections have been made.
- Do not cover any vents and make sure that there is a space of several centimeters around the unit for ventilation.

Safety instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. This product is equipped with a 3 wire grounding type plug having a third(grounding) pin.
10. Do not defeat the safety purpose of the polarized or grounding-type plug.
11. A polarized plug has two blades with one wider than the other.
12. A grounding type plug has two blades and third grounding prong.
13. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
14. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
15. Only use attachments/accessories specified by the manufacturer.
16. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
17. Unplug this apparatus during lightning storms or when unused for long periods of time.
18. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in anyway, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
19. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
20. Minimum distances(e.g. 10cm) around the apparatus for sufficient ventilation.
21. WARNING - To reduce the risk of fire or electric shock, do not expose the apparatus to rain or moisture.
22. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
23. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
24. Slots and openings in the cabinet and the back are provided for ventilation: to ensure reliable operation of the product, these openings must not be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
25. This product should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.
26. Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.
27. If an extension cord is used with this product, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord ampere rating. Also, make sure that the total of all products plugged into the wall outlet does not exceed 10 amperes.
28. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock.
29. Never spill any kind of liquid on the product.
30. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to service personnel.

31. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- When the power cord or plug is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the Product does not operate normally when the operating instructions are followed. (Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore normal operation.)
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.

Caution

NEVER REMOVE THE BACK COVER

Removal of the back cover should be carried out only by qualified personnel.

DO NOT USE IN HOSTILE ENVIRONMENTS

To prevent shock or fire hazard, do not expose the unit to rain or moisture. This unit is designed to be used in the office or home. Do not subject the unit to vibrations, dust or corrosive gases.

KEEP IN A WELL VENTILATED PLACE

Ventilation holes are provided on the cabinet to prevent the temperature from rising. Do not cover the unit or place anything on the top of unit.

AVOID HEAT

 
Avoid placing the unit in direct sunshine or near a heating appliance.



This symbol is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This device complies with Part 15 of the FCC Rules
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received,
including interference that may cause undesired operation.

Packing Contents

When you unpack your new unit, make sure that you have removed all the accessories and information papers:

 
- Speaker tower
- User manual
- Remote Control
- 3.5 stereo plug audio cable
- 2 x Assembly screws .
- 2 x Assembly washers

How to use

Setup

Carefully take the tower body and base out of the packaging.


- take the screws and washers out
- Attach the base to the body aligning the three holes in the base with the three holes in the tower
- Screw the base into the body
- Stand the tower upright on the floor. The appliance is now ready for use

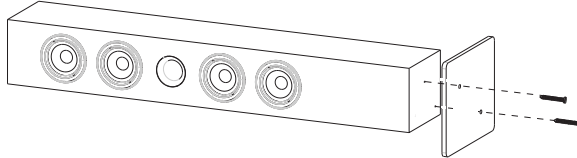

LOCATION AND DESCRIPTION OF CONTROLS

MAIN UNIT


- | | |
|--------------------------|--------------------------|
| 1. USB port | 7. Play / Pause button |
| 2. SD Card slot | 8. Tune+ button |
| 3. AUX in jack | 9. Tune- button |
| 4. USB charging port | 10. VOL(Volume)+/- knobs |
| 5. LED Display screen | 11. DC jack |
| 6. Mode button / Standby | 12. Subwoofer |

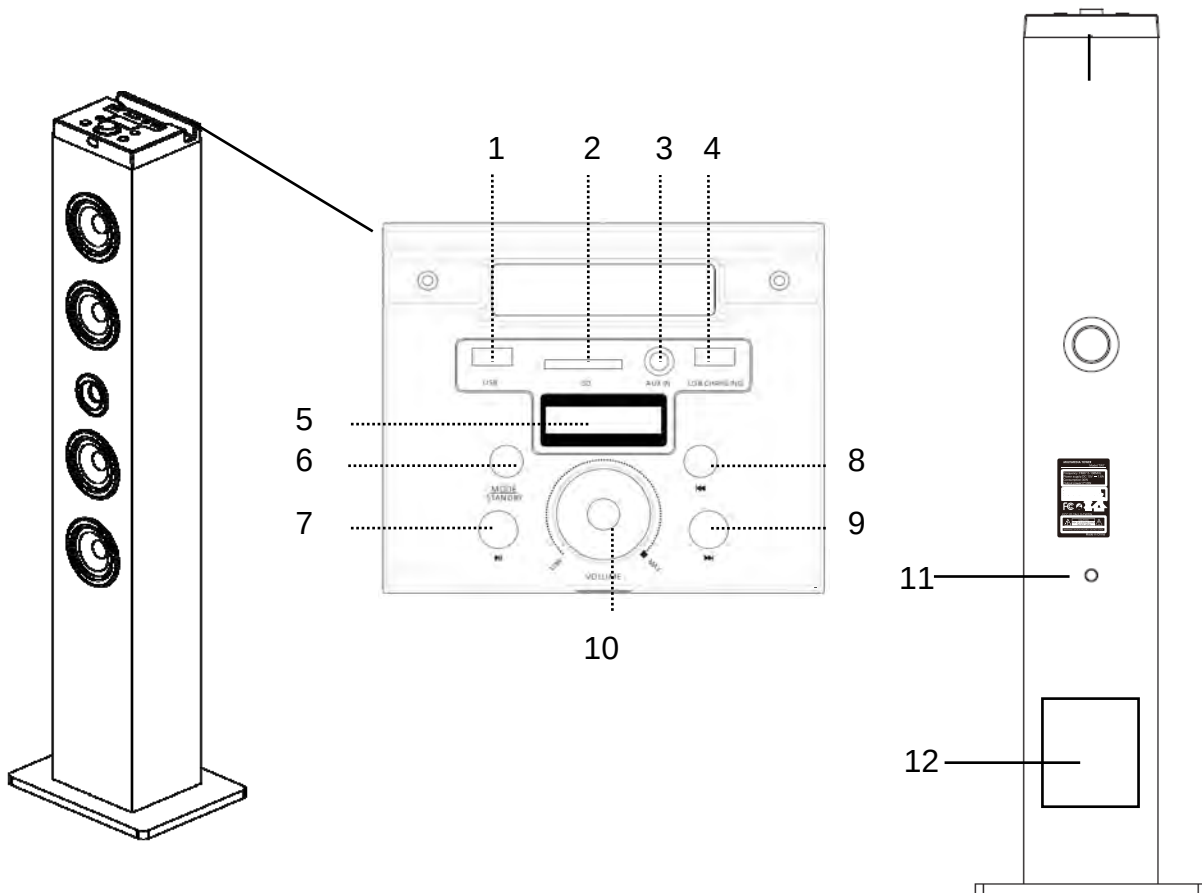 

LOCATION AND DESCRIPTION OF CONTROLS

REMOTE CONTROL

 
1. STANDBY Button
2. Aux Mode
3. Mute
4. FM station memory +
5. Previous
6. FM station memory-
7. USB Mode
8. SD Mode
9. BT Mode
10. FM Mode
11. FM auto scan
12. Play/Pause
13. Next

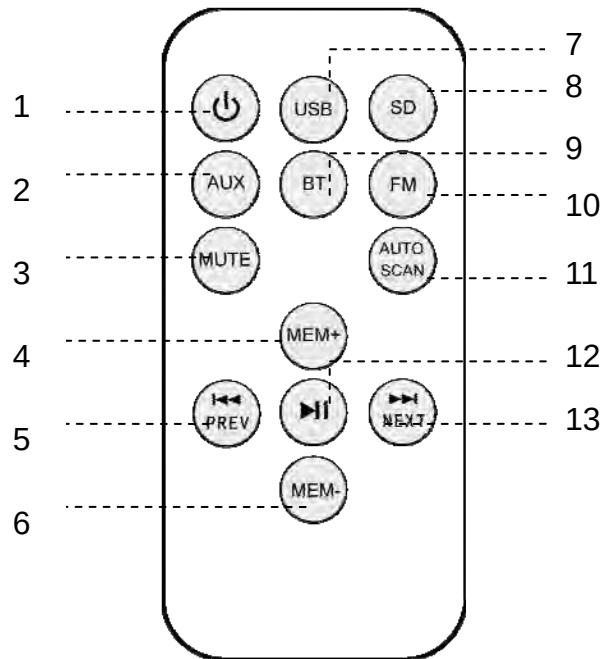

The remote control operates on 1 pc "CR2025" lithium battery (included). To power up the remote control, remove the insulation tab from the back of unit.

Replacing battery for the remote control

 1. Push and slide out the battery door, as shown below
2. Replace the battery with a new CR2025 button cell with the polarity "+" facing up .
3. Slide the cover back

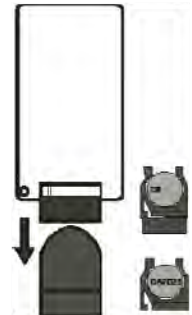

Notes on batteries

- . Never recharge the batteries, apply heat to them or take them apart.
- . Do not throw the batteries in fire!
- . Attention should be drawn to the environmental aspects of battery disposal.
- . If the remote control is not going to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.
- . Please respect the environment. Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

CAUTION:

- Do not mix old and new batteries, or different types of batteries
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

POWER SOURCE

Insert the DC plug into a conveniently located DC outlet having DC 15V $\approx$ 1.6A

WARNING: This unit has a long DC cord that can easily be tripped on or pulled on, causing injury.

Please make sure it is arranged so it will not drape over a tabletop, etc. where it can be pulled on by children or tripped over accidentally.

GENERAL OPERATION

1. Press **POWER** button to turn on or turn off the unit.
2. Press the **MODE** button repeatedly to select the playback source. The LED displayed the current mode
3. Press the **VOL**(Volume)+/-Knobs to adjust volume level.
4. Press the **MUTE** Button on the remote control to turn off the sound. Press it again to restore the previous sound level.
5. If the unit is not used for a long period of time, pull out the plug to turn off the unit completely.

PLAY RADIO

1. Press **⏻** button to turn on or turn off the unit.
2. Press the **MODE** button on the unit or the remote control to select FM mode. The unit will be in FM radio mode. The LED display FM
3. Press and hold **AUTO SCAN** button on remote, The unit will automatically start and search the frequencies for the previous or next strong station and stop on that station.
4. Once you find a station you want to save, press the **MEM+** button or **MEM-** until the desired memory position number appears on the display. Press the MEM again to confirm and save the current station.

FM: Fully unwind the antenna wire and extend it

USING THE AUX INPUT

requires a 3.5mm audio cable (included)

1. Connect your auxiliary device (e.g. smart phone/ MP3 player) to the AUX jack
2. Press **⏻** button to turn on the unit. Press the **MODE** button repeatedly.
3. Press ' Play/Pause ' on your auxiliary source.
4. Adjust the volume to desired level.
5. To stop playback, disconnect your auxiliary source from the AUX jack.

USB CHARGES FOR SMARTPHONES

There is a USB charger on the top of the unit to charge small devices such as smartphones that can be charged via USB

Output power: 5V $\pm$ 1A

LISTENING TO AUDIO DEVICE

You can connect a USB flash device (not included) to the USB port or a SD card (not included) to the memory expansion card slot on the unit to play MP3 files.

1. Press **⏻** button to turn on the unit.
2. Press **MODE** into the USB or SD mode. the unit can automatically play
3. Press PREVIOUS/NEXT to select track.

Note:

Supported format: MP3 (32kbps-320kbps)

- The total number of MP3 files on the Memory Device should not exceed 999.
- If you can't easily insert the memory card, you may have inserted it incorrectly. Try to turn over the card and then insert again.
- For playing files on USB flash drive or SD card, you should plug in the USB flash drive or SD card when the unit is in standby mode. Turn ON the unit and use MODE button to select USB or SD card mode.
- There are many USB /SD cards on the market. we can't guarantee to support all different models. Please try another USB /SD card if your device is not supported.
- Some SD cards may be incompatible.

BT PAIRING & LINKING OPERATION

1. Turn off the BT functionality of other devices that are already paired with your unit.
2. Press **⏻** button to turn on the unit.
3. Press **MODE** button to select BT mode. The LED will displayed BT.
4. Turn on BT functionality on your BT device. Typically, BT controls are found on the device's tools or settings menu (see your user manual).
Turn on BT connectivity and make your device 'discoverable'.
5. Clean out the pairing list on your BT device.
6. Choose 'add a new BT device' or 'setup BT device' on your device. It will start to search. Once "TW7" shows on your device, select it. If your device prompts you for a pass code, please enter **0000**. If the pairing attempt fails or times out, please start pairing procedure again (see steps 2-6).
7. After your device and the "TW7" have connected each other, a sound can be heard.

Play MUSIC from BT devices.

Make sure the BT connection between the unit and the device is active.

1. Press **⏸** button to pause playback, press **▶** button again to resume playback.
2. Press **⏭** button to skip forward to next track and **⏮** to skip backward to previous track.

Technical specifications



This device complies with Part 15 of FCC Rules operation is subject to the following two conditions

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation



Electric and electronic equipment and included batteries contain materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen here. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislation and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

FCC ID: **2ALLS-TW7W**

