

使用操作说明书 L12



01/包装清单 PACKING LIST



设备 (1台)



数据线 (1根)

02/快速设置 QUICK SETUP

开启全新打标体验，只需两步
1. 扫码下载APP
2. 开盖放入耗材

扫描下方二维码下载APP



OPERATION INSTRUCTIONS L12



01 PACKING LIST



Device (1)



Data line (1)

02 QUICK SETUP

Start a brand-new marking experience in just two steps

1. Scan the QR code to download APP
2. Open the cover and put in the consumables

Scan the QR code below to download the APP

 


Google play or App Store


Search **Le Minyun**

03 / 基本使用 BASIC USE

向左滑动开盖




① 开盖方式

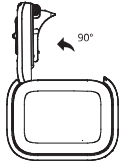

② 开盖大小

注意：定期用酒精清洗擦拭切刀，建议切500张清洗一次！

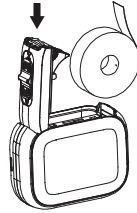


③ 耗材安装

注意：不干胶面朝下装纸



④ 正确关闭图示

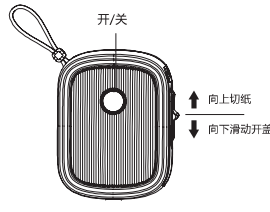

长按开机开关，开启机器

使用APP链接机器，进行耗材规格设置

编辑打印内容，确认打印。


指示灯	状态	说明
绿	常亮	开机，正常
红	常亮	开盖，缺纸，充电中
红	慢闪	提示电量低
蓝	常亮	蓝牙已连接

03 BASIC USE

Slide left to lift the lid




 ① Opening method




② Opening size

Pay attention to cleaning and wiping knives with alcohol regularly. It is recommended to cut 500 pieces and clean them once!

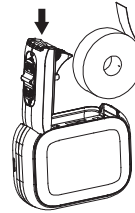


③ Consumable installation

 Load paper with sticker face down



④ Correct closure

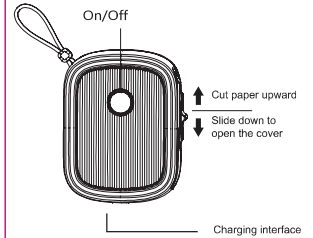

Press and hold the On/Off button to turn on the machine.

Connect the machine with the APP to set the specifications of consumables. Edit the print content and confirm the print.

Green light: fully charged/in normal use

Red light: charging/ paper shortage/overheating/cover opening

Red light flashing: low power will cause the printed handwriting to be weak, please charge it in time

Blue: Changliang/ Bluetooth connected

04 WARNINGS

① 请确保低仓的清洁情况后再使用本打印机。若低仓内有杂物，在打印过程中可能会造成打印头损坏，如有杂物，请用专用清洁装置或酒精清洗低仓和打印头。

② 打印机发生故障时请立即关闭电源。

③ 打印机内部有复杂的电路和装置，请不要擅自拆解打印机。

④ 请在凉爽、通风的室内给电池充电。不要将打印机和电源适配器暴露在高温、潮湿或放入水中，以免短路、造成电池发热、冒烟、变形、损坏、甚至爆炸。如果电源适配器接触到水或其它液体，要立刻切断电源。当您发现打印机或电源适配器冒烟或发出异味时，请立刻按下电源适配器，注意避免被灼伤。

⑤ 请不要挤压、机械振动、晃动打印机和电源适配器、拆卸或改装电源适配器。严禁在电源线损坏的情况下使用电源适配器，否则会导致触电、起火和电源适配器损坏。

⑥ 拔插头时要抓住电源适配器，拉电源线会损坏电线。

⑦ 请不要在加油站、燃料仓库等易燃易爆品附近使用打印。

05 WARRANTY

① 自购买之日起，本产品打印头保修3个月或打印距离不超过30KM(以先到为准)，其余部件保修12个月。

② 保修方式为送修，用户需将产品寄送至销售服务中心。③ 超过保修期的产品，需进行维修服务时，请联系售后服务中心，有提供维修服务。

- 因意外、滥用、误用、或使用非本公司耗材导致的损坏；
- 超出保修期限；
- 擅自拆机修理或授权改装；
- 打印头划伤引起的打印缺失；
- 购买记录与保修机器序列号不相符的；
- 因人为及其他不可抗力造成损坏的。

保修卡 WARRANTY CARD

□ 本产品从购买起，正常使用条件下，保修期为12个月。保修期内，因产品质量问题，经保修人员及确认属产品质量问题，为提供维修服务。请提供保修卡。□ 本产品为产品保修卡，请妥善保管，遗失不补。

用户名称	
用户电话	
购买日期	
产品型号	
序列号	
出厂检验	合格



CE FC RoHS

04 WARNINGS

1. Make sure that the paper bin is clean before using the printer. If there is any debris in the paper bin, the print head may be damaged during printing. In case of any debris, use a special cleaning device or alcohol to clean the paper bin and print head.

2. Turn off the power immediately when the printer malfunctions.

3. There are complex circuits and devices inside the printer, please do not disassemble the printer without authorization.

4. Charge the battery in a cool and airy room. Do not expose the printer and power adapter to high-temperature and high-humidity environments, or water to avoid short circuits that can cause the battery to heat up, smoke, deform, damage, or even explode. If the power adapter comes into contact with water or other liquid, cut off the power immediately. When you notice smoke or an odor from your printer or power adapter, unplug the power adapter immediately and take care to avoid burns.

5. Please do not squeeze, mechanical vibration, shake the printer and power adapter, remove or modify the power adapter. It is forbidden to use the power adapter when the power cord is damaged, otherwise it will cause electric shock, fire and damage to the power adapter.

6. When unplugging the printer, grab the power adapter. Pulling the power cable will damage the cable.

7. Do not use the printer near flammable products such as gas stations and fuel warehouses.

05 WARRANTY

1. From the date of purchase, the print head of this product shall be guaranteed for 3 months or the print distance shall not exceed 30 km (whichever comes first), and the rest parts shall be guaranteed for 12 months.

2. You need to send the product to the sales service center for repair.

3. Products beyond the warranty period need to be repaired. Please contact the after-sales service center to provide repair parts for paid.

4. Warranty services are not available during the warranty period if:

- (1). The damage is caused by accidents, overuse, misuse, or use of other companies' consumables.
- (2). The warranty period has expired.
- (3). You disassemble, repair or modify the printer without authorization.
- (4). Missing prints are caused by the scratches on the print head.
- (5). The purchase record is inconsistent with the serial number of the machine under warranty.
- (6). The damage is caused by man-made or other force majeure.

WARRANTY CARD

□ Since purchasing this product, normal operation and have not been disassembled and repaired, and the warranty personnel confirmed that it is a product quality problem, all maintenance services are provided according to the warranty terms. □ This card is the only certificate of product warranty. Please fill in and keep it properly when you buy it.

User:	
Phone No.:	
Purchase date:	
Type:	
Serial number:	
Inspection:	(Qualified)



CE FC RoHS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction