

## New Bright

### Table of Contents

1


- Section 1: Table of Contents
- Section 2: Component Checklist
- Section 3: Charging the Battery
- Section 4: Battery Installation in Vehicle
- Section 5: Vehicle Features and Functions
- Section 6: Body Shell Removal
- Section 7: Battery Installation in Transmitter
- Section 8: Transmitter Features and Functions
- Section 9: Proper Use Precautions and Care
- Section 10: Trouble Shooting and Support
- Section 11: Cautions

REF: 491987-409102

## New Bright

### Component Checklist


2

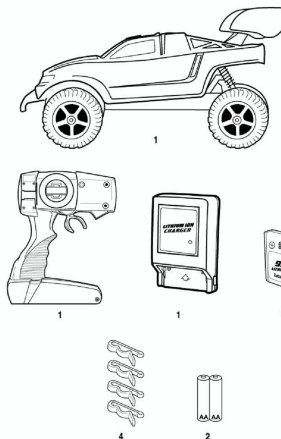

## Battery Pack

### Charging the Battery

3

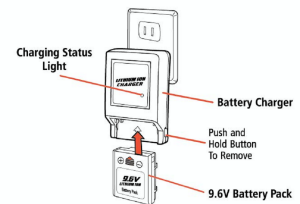

1. Insert the 9.6V Lithium Ion rechargeable battery pack securely into the charger and push up to lock. Be sure the arrows are properly matched (as shown above).
2. Plug the Charger into a standard indoor electrical outlet. This power unit is intended to be correctly orientated in a vertical or wall mount position.
3. Allow battery to charge for 1-1.5 Hours. Charging Status Light will be solid red while battery is charging. When charging is complete, light will blink green.
4. To remove the battery, press and hold the release button and slide battery down to unlock (as shown above).
5. Charge will last approximately 12 minutes depending on terrain and driving style.

**IMPORTANT:** It is normal for the battery pack to become warm after charging and/or use. Be sure to allow the battery pack to cool before using or recharging. Recharging a warm battery pack will greatly reduce the battery life.


#### ATTENTION PARENTS:

- The Battery Charger & Battery Pack need to be periodically examined for potential hazards. Any potentially hazardous parts need to be repaired or replaced.


## Vehicle

### Battery Installation

4

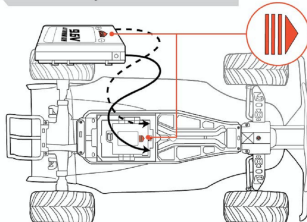

Locate and align arrow on battery pack with arrow inside battery compartment. Place battery pack in battery compartment and slide battery forward in direction of arrow. Once in place, turn locking tab to keep battery pack secure.

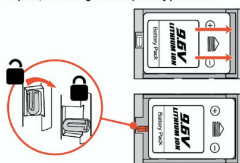


If battery pack is not completely in place locking tab will not fully turn.

## Vehicle

### Features and Functions

5

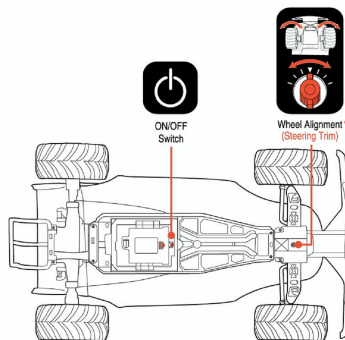

\* If vehicle pulls to the left or right during forward driving the Steering Trim may need to be adjusted. The Steering Trim is located on bottom of chassis between the front wheels.


## Vehicle

### Body Shell Removal

6

Remove body shell for easy cleaning.

Locate the 4 body pins on top of vehicle body. Pull pins as shown and set aside.

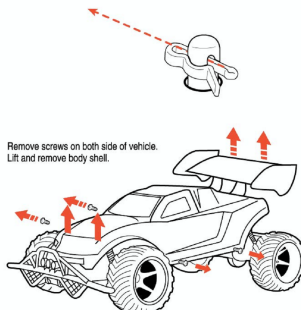

Remove screws on both side of vehicle. Lift and remove body shell.