
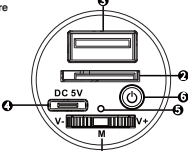


<div data-bbox="414 555 609 587">USER MANUAL</div> <div data-bbox="414 683 609 957"></div> <div data-bbox="367 975 656 994">Thank you for purchasing a bluetooth speaker!</div>	<div data-bbox="734 539 1099 592"><b>Product main function</b> 1. Bluetooth connection, wireless bondage Bluetooth V5.0 version, lower power saving mode, get rid of the constraints of traditional connection, enjoy unlimited music fun.</div> <div data-bbox="734 600 1003 751"><b>Product Structure</b> </div> <div data-bbox="734 756 1090 890"><b>Button Instruction</b> 1. M key: Long press to the mode key, short press to play or pause. V+ key: Long press to the right for volume up, short press to the next song. V- key: Long press to the left to turn down the volume up, short press to switch to the previous song. 2. T card: Insert T card to play music. 3. U disk: Insert U disk to play music. 4. DC 5V: Plug in the type-c cable for charging. 5. Indicator light. 6. On/Off key: Long press on/off.</div> <div data-bbox="734 895 1055 1015"><b>How to connect to Bluetooth:</b> When you turn on the speaker it is already on the Bluetooth mode. Now go to your cell phone or any smart to search for the Bluetooth connections. You should see the Bluetooth name "EWPAAW". Please select that and now you should be successfully connected with the Bluetooth, ready to enjoy the tunes! In future when you turn the speaker on, it will automatically connect to last device unless cleared from the pairing history on your smart device.</div>	<div data-bbox="1131 539 1509 608"><b>How to connect TWS function:</b> When the two products start up at the same time, double-click the mode key to hear the "Dong" sound, and the two products will be connected successfully. Turn on the Bluetooth function of the mobile phone, connect the pairing name, and play the music to both products at the same time.</div> <div data-bbox="1131 614 1509 750"><b>How to use the radio function:</b> When you turn on the speaker take your finger, first slightly press down on the volume knob and then scroll it to the left, after releasing your finger, you will hear a beep. Then repeat the same process. After doing it the second time, you will hear a buzz and you will be on the radio mode. Now short press and release the volume knob and it will start scanning the radio stations. This should take around 2 minutes to scan through stations. Once the scanning is complete, then you can scroll left or right on volume knob to go through the radio stations. If you want to adjust the volume, scroll left or right and hold it to adjust the speaker volume accordingly.</div> <div data-bbox="1131 754 1509 810"><b>How to charge the speaker:</b> A charging wire comes along with the speaker. Plug the type-c into the speaker and the other side of the cable; plug it in any usb adapter. That will charge the speaker. It takes around 3 hours to be fully charged and the speaker.</div> <div data-bbox="1131 825 1509 1007"><b>Warning:</b> This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,</div>	<div data-bbox="1543 539 1921 738">may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.</div> <div data-bbox="1543 754 1921 798"><b>RF exposure:</b> The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</div>
--	---	--	---

尺寸：单页面54\*65mm总长162\*65mm折页