







Havion Battery Doorbell+Lock 3-in-1

QUICK START GUIDE

— K02 —





P1-P4
Hardware introduction

P5-P6
Parts list

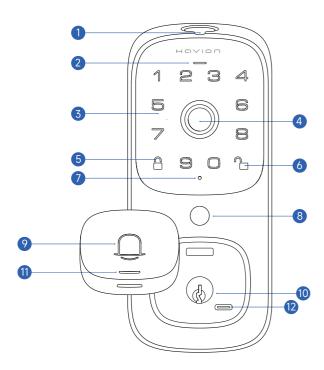
P7-P17
Installation overview

P18–P21
Programming Instructions

Using the App

P23-P24 Video Guide

Model: K02



- **1** Fingerprint Scanner: Use to unlock the door.
- 2 Status Light :
 - · Green: Succeed(Door unlocked)
 - · Red : Abnormal status detected
- 3 Touch Keypad
- 4 High-Definition Camera
- **5** Lock Button
- **6** Unlock Button
- Microphone

- 8 Motion Sensor
- Doorbell Button
- 10 Lock Cylinder
- 11 Doorbell Light: The ring light automatically turns on when someone approaches the door.
- (2) USB-C Port: Charges the lock in emergency situations. To stop lock tampering, this port is solely for charging purposes and can not transfer any data.

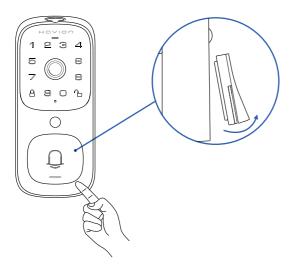
- Rechargeable Lithium Battery
- 2 Charging Port
- **3** Setting Button

- 4 Lock & Unlock Button
- 6 Manual Lock/Unlock Knob

► How To Open /Close Lock Cylinder Cover

Guide of how to remove the doorbell button.

Remove:




Put it back:



Align the doorbell button module with its original position and gently place it back in a vertical position.



 
Press lightly with your thumb at the arrow location to push the upper end of the doorbell button module in.



Press the doorbell button to confirm if it has been installed properly.

► Doorbell Chime*

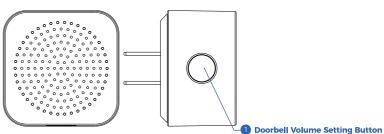
Model: K02



Chime accessory pairing guide:

- 1. Click to adjust the volume.
- 2. Double-click to change the ringtone.
- 3. Press and hold for 10 seconds to enter the pairing mode.

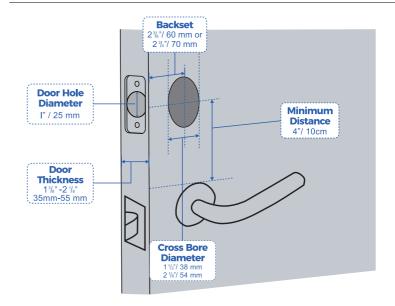▶ Compatible Doors



► Installing Video Smart Lock

Parts List

Step 1. Install Deadbolt







Strike Screws (x2) 25mm

Step 2. Install Strike Plate











Strike Screws (x2) 25mm

Step 3. Install Exterior Assembly



Exterior Assemble



38mm spacer

Step 4. Install Interior Assembly



Interior Assemble



Mounting plate Screws (x2) 40 mm



Interior Assembly Screws (x2) 25 mm



Interior Assembly Screws (x2) 5 mm



Mounting plate Screws (x2) 30 mm



Battery

Keys (x2)



Screws cover

Other







Charging cable for battery

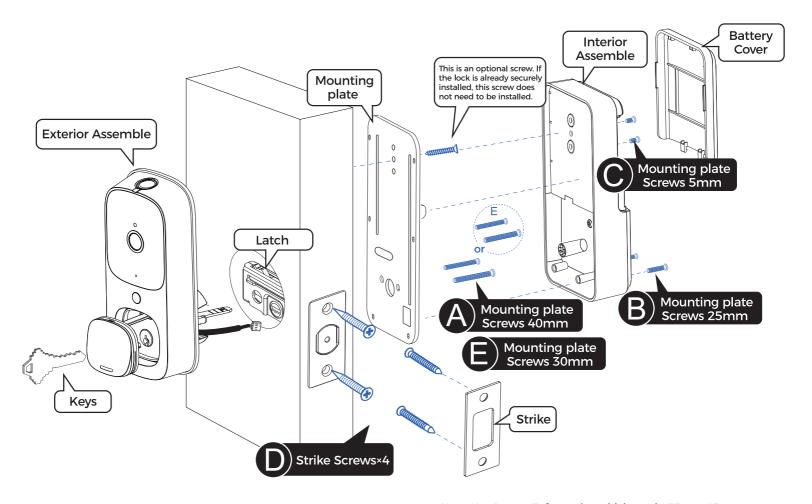
Installation Video





Go to https://www.havion.com to watch the installation video. If any questions, please email to Service@havion.com or call US: +1(888) 241-0666

— 6 —





Note: Use Screws E If your door thickness is 35mm-45mm, Use Screws A if your door thickness is 45mm-55mm.


► Step 1. Install Deadbolt

1. Check your door to see if the deadbolt requires adjustment.

 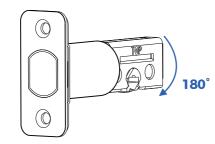 
If the backset is 70mm, turn the faceplate 180 $^{\circ}$ to extend the length.








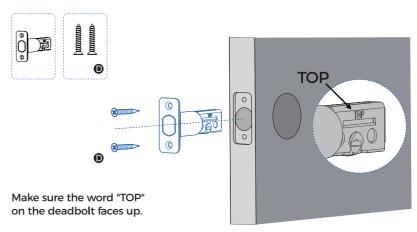2. Insert and screw the deadbolt into the doorframe.




► Step 2. Install Strike Plate

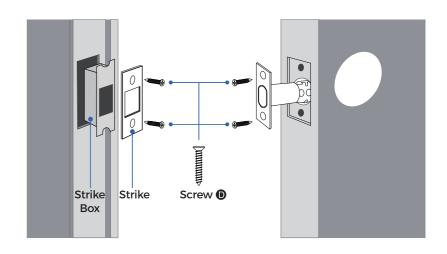


► Step 3. Install Exterior Assembly

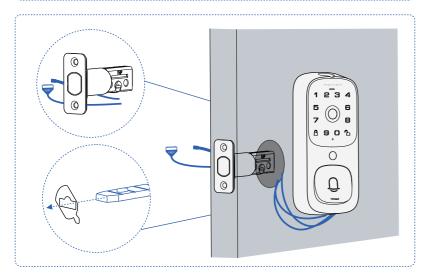
If you have a 38mm cross bore,replace the spacer before installation. Cross Bore Diameter 11/38 am 21/36 am



► Step 4. Install Interior Assembly

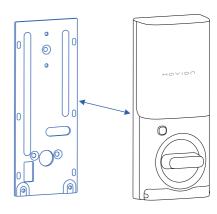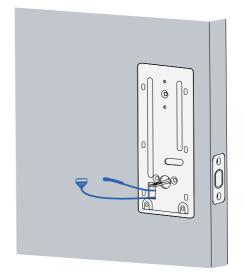
1. Detach the back cover from the interior assembly.






2. Run the wires through the back cover.

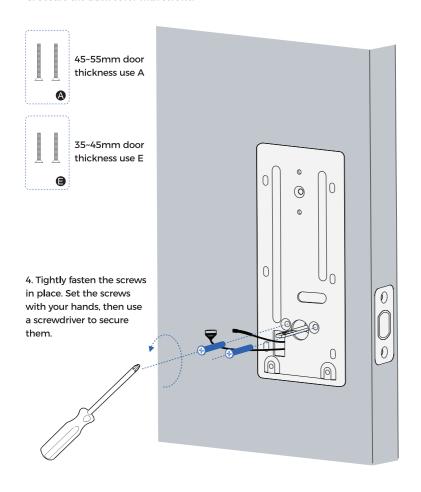
3. Secure the back cover with screws.



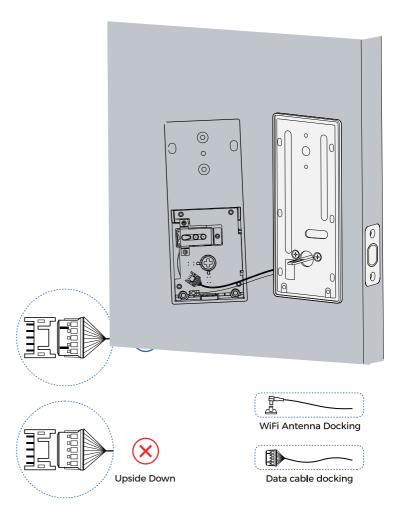
5. Wire to the interior assembly.



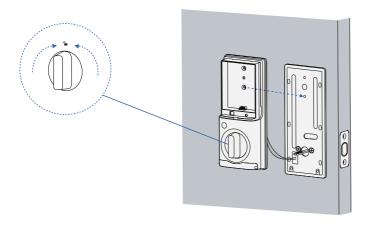 $\,$ 6. Mount the interior assembly. Make sure both wires are tucked into the cabin on the back of the interior assembly.




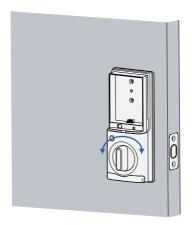
7. Check if the deadbolt retracts by turning the thumbturn.





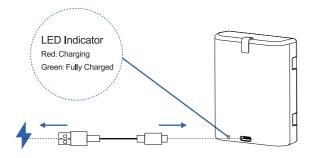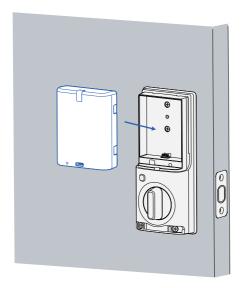
8. Fully charge the battery before first use. It might take about 6 hours.





▶ Programming instructions

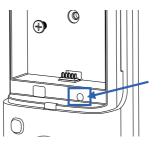NOTE: You can also set up your lock directly in the Blackview Security App, The following steps are listed to help you complete the basic setup without a smartphone




Setting Button: Press and enter administrator password to enter Setting Mode.





Unlock Button: Use as confirm button.

 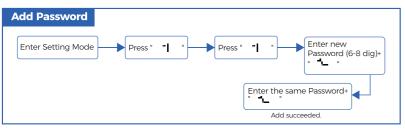  
4. Setting Mode Function List



 


 


 














_____ 19 _____

____ 20 ____

5. Vocation Mode

When you need to go on vacation for an extended period, you can set the door lock to vacation mode. In this mode, the door lock will disable some functions and reduce response speed to minimize power consumption and prevent the battery from draining during long periods of inactivity.

Exiting Vacation Mode:

While in vacation mode, the touch keypad will no longer be activated by touch. To exit vacation mode and activate the touch keypad, you need to press and hold the "Unlock" button for 5 seconds.

Enter Path: Setting Mode → Press [4] → Press [4]

6. Automatic Detection Of Unlocking Direction

When you find that the actions of the lock button and unlock button are opposite to the actual door lock operation (meaning that pressing the lock button performs the unlock action), this is usually due to the door lock incorrectly determining the direction of opening. You can use this function to re-detect the opening direction and restore normal operation to the door lock.

Enter Path: Setting Mode → Press [4] → Press [6]

7. Permanent Unlock Mode

Once the Permanent unlock mode is activated, the door lock will no longer automatically lock until it is manually locked or the lock button is pressed to lock it.

Note: When manually locking or pressing the lock button to lock, the system will automatically exit the constant unlock mode.

Enter Path: Setting Mode → Press [4] → Press [7]

► Download Havion App









Download the app to discover all K02 functions If any questions, please email to Service@havion.com or call US: +1(888) 241-0666



Guide to connecting devices to WIFI

▶ Video Guide

Scan the QR code to watch the video instruction on how to perform the operation.

Program the Lock Video



K02 deadbolt lock Installation Guide



Guide to connecting devices to WIFI



Factory reset



passcode set up



Fingerprint addition setup



Volume control



Constantly open mode set up



delete fingerprint and passcode



auto lock setting



emergency Power supply



Motion sensor setup





Installation and usage instructions for Ding-dong machine



Alexa setup and usage demonstration



Vacation mode set up



Remote monitoring



Access log query and deletion



Remote doorbell unlocking



Door Knob Installation Video

NOTICE

Warning

replacement of a battery with an incorrect type that can defeat a safeguard; disposal of a battery into fire or a hot oven, or mechanically crushinng or cutting of a battery, that can result in an explosion;

leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and a battery subjected to extremely low air pressure that may result in an exion or the leakage of flammable liquid or gas.

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN IINCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THEINSTRUCTIONS

Federal Communications Commission (FCC) compliance staatement:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.
- 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to

operate the equipment.

Note: This equipment has been tested and found to comply with the limits fClass B digital device, pursuant to part 15 of the

FCC Rules. These limits are designed to provide reasonable protection agaiference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and usedordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not in a particular installation. If this equipment does cause harmful

interference to radio or television reception, which can be determined by the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to ich the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

RF Exposure statement:

This equipment complies with FCC radiation exposure limits set forth ffor an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Customer Service

Service Hotline:

US: +1(888) 241-0666

Operating hours: 11:00 AM-8:00 PM EST

Official Support Email: Service@havion.com

Website: https://www.havion.com

Jiangsu Niu Electric Technology Co.,Ltd No.387 Changting Road, West Taihu Science and Technology IndustrialPark, Changzhou City,jiangsu, PR. China

K02 说明书(英语版)

材质: 100克双胶纸, 4C印刷 骑马订

展开尺寸: 240x170mm(成型尺寸120x170mm)

PANTONE 3535 C

