

GRW STYLE

USE WIFI/BLE CONFIG BOARD
TO CHANGE WIFI/BLE MODES.
IF TURNING ON BOTH WIFI AND BLE
MUST TURN ON WIFI BEFORE BLE





ADD STYLE

USE WIFABLE CONFIG BOARD
TO CHANGE WIFABLE MODES.
IF TURNING ON BOTH WIFI AND BLE
MUST TURN ON WIF BEFORE BLE.

WIFABLE



