

User Manual

PBT1074

(Fold Inward) — — — — ➔

(Front Cover)

89MM

89MM

Compliance Information

FCC Warning
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Change or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Increase the separation between the equipment and receiver.
• Reorient or relocate the receiving antenna.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure conditions without restriction.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING: Li-ion Battery Inside
This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

Rating Label Definitions
☞ Direct current symbol.
☞ This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

☞ This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.
☞ Bluetooth
☞ This symbol represents FCC Declaration of Conformity and compliance.



Warranty Information

90-day Limited Warranty
Territory: United States/Canada
LIMITED WARRANTY TO ORIGINAL CONSUMER
This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:
• Visit our customer support portal: www.customersupport123.com
• Select the brand and model of your device
• Select **Service Request** and fill out the form to begin your inquiry
• Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, REVENUE, DATA OR RECORDS CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Designed in US
Printed in China
v1.05-2021

Polaroid

Have questions? We've got answers.

Visit us at customersupport123.com



©2021. All rights reserved.

Polaroid, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. PLR IP Holdings LLC, does not manufacture this product or provide any manufacturer's warranty or support.

Polaroid



XY-AU008-1

Bluetooth Speaker

User Manual

Before You Begin...


READ CAREFULLY AND KEEP THIS MANUAL

Customer Support
For any questions or problems with your product, please visit our website at customersupport123.com.

- Caution**
To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.
- **THIS DEVICE IS NOT A TOY**, keep away from children and pets.
 - Do not disassemble, modify, or repair the device.
 - Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
 - **Do not submerge in water.**
 - Low power may cause poor Bluetooth connection or sound distortion.
 - Do not overcharge battery.
 - If using with a USB adapter, make sure the adapter is not damaged.
 - Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
 - The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

- In the Box**
- PBT1074 - Wireless Speaker (x1)
 - Micro-USB Charging Cable (x1)
 - User Manual (x1)

Location of Controls

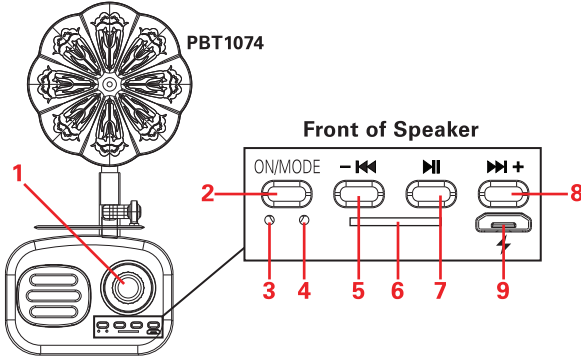

1. [Volume] Dial
2. [ON/MODE] Button:
Press: Change input mode
Press+hold: Power ON/OFF
3. Charging LED Indicator
4. Bluetooth LED Indicator
5. [-|||] Button:
Press: Skip to previous track
Press+hold: Decrease volume
6. TF Card Slot
7. [|||] Button:
Press: Play/pause, Scan stations (FM mode)
8. [|||+] Button:
Press: Skip to next track
Press+hold: Increase volume
9. Micro-USB Charging Port

Getting Started

Charging the Speaker

Plug the micro-USB (smaller) connector of the included charging cable into the micro-USB charging port on the speaker. Plug the USB (larger) connector into a USB power source such as the USB port on a computer, or into a **5V USB adapter (not included)** and plug into a wall outlet.

The charging LED indicator will **turn RED** while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.

Powering ON/OFF

- Press + hold the [ON/MODE] button to power the speaker ON or OFF.
- When powered ON, the speaker will enter Bluetooth pairing mode, and may automatically re-pair to any available previously-paired device nearby.

Adjusting Volume & Playback

- Press the [|||] to pause/resume playback (*Bluetooth mode only*).
- Press the [|||+] button to skip to the **next** track/station.
- Press the [-|||] button to skip to the **previous** track/station.
- Press + hold the [-|||] and [|||+] buttons to adjust volume, or use the [Volume] Dial.

In Bluetooth mode, you can also adjust volume & playback with the controls on your paired device.

Changing Input Modes

- Press the [ON/MODE] button on the speaker to switch input modes (Bluetooth, FM radio, TF card).

Bluetooth Pairing

1. Power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode. The Bluetooth LED indicator will quickly flash BLUE.
2. Set your mobile device to search for Bluetooth devices. When it appears, select **PBT1074** from the list of found devices.
3. After a successful pairing, a tone will be heard, and the Bluetooth LED indicator will turn solid BLUE. You should be able to play music on the speaker.
4. When playing music, the Bluetooth LED indicator will slowly flash BLUE.

In Bluetooth mode, playback and volume can be controlled using your paired device, or the buttons on the speaker listed in the **Adjusting Volume & Playback** section.

Using the FM Radio

Change input modes until you enter FM radio mode.

In FM radio mode, all playback and volume adjustment will be controlled by the buttons on the speaker.

- Press the [|||] button to start or stop automatically scanning and saving nearby FM radio stations. If not stopped, the radio to make a complete scan and save of all available radio stations, and return to the first saved station.
- After you have scanned and saved stations, press the [-|||] and [|||+] buttons to skip through saved stations.

Using a TF Card

Power the speaker ON. Insert a TF card into the TF card input port on the speaker with the metal contacts facing up, and push in until it clicks. When a TF card is inserted, the speaker will automatically switch to TF mode and begin playing music off the card.

- In TF card and USB mode, all playback is controlled by the buttons on the speaker.
- Press the [|||] button to pause and resume playback.
 - Press the [-|||] and [|||+] buttons to skip tracks.

(Back Cover)

Definiciones Etiquetas de Clasificación

- ☞ Símbolo de corriente continua.
- ☞ Este símbolo significa que el producto no debe desecharse como basura doméstica y debe entregarse a una instalación de recolección adecuada para su reciclaje. La eliminación y el reciclaje adecuados ayudan a proteger los recursos naturales, la salud humana y el medio ambiente.
- ☞ Este símbolo significa y declara que este equipo tiene carga de batería que cumple con la CEC y la eficiencia energética.
- ☞ Bluetooth
Este símbolo significa que se trata de un dispositivo inalámbrico con tecnología Bluetooth®.
- ☞ Este símbolo representa la Declaración de Conformidad y Cumplimiento con la FCC



Póliza de Garantía

AUDIO PERIODO DE GARANTÍA / 6 MESES

Felicidades por su compra, estamos confiados que este producto le entregará momentos de gran satisfacción. Por favor desiste algunos minutos a leer detenidamente el MANUAL DE INSTRUCCIONES, antes de operar su nuevo producto, de esta forma se asegurará de hacerlo correctamente y sin riesgos.

Este producto ha sido fabricado bajo estrictas normas de calidad y ha sido sometido a un riguroso control antes de su comercialización, lo que asegura un excelente funcionamiento en condiciones normales de uso.

En cumplimiento con lo establecido en la ley 19.496 (Ley del Consumidor), se otorga a este producto una garantía por el periodo de 6 meses, a contar de la fecha de adquisición, siempre que deberá ser acreditada adjuntando su respectiva factura o factura de compra.

Esta garantía cubre defectos de funcionamiento de origen técnico de la unidad o de sus componentes, mano de obra y repuestos necesarios para la restauración del producto a su estado original de normal funcionamiento "siempre que este no se hubiere deteriorado por algún hecho imputable al consumidor" (Art. 21, Párrafo 1, Ley 19.496).

Para hacer efectiva esta garantía, el propietario en Región Metropolitana deberá acudir o enviar su producto al **Servicio Técnico SG Servicios Ltda.** Ubicado en Av. Italia 1729, Nuncio, Fono: 23417759.

En regiones deberá acudir a la red de servicios técnicos autorizados de la marca, quienes repararán gratuitamente su producto, al cumplir las condiciones y plazos indicados en esta Póliza.

Servicio al Cliente
Fono: 02-23419466
Av. Italia 1729, Nuncio
info@sgservicios.cl
www.sg.servicios.cl

Polaroid

Atención al Cliente
Si el producto fue adquirido en Chile, favor considere este manual de usuario y garantía.



©2021. All rights reserved.

Polaroid, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. PLR IP Holdings LLC, does not manufacture this product or provide any manufacturer's warranty or support.

Polaroid



XY-AU008-1

Bluetooth Speaker


Manual de Usuario

Antes de empezar...

- Precaución**
Para garantizar un uso seguro y adecuado, lea toda la información de seguridad antes de usar el dispositivo. Úselo únicamente con baterías, cargadores, accesorios y suministros aprobados por el fabricante.
- **ESTE DISPOSITIVO NO ES UN JUGUETE**, NO permita que niños o mascotas lo usen o jueguen con este dispositivo.
 - No desarme, modifique ni repare el dispositivo.
 - No lo exponga a temperaturas extremas (calor o frío), llamas directas, humedad o condiciones húmedas.
 - La baja potencia puede provocar conexión Bluetooth deficiente y distorsión de sonido.
 - No sobrecargue las baterías.
 - Si lo usa con un adaptador USB, asegúrese de que el adaptador no esté dañado.
 - No permita que el puerto USB o los conectores del cable USB suministrados se expongan al polvo o al agua, o que entren en contacto con materiales conductores como líquidos, polvos metálicos.
 - El altavoz incorpora baterías, las que no deben ser desechadas junto al resto de la basura domiciliar. Por favor consulte con las autoridades locales sobre el modo correcto de eliminación del producto.

- Dentro de la caja**
- PBT1074 - Parlante Portátil (x1)
 - Cable de carga micro-USB (x1)
 - Manual de usuario (x1)

Ubicación de los Controles

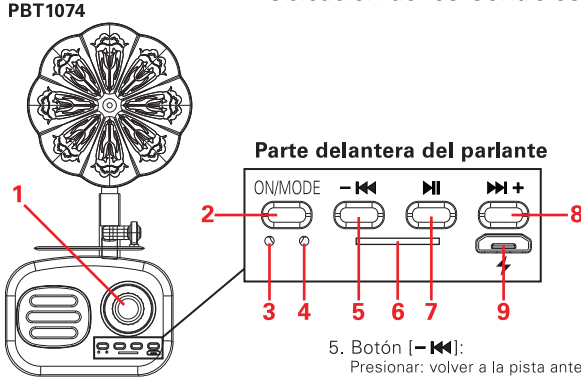

1. Perilla [Volume]
2. Botón [ON/MODE]:
Presionar: cambiar modo de entrada
Mantener presionado: Encendido/Apagado
3. Luz LED indicando carga de batería
4. Luz LED indicando conexión a Bluetooth
5. Botón [-|||]:
Presionar: volver a la pista anterior
Mantener presionado: bajar el volumen
6. Puerto para tarjetas TF
7. Botón [|||]:
Presionar: Reproducir/pausar
Escanear estaciones de radio (modo FM)
8. Botón [|||+]:
Presionar: saltar a la siguiente pista
Mantener presionado: subir el volumen
9. Puerto de carga micro-USB

Para Comenzar

Cargar el parlante

Enchufa el conector micro-USB (más pequeño) del cable de carga incluido en el puerto correspondiente del parlante. Enchufa el conector USB (más grande) en una fuente de energía USB, como el de una computadora, o en un **adaptador de carga USB de 5V (no incluido)** y conéctalo a un tomacorriente de pared.

La luz LED se pondrá ROJA mientras se carga y se APAGARÁ cuando esté completamente cargado. Cuando quede poca batería, se escuchará un tono constantemente, indicando que el parlante debe ser cargado.

Encendido/Apagado

- Mantén presionado el botón [ON/MODE] para ENCENDER o APAGAR el parlante.
- Cuando el parlante esté encendido, estará en el modo de emparejamiento de Bluetooth, y quizás se conecte automáticamente con un dispositivo vinculado previamente.

Ajustar volumen y reproducción

- Presiona [|||] para pausar/reanudar la reproducción (solo en modo Bluetooth).
- Presiona el botón [|||+] para saltar a la siguiente pista/estación.
- Presiona el botón [-|||] para retroceder a la pista/estación anterior.
- Mantén presionado los botones [-|||] y [|||+] para ajustar el volumen, o utiliza la perilla [Volume].

En el modo Bluetooth, puedes también ajustar el volumen y la reproducción con los controles de tu dispositivo conectado.

Cambiar los modos de entrada

- Presiona el botón [ON/MODE] del parlante para alternar entre los modos de entrada.

Vincular con Bluetooth

1. Enciende el parlante. Se escuchará un tono y el aparato entrará en emparejamiento Bluetooth. La luz LED indicará la vinculación disponible con Bluetooth parpadeando en color AZUL.
2. Configura tu teléfono móvil para buscar dispositivos Bluetooth. Cuando aparezcan, selecciona **PBT1074** de la lista de dispositivos encontrados.
3. Después de una vinculación exitosa, se escuchará un tono y la luz LED de Bluetooth dejará de parpadear y quedará fija en AZUL. Ya podrás reproducir música.
4. Cuando reproduzcas música, la luz LED de Bluetooth parpadeará lentamente en AZUL.

En el modo Bluetooth, la reproducción y el volumen pueden controlarse mediante tu dispositivo conectado o revisando el listado que trae el parlante, en la sección Ajustar volumen y reproducción.

Usar la radio FM

Cambia los modos de entrada antes de acceder a la radio FM. En la radio FM, toda reproducción y el volumen se puede controlar mediante los botones en el parlante.

- Presiona el botón [|||] para iniciar o detener automáticamente la búsqueda y el almacenamiento de las estaciones disponibles. Si se deja realizar por sí sola, la radio hará automáticamente una búsqueda completa y regresará a la primera estación.
- Después de que hayas escaneado y guardado las estaciones de radio, presiona los botones [|||+] y [-|||] para alternar entre las estaciones.

Usar una tarjeta TF

Enciende el parlante. Inserte una tarjeta TF en el puerto de entrada del parlante con la parte de metal hacia arriba y presione hasta que haga clic. Cuando se inserta una tarjeta TF, el altavoz cambiará automáticamente al modo TF y comenzará a reproducir música desde la tarjeta.

- En la tarjeta TF y el modo USB, la reproducción se controla mediante los botones del parlante.
- Presiona [|||] para pausar y reanudar la reproducción.
 - Presiona [-|||] y [|||+] para saltar pistas.