



INSTRUCTIONS

⚠ DANGER: **Nozzle is HOT**

Do not touch nozzle or stand within a distance of 3 feet.

IMPORTANT: PLEASE READ ALL THE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT.

SPECIFICATIONS:

- **Input power:** 120 volts, 60 Hz, 400 W.
- **Fuse Type:** 125 volts, 4 Amps. Quick acting.
- **Tank Capacity:** 0.318 Quart (300 ml)
- **Warm-up Time:** Approximately 3-7 minutes.
- **Fog Output:** Approximately 1,908 cubic feet per minute.

⚠ ATTENTION: **UNPLUG when not in use.**

WARNING: This product is recommended for Indoor Use Only. To reduce the risk of fire or shock hazard, do not expose this product to rain, moisture or dust.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT OPEN THE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED TECHNICIAN.

WARNING:

- Disconnect power before changing fuse.
- Do not remove cover: No serviceable parts inside.
- Use only with adult supervision.
- Do not operate without liquid.
- Indoor use only.
- Keep in dry area.
- Do not immerse in water.
- Household type.

CAUTION: To provide continued protection against risk of electric shock, connect to properly-grounded outlets only. The Fog Machine™ is equipped with a three-wire grounding type plug. This plug will only fit into a grounding type AC power outlet. This is a safety feature. If you are unable to insert the plug into your AC power outlet, contact your electrician to replace your outlet. Do not defeat the purpose of the grounding-type plug.

CAUTION:

1. **Hot surface.** Avoid contact, always use the handles to carry the fog machine.
2. Vapor from the fog machine may be irritating to some persons with allergic sensitivity.
3. Do not expose at close range to known asthmatics.
4. Use in a well ventilated area.
5. To avoid injury from hot steam - keep at least three feet away from nozzle.
6. Not for Space Heating Purposes.

Congratulations! You are the proud owner of The Fog Machine™. Please read over the directions carefully before using your Fog Machine™.

CONTENTS

The Fog Machine™	1 piece
Wireless Remote	1 piece
Handle	1 piece
Handle Screw	2 pieces
"AAA" Batteries	2 pieces

GENERAL INSTRUCTIONS

1. Always place this product on a flat, stable, heat-resistant surface, keeping the unit level.
2. Secure the handle by handle screws (See illustration 1)
3. Unscrew the Reservoir Tank Lid on the top of The Fog Machine™ and fill with Fog Solution. Close the Reservoir Tank Lid tightly. Always make sure there is enough fluid in the tank before using the fog machine. (See illustration 2)
4. Open battery cover on back of wireless remote. Place included 2 AAA batteries inside. Please observe the correct polarities during installation and follow all battery instructions. (See illustration 3)
5. Plug the A/C power cord into a standard A/C grounded wall outlet.
6. Once plugged in, a Red light will light up indicating the Unit is ON.
7. Warm up time is approximately 3 to 7 minutes for The Fog Machine™. When fully heated, the Green light on top of unit will light up indicating that the machine is ready.
8. OPERATION:
 - a. Wireless Remote Activation: Press the ON/OFF (O/I) switch located on top of The Fog Machine™ to 'O' (OFF). Point the remote toward the dome located on top of the machine and press the red button. The Fog Machine™ will spray up to 25-60 seconds and automatically stop when it needs to reheat. At any time during the fogging action, you can press the button again to stop. Wait for the green light to illuminate before operating again..
 - b. Manual Activation: Press the ON/OFF (O/I) switch on top of The Fog Machine™ to 'I' (ON). The Fog Machine™ will spray up to 25-60 seconds and automatically stop when it needs to reheat. At any time during the fogging action, you can press the button back to 'O' (OFF) to stop. Wait for the green light to illuminate before operating again.
9. When not in use, unplug the A/C power cord from the A/C grounded wall outlet.

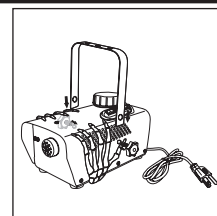 


illustration 1

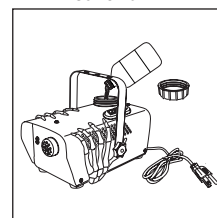 


illustration 2

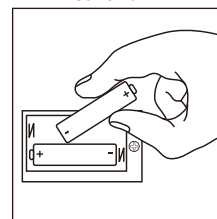 


illustration 3

BATTERY USAGE

BATTERY USAGE: See illustration. 1. Keep these instructions for future reference because they contain important information. 2. May explode or leak and cause burn injury if recharged, disposed of in fire, mixed with a different battery type, inserted backwards or disassembled. 3. Products that contain batteries should not be disposed of in fire. The batteries inside may explode or leak. 4. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 5. Do not mix old and new batteries. Replace all batteries of a set at the same time. 6. Use only batteries of the same or equivalent type as recommended by the manufacturer. 7. Be sure to insert batteries with correct polarities and always follow manufacturers' instructions. 8. Remove exhausted batteries from product promptly. 9. Do not short-circuit supply terminals. 10. Remove batteries before storage or extended periods of non-usage. 11. Clean the contacts on the batteries and the device prior to battery installation. **Non-rechargeable batteries are not to be recharged.** Rechargeable batteries are not recommended for use in this product. If rechargeable batteries are being used, however, please follow these guidelines. (1). Rechargeable batteries should be removed from the product before being charged. (2). Rechargeable batteries should only be charged under adult supervision.

WARNING: Keep this product's batteries out of the reach of small children or pets. If ingested, contact a physician immediately.

USER SERVICING INSTRUCTIONS

Fuse Replacement

WARNING: Risk of Fire: To reduce the risk of fire, replace only with same size and type of fuse.

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover with #2 pozidriv phillips screwdriver. Remove fuse carefully.

3. Replace fuse only with 4.0 Amps, 125 Volts fuse;
4. Close fuse cover.

SAFETY INFORMATION

1. Not recommended for any other use.
2. For adult use only. Keep out of reach of children and pets. When children or pets are present, close adult supervision is necessary.
3. Always operate The Fog Machine™ in an open, well-ventilated area.
4. Keep the nozzle 20" clear of contact with anything while in use.
5. Allow at least 8" free air space around the sides and top of the unit to allow for adequate ventilation. Never cover or block air vents.
6. To reduce the risk of fire or electric shock, do not expose the product to rain, moisture or dust. If water or dust gets into the housing, unplug the unit immediately and contact a qualified service technician.
7. Do not leave unattended while in use. Always unplug the unit from the electrical outlet when unattended.
8. Do not allow the power cord to hang or rest in a way that it can be tripped over or pulled.
9. Use with a 3 prong, grounded electrical outlet only.
10. Do not operate within 3 feet of electrical devices such as refrigerators, televisions, microwaves or heaters.
11. Activating the pump without fluid can cause damage to the pump and heater.

QUICK OPERATING TIPS

1. Always use the Fog Machine™ with adult supervision.
2. Never drink the Fog Solution.
3. DO NOT expose fog spray to known asthmatics or allergenic sensitive people.
4. The Fog Machine™ is not water-proof or splash-proof. For indoor use only.
5. When indoors, use in well-ventilated areas to avoid setting off smoke detectors.
6. Use with caution. It is normal for residue to build up under the nozzle and drop to the floor. This can cause a slick area and create slipping hazard.
7. Keep the Fog Machine™ nozzle at least 2 feet away from any person or objects. Small bursts will spray out while the machine is waiting for the next spray cycle.
8. **The fog spray output is very hot!** Never aim the nozzle at people or pets.
9. Do not move the machine while in operation. Allow the unit to cool before handling or servicing.
10. Always place the Fog Machine™ on a flat, stable surface.

WARNING

Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.
This item is not a toy and should be used for decorative purposes only.

TROUBLE SHOOTING CHECKLIST

If your Fog Machine™ is not working, the problem may be:

1. The power source is disabled or the cord may be unplugged .
2. There is not enough Fog Solution in the reservoir tank.

FREQUENTLY ASKED QUESTIONS (FAQ's)

1. Is artificial fog safe to breathe?

Most fog machines use fog solution made of a combination of water and a chemical called glycol which has been found to be safe and is not considered hazardous to humans. Fog machines and fog solution can generally be used without problems. However, some people do complain of respiratory problems or throat irritation when exposed to theatrical fog. Because the fog can be irritating or drying, extended periods exposure to the fog should be minimized.

- If the Fog Machine™ is used indoors you should make sure the room has adequate ventilation.
- It is a good idea not to breathe the fog for extended periods of time.
- **DO NOT** expose the fog at close range to known asthmatics or allergenic sensitive people.

2. Will fog smoke set off smoke detectors or sprinkler systems?

Yes, It is possible that the water-based particles could set off some types of smoke detectors. Usually, this is only a problem with optical- type detectors, because they sense the particles as smoke.

- Sprinkler systems, on the other hand, are usually triggered by heat, so the fog in the air will not activate heat-activated sprinkler systems.
- We recommend you run a test when used indoors to see if the fog will activate any smoke detectors. Also, when using the Fog Machine™ indoors, we recommend that the room have adequate ventilation.

- Also, if you spray a lot of fog in a small room, you may see a very thin film of residue on everything in the room. It may feel slightly sticky, but is not harmful.

3. Can food coloring or scented fluids be added to the Fog Solution?

No. Never add materials of any kind (i.e. oil, gas, perfume, food coloring) to the Fog Solution.

4. Can I make my own Fog Solution?

No. We highly recommend against trying to make your own fog solution. The chemical content of The Fog Machine™ brand Fog Solution is designed around the specifications of The Fog Machine™. A home made fog solution will not be safe, hazard-free and as efficient as a commercial version. Only The Fog Machine™ brand Fog Solution or similar water-based fog liquid is recommended.

5. What do I do if my Fog Machine™ stops working?

The Fog Machine™ does not have serviceable parts inside. Do not open the cover. Replace the fuse only with 4.0 Amps, 125 Volts.

• Do not Touch! Fog Machines get hot.

Always use the attached hanging bracket as a handle when carrying The Fog Machine™. Allow the Fog Machine™ to cool down before moving or hanging. Also, do not touch the nozzle where the fog sprays out. This can become very hot. Make sure you place the Fog Machine™ in a place away from combustible materials, i.e. curtains, leaves, paper, etc.

• Check the level of Fog Solution.

Be sure to periodically check the level of Fog Solution. Fill The Fog Machine™ tank, and then check it about every half-hour. One of the main causes of a burned-out pump motor is running the machine without Fog Solution.

6. Is fog blowing directly onto food or pets harmful?

It is not recommended that the fog from the Fog Machine™ be blown directly onto food or pets. The fog spray may leave a light residue on surfaces, similar to a hot shower on a mirror. Again, use in well-ventilated areas.

7. How much solution will my Fog Machine™ use?

In general, expect a quart of juice to last 2 to 3 hours.

8. Can I make the fog stay low to the ground?

The fog produced by the Fog Machine comes out hot and naturally rises in the air. Use shorter and more frequent bursts of fog to keep the fog as low to the ground as long as possible.

9. Can I use water in my Fog Machine™?

No. Water may cause permanent damage to your Fog Machine™.

WARNING

FCC Caution

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Part 15.105

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Verification of harmful interference by this equipment to radio or television reception can be determined by turning it off and then on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a different circuit to that of the receiver's outlet.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
3. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

User manuals for license-exempt radio apparatus shall contain the following or equivalent notice in a conspicuous location in the user manual or alternatively on the device or both.

THESE INSTRUCTIONS ARE FOR ITEM

223727



©2025 GEMMY INDUSTRIES CORP.
117 WRANGLER DRIVE, SUITE 100
COPPELL, TX 75019 U.S.A.
1 (800) 274-6717
MADE IN CHINA / PRINTED IN CHINA