

# onn.™



36" 2.1 Soundbar  
Model: 100043851

---

## PRODUCT GUIDE



- ✓ Simple setup
- ✓ One remote
- ✓ Quick settings

August 25, 2023\_V4



6 81131 41366 4



We'd love to hear from you. Scan with your Walmart app and let us know what you think.

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



# IMPORTANT SAFETY INSTRUCTIONS

15. Do not install this equipment in a confined or built-in space such as a book case or similar unit, and maintain well-ventilated conditions. The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, tablecloths, curtains, etc.

16. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

17. **WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

18. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

19.

- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- **Warning:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

 
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



# IMPORTANT SAFETY INSTRUCTIONS

20. The equipment shall be used at maximum 35 degree C ambient temperature.

21. **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.



22. Batteries should not be exposed to excessive heat such as sunshine, fire, or the like.

**WARNING:** Danger of explosion if the remote control batteries are incorrectly replaced. Replace only with the same or equivalent type.

23. Keep new and used batteries away from children.

24. If the battery compartment does not close securely, stop using the product and keep it away from children.

25. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

26. **Dolby** Audio Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

27. **HDMI**<sup>®</sup>  
HIGH-DEFINITION MULTIMEDIA INTERFACE

The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

# IMPORTANT SAFETY INSTRUCTIONS

28. Roku TV, Roku TV Ready, and the Roku TV Ready logo are trademarks of Roku, Inc.

## **CAUTION:**

Risk of explosion if the battery is replaced by an incorrect type

- replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

# LEGAL & COMPLIANCE

1. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

 
## 3. RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

# TABLE OF CONTENTS

Package Contents .....	8
Controls & Connections .....	9
First-Time Setup .....	11
Using the Remote .....	14
LED Indicator .....	16
Bluetooth Audio Pairing .....	17
Using Bluetooth mode .....	18
Wall-Mounting the Soundbar .....	19
Help & Troubleshooting .....	21

# PACKAGE CONTENTS

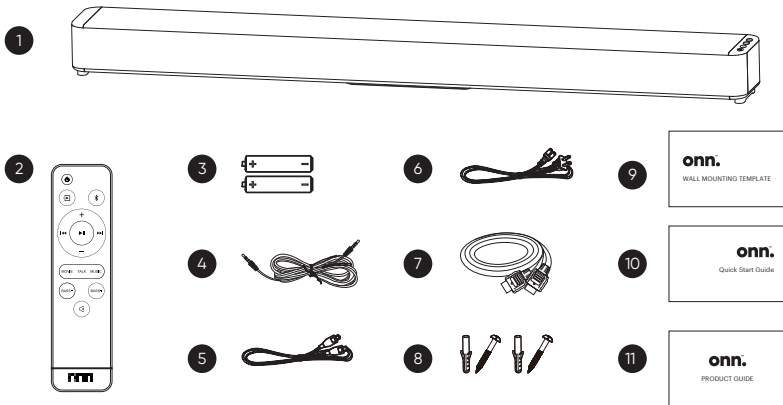

1. Soundbar

2. Remote control

3. AAA batteries

4. 3.5 mm AUX cable

5. Optical cable

6. Power cable

7. HDMI cable

8. Wall mounting kit

9. Wall mounting template


10. Quick Start Guide

11. Product Guide




# CONTROLS & CONNECTIONS
 
## Back of Soundbar

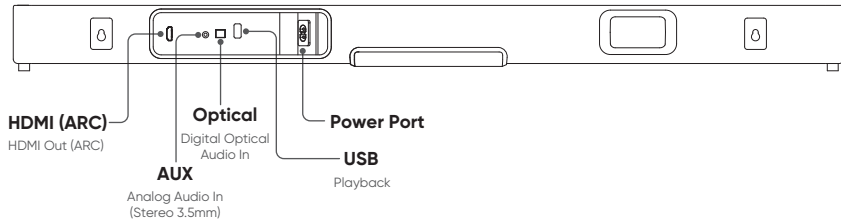


## Front of Soundbar

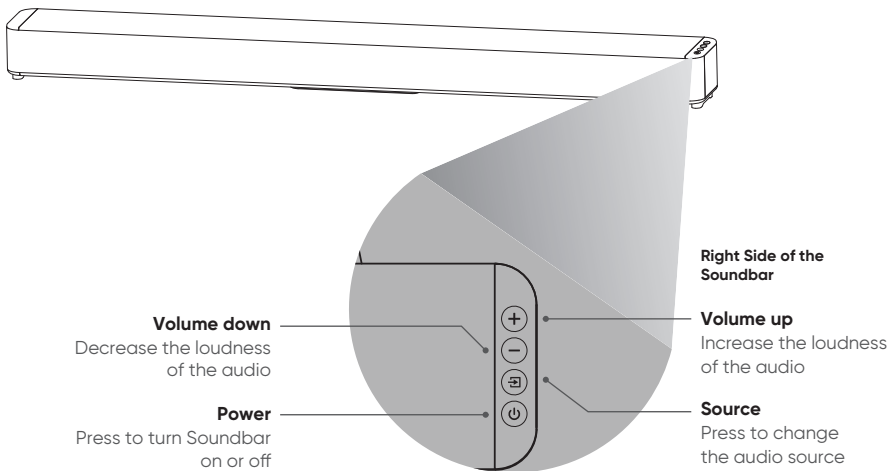 

# FIRST-TIME SETUP

## Back of Soundbar
 
### 1 CHOOSE ONE CABLE\* AND CONNECT IT TO YOUR TV

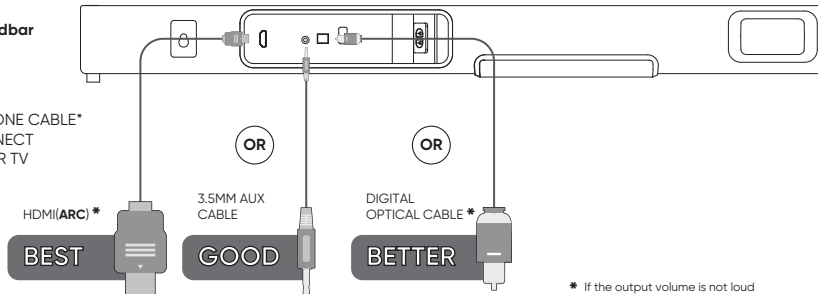

\*


- To enjoy **Dolby** Audio content, your TV must support the HDMI-CEC and Audio Return Channel (**ARC**) function. Enable CEC and ARC functions on your TV.
  - The setting method of CEC and ARC may differ by TV manufacturer. See your TV's user manual for more information.
  - Only HDMI 1.4 compatible cables can support the ARC function.
  - When the audio in a broadcast is encoded in Dolby Digital and the "Digital Output Audio Format" on your TV is set to PCM, we recommend you change the setting to **Dolby Digital** to experience better sound quality.
- \* If you have a Roku TV™, simply plug in the HDMI cable to your TV's HDMI (**ARC**) port and follow the Roku TV Ready™ on-screen instructions.

#### Sound Setting

 
Digital Audio Output	< <b>PCM</b> >
HDMI(ARC)	< <b>ON</b> >
TV Speaker	< <b>OFF</b> >

- \* If the output volume is not loud enough, strongly recommend using Aux connection.
- \* When using either of the Digital Inputs, if there is no audio: (A) Try setting the TV output to **PCM** or (B) Connect directly to your Blu-ray/ other source, some TVs do not pass through digital audio.
- \* Not all TVs have the audio outputs shown above. To connect the Soundbar directly to your other devices (Blu-Ray player, game system, etc.), see your device's user manual.

- 2** Connect the power cable to the Soundbar **AC IN** as shown. Plug the power cable into an electrical outlet.

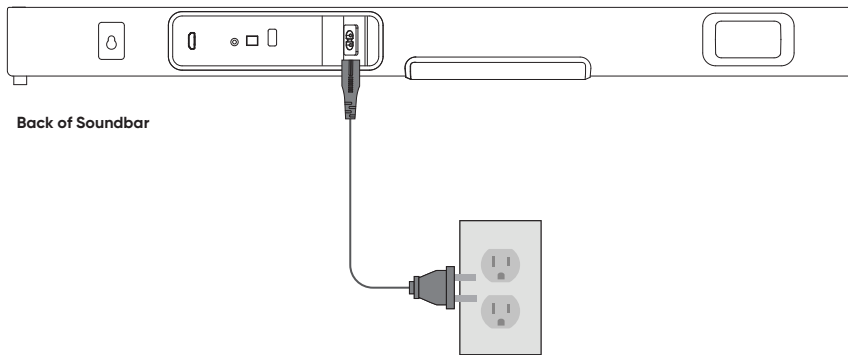


3

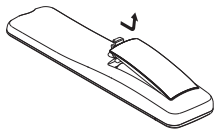 

Take off the battery cover.

 
4

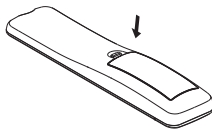


Insert the included batteries and put the battery cover back into place.

5

 
Press the **SOURCE** button to switch between audio sources. For example, if you connected your TV to AUX, set the Soundbar to AUX.

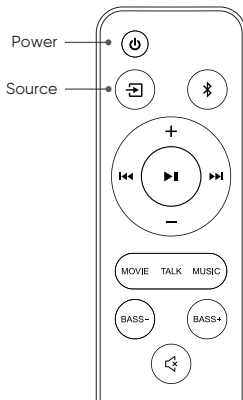

# USING THE REMOTE

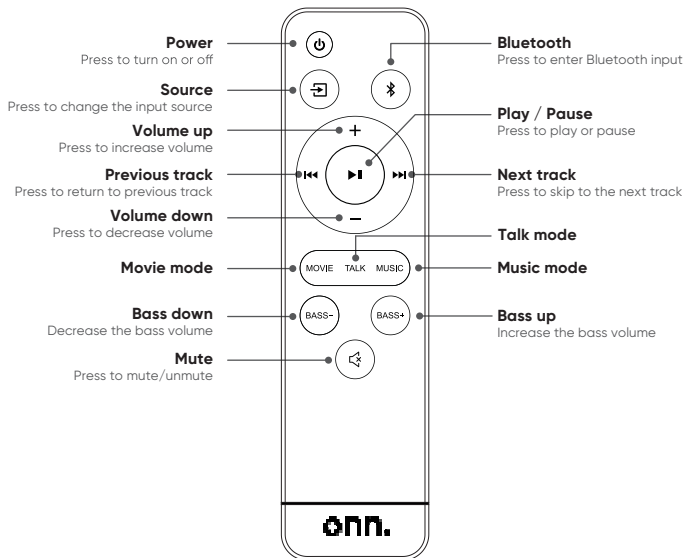 


 For the best surround sound experience, position the Soundbar as shown.  
The Soundbar should be close to ear level.

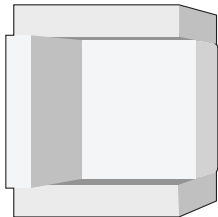

**Soundbar is centered  
below the TV.**

 (If your TV permits it, you  
can also slide the Soundbar  
underneath the TV.)

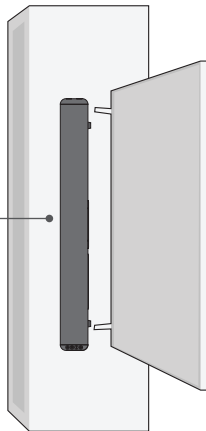

# LED INDICATOR

The LED Indicator will behave differently with each button on the remote control.



LED Indicator is located here.

Standby	Solid Red
Optical	Solid Purple
Aux in	Solid White
USB	Solid Green
HDMI(ARC)	Solid Yellow
Bluetooth pairing mode	Flashing blue
Bluetooth device connected	Solid blue
Volume up and down	Corresponding to the sound source indicator light flash 1 time
Maximum and minimum volume	Corresponding to the sound source indicator light flash 3 times
Mute	Slow flash
Movie mode	Corresponding to the sound source indicator light flash 2 times
Talk mode	Corresponding to the sound source indicator light flash 2 times
Music mode	Corresponding to the sound source indicator light flash 2 times
Bass +	Corresponding to the sound source indicator light flash 1 time
Bass -	Corresponding to the sound source indicator light flash 1 time



# BLUETOOTH AUDIO PAIRING

To pair the Soundbar with a Bluetooth device:

1. Select the Bluetooth mode on the Soundbar:
  - Use the remote control, press the **Bluetooth** button. The indicator light on the Soundbar will flash blue.
  - Alternatively, press the source button on the Soundbar until the indicator light is flashing blue.
2. You can now search for the Soundbar (**onn. 36" Soundbar**) using your Bluetooth device. Your device is connected with the Soundbar when the blue indicator light stops flashing and becomes solid. For more information, refer to the user documentation that came with the device.
3. Play audio from your Bluetooth device. Volume can be controlled on your source device and the Soundbar.



# USING BLUETOOTH MODE

Your Soundbar supports music streaming from smartphones, tablets, and computers with Bluetooth capability. Device compatibility will vary, see your device's documentation for more information. Once you have paired your source device to the Soundbar, as long as you stay within range of the Soundbar, your device should remain paired. If the input is changed, the Bluetooth device will disconnect. If the source is changed back to Bluetooth, any paired Bluetooth device will reconnect automatically.



Your Soundbar is not equipped with a microphone, so it cannot operate as a hands-free device for a smartphone.

## Maximizing Signal

A Bluetooth signal has a range of up to 30 feet. Keep in mind that Bluetooth is a compressed audio format, so streamed music may lose some integrity when compared to a wired connection.

Try the following if your sound quality is less than optimal:

 
- If you hear any break-up or disconnect while streaming music from your device, move the source device closer to the Soundbar.
- Be sure that there are no solid obstructions in the line-of-sight between the Soundbar and the source device.
- Other wireless devices can affect Bluetooth range, including wireless security cameras, wireless video baby monitors, cordless phones, and microwave ovens. Turning off or moving these devices may improve Bluetooth range.



Reduce the volume levels on your device and on the Soundbar before pressing Play. High volume levels can damage your hearing.

# WALL-MOUNTING THE SOUNDBAR

1



Place the included wall mounting template against the wall under your TV. Mark the two bracket holes using a pencil. Ensure there is enough space between the Soundbar and your TV.


2

## Install the wallmount Screws and Brackets

 Be sure your screws are attached to wood studs, drywall anchors (for drywall), or concrete anchors (for brick/concrete walls).




If you are unfamiliar with power tools or the layout of electrical wiring in the walls of your home, consult a professional installer.

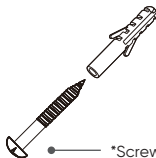


\*Screw and Bracket  
INCLUDED WITH  
Soundbar

 3

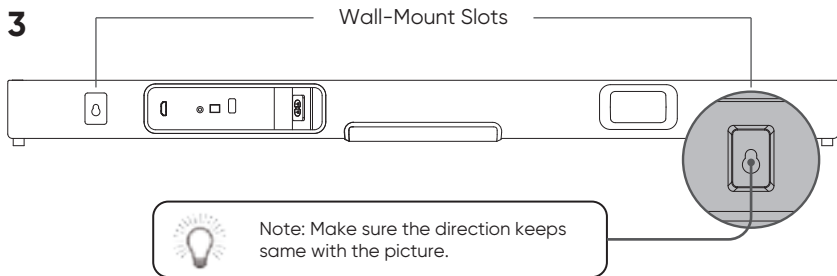

 Hang the Soundbar on the wall mount screws then slide down to lock in place.



# HELP & TROUBLESHOOTING

There is no power.

- Press the **POWER** button on the remote control or on the side of your Soundbar.
  - Ensure the power cord is securely connected.
  - Plug a different device into the electrical outlet to verify that the outlet is working correctly.
- 

There is no sound.

- Increase the volume. Press **Volume Up** on the remote control or on the side of your Soundbar.
- Press **MUTE** on the remote to ensure the Soundbar is not muted.
- Press **Source** on the remote or on the side of your Soundbar to select a different input source.
- When using the Digital Input, if there is no audio: (A) Try setting the TV output to **PCM** or (B) Connect directly to your Blu-ray/other source, some TVs do not pass through digital audio.
- Your TV may be set to variable audio output. Confirm that the audio output setting is set to **FIXED** or **STANDARD**, not **VARIABLE**. Consult your TV's user manual for more detailed information.
- If using Bluetooth, ensure that the volume on your source device is turned up and that the device is not muted.

I hear buzzing or humming.

- Ensure all cables and wires are securely connected.
  - Connect a different source device (TV, Blu-ray player, etc) to see if the buzzing persists. If it does not, the problem may be with the original device.
  - Connect your device to a different input on the Soundbar.
- 

The remote isn't working.

- Replace the remote batteries with new ones.
  - Point the remote directly at the center of the Soundbar when pressing a button.
  - If using a Bluetooth connection, some of the buttons on the remote may not be supported by the streaming application. (e.g., Pandora doesn't support the Back button.)
- 

There is no voice prompt.

- Press & hold **+** and **-** buttons simultaneously on the unit or remote control for 5 seconds to enable the voice prompt.
- 

Voice prompt is too noisy.

- Press & hold **+** and **-** buttons simultaneously on the unit or remote control for 5 seconds to disable the voice prompt.



Need help?

We're here for you every day

**7 a.m. – 9 p.m. CST.**

**1-888-516-2630**

Give us a call!

#### FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.



#### ISED Statement

- English: This device complies with Industry Canada license - exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES - 3 (B)/NMB - 3(B).

- French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

l'appareil numérique du CIEM conforme canadien peut - 3 (b) / NMB - 3 (b).

#### For Receiver:

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du CNR - 102 et conformité avec RSS 102 de l'exposition aux RF, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs RF et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé. Die Installation und der Betrieb der Ausrüstung sind uneingeschränkt.

#### For Transmitter:

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du CNR - 102 et conformité avec RSS 102 de l'exposition aux RF, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs RF et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé. Die Installation und der Betrieb der Ausrüstung sind uneingeschränkt.