Hisense

2.1 CH SoundBar with Wireless Subwoofer Model: HS219











USER MANUAL



Before using the soundbar, please read this manual thoroughly and retain it for future reference.



Contents

What's in the Box 5 Identifying the Parts 6 Main Unit 6 Wireless Subwoofer 6 Remote Control 7 Instructions 7 Prepare the Remote Control 7 Replace the Remote Control Battery 7 Placement and Mounting 8 Wall Mounting (if using option-B) 8 Connections 9 Connect to LINE IN Socket 9 Connect to HDMI (ARC) Socket 9 Roku TV. 9 Connect to OAXIAL Socket 10 Connect to OPTICAL Socket 10 Connect Power 10 Pair up with the subwoofer. 10 Using the Hisense EzPlay function 11 Basic Operation 12 Standby/On 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Brightness 12 Select a Pr	Important Safety Instructions	3
Identifying the Parts	Safety	3
Identifying the Parts	Warning	4
Main Unit 6 Wireless Subwoofer 6 Remote Control 7 Instructions 7 Prepare the Remote Control Battery 7 Replace the Remote Control Battery 7 Placement and Mounting 8 Wall Mounting (if using option-B) 8 Connect in LINE IN Socket 9 Connect to LINE IN Socket 9 Connect to DAMI (ARC) Socket 9 Roku TV. 9 Connect to OPTICAL Socket 10 Connect Power 10 Pair up with the subwoofer 10 Using the Hisense EzPlay function 11 Basic Operation 12 Standby/On 12 Auto Wake 12 How to Enable Auto Wake 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bars/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13	What's in the Box	5
Wireless Subwoofer 66 Remote Control 7 Instructions 7 Prepare the Remote Control 7 Replace the Remote Control Battery 7 Placement and Mounting 8 Wall Mounting (if using option-B) 8 Connections 9 Connect to LINE IN Socket 9 Connect to HDMI (ARC) Socket 9 Connect to COAXIAL Socket 10 Connect to OPTICAL Socket 10 Connect Power 10 Pair up with the subwoofer 10 Using the Hisense EzPlay function 11 Basic Operation 12 Standby/On 12 Auto Wake 12 How to Enable Auto Wake 12 Adust the Bass/Treble Level. 12 Turn the Surround Sound ON/OFF 12 Adjust the Birghtness 12 Select Modes 12 Adjust the Birghtness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13	Identifying the Parts	6
Remote Control	Main Unit	6
Instructions 7 Prepare the Remote Control	Wireless Subwoofer	6
Prepare the Remote Control. 7 Replace the Remote Control Battery. 7 Placement and Mounting. 8 Wall Mounting (if using option-B) 8 Connections 9 Connect to LINE IN Socket 9 Connect to HDMI (ARC) Socket 9 Roku TV 9 Connect to OCAXIAL Socket 10 Connect to OPTICAL Socket 10 Connect to Power 10 Pair up with the subwoofer 10 Using the Hisense EzPlay function 11 Basic Operation Standby/On 12 Auto Wake 12 How to Enable Auto Wake 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level. 12 Turn the Surround Sound ON/OFF. 12 Adjust the Volume 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 USB Operation 14	Remote Control	7
Replace the Remote Control Battery	Instructions	7
Placement and Mounting 8 Wall Mounting (if using option-B) 8 8 8	Prepare the Remote Control	7
Wall Mounting (if using option-B) 8 Connections 9 Connect to LINE IN Socket 9 Connect to HDMI (ARC) Socket 9 Roku TV. 9 Connect to COAXIAL Socket 10 Connect Power 10 Pair up with the subwoofer. 10 Using the Hisense EzPlay function 11 Basic Operation 12 Standby/On 12 Auto Wake 12 How to Enable Auto Wake 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Volume 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 Listen to Music from Bluetooth Device 13 USB Operation 14 Troubleshooting 14	Replace the Remote Control Battery	7
Connect to LINE IN Socket 9 Connect to HDMI (ARC) Socket 9 Roku TV 9 Connect to COAXIAL Socket 10 Connect Power 10 Connect Power 10 Pair up with the subwoofer 10 Using the Hisense EzPlay function 11 Basic Operation 12 Standby/On 12 Auto Wake 12 How to Enable Auto Wake 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Volume 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 Pair Bluetooth-enabled Devices 13 Listen to Music from Bluetooth Device 13 USB Operation 14 Troubleshooting 14	Placement and Mounting	8
Connect to LINE IN Socket 9 Connect to HDMI (ARC) Socket 9 Roku TV. 9 Connect to COAXIAL Socket 10 Connect Power 10 Pair up with the subwoofer 10 Using the Hisense EzPlay function 11 Basic Operation 12 Standby/On 12 Auto Wake 12 How to Enable Auto Wake 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Volume 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 Pair Bluetooth-enabled Devices 13 Listen to Music from Bluetooth Device 13 USB Operation 14 Troubleshooting 14	Wall Mounting (if using option-B)	8
Connect to HDMI (ARC) Socket 9 Roku TV. 9 Connect to COAXIAL Socket 10 Connect Power 10 Pair up with the subwoofer 10 Using the Hisense EzPlay function 11 Basic Operation 12 Standby/On 12 Auto Wake 12 How to Enable Auto Wake 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Volume 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 Pair Bluetooth-enabled Devices 13 Listen to Music from Bluetooth Device 13 USB Operation 14 Troubleshooting 14	Connections	9
Roku TV. 9 Connect to COAXIAL Socket 10 Connect To OPTICAL Socket 10 Connect Power 10 Pair up with the subwoofer 10 Using the Hisense EzPlay function 11 Basic Operation 12 Standby/On 12 Auto Wake 12 How to Enable Auto Wake 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Volume 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 Pair Bluetooth-enabled Devices 13 Listen to Music from Bluetooth Device 13 USB Operation 14 Troubleshooting 14	Connect to LINE IN Socket	9
Connect to COAXIAL Socket 10 Connect to OPTICAL Socket 10 Connect Power 10 Pair up with the subwoofer 10 Using the Hisense EzPlay function 11 Basic Operation 12 Standby/On 12 Auto Wake 12 How to Enable Auto Wake 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Volume 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 Listen to Music from Bluetooth Device 13 Listen to Music from Bluetooth Device 13 USB Operation 14 Troubleshooting 14	Connect to HDMI (ARC) Socket	9
Connect to OPTICAL Socket 10 Connect Power 10 Pair up with the subwoofer 10 Using the Hisense EzPlay function 11 Basic Operation 12 Standby/On 12 Auto Wake 12 How to Enable Auto Wake 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Volume 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 Pair Bluetooth-enabled Devices 13 Listen to Music from Bluetooth Device 13 USB Operation 14 Troubleshooting 14	Roku TV	9
Connect Power 10 Pair up with the subwoofer 10 Using the Hisense EzPlay function 11 Basic Operation 12 Standby/On 12 Auto Wake 12 How to Enable Auto Wake 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Volume 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 Pair Bluetooth-enabled Devices 13 Listen to Music from Bluetooth Device 13 USB Operation 14 Troubleshooting 14	Connect to COAXIAL Socket	10
Pair up with the subwoofer 10 Using the Hisense EzPlay function 11 Basic Operation 12 Standby/On	Connect to OPTICAL Socket	10
Using the Hisense EzPlay function		
Basic Operation 12 Standby/On 12 Auto Wake 12 How to Enable Auto Wake 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Volume 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 Pair Bluetooth-enabled Devices 13 Listen to Music from Bluetooth Device 13 USB Operation 14 Troubleshooting 14	•	
Standby/On 12 Auto Wake 12 How to Enable Auto Wake 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Volume 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 Pair Bluetooth-enabled Devices 13 Listen to Music from Bluetooth Device 13 USB Operation 14 Troubleshooting 14	Using the Hisense EzPlay function	11
Auto Wake 12 How to Enable Auto Wake 12 Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Volume 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 Pair Bluetooth-enabled Devices 13 Listen to Music from Bluetooth Device 13 USB Operation 14 Troubleshooting 14	Basic Operation	12
How to Enable Auto Wake	Standby/On	12
Automatic Power Off Function 12 Select Modes 12 Adjust the Bass/Treble Level 12 Turn the Surround Sound ON/OFF 12 Adjust the Volume 12 Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 Pair Bluetooth-enabled Devices 13 Listen to Music from Bluetooth Device 13 USB Operation 14 Troubleshooting 14	Auto Wake	12
Select Modes		
Adjust the Bass/Treble Level		
Turn the Surround Sound ON/OFF		
Adjust the Volume	,	
Adjust the Brightness 12 Select a Preset Sound Effect 12 OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation 13 Bluetooth Operation 13 Pair Bluetooth-enabled Devices 13 Listen to Music from Bluetooth Device 13 USB Operation 14 Troubleshooting 14		
Select a Preset Sound Effect		
OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation13Bluetooth Operation13Pair Bluetooth-enabled Devices		
Bluetooth Operation13Pair Bluetooth-enabled Devices	Select a Preset Sound Effect	12
Pair Bluetooth-enabled Devices	OPTICAL / COAXIAL / HDMI ARC / LINE IN Operation	13
Listen to Music from Bluetooth Device	Bluetooth Operation	13
USB Operation 14 Troubleshooting 14	Pair Bluetooth-enabled Devices	13
Troubleshooting 14	Listen to Music from Bluetooth Device	13
Troubleshooting 14	USB Operation	14
-		14
		15

Important Safety Instructions





The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Safety

- 1 Read these instructions All the safety and operating instructions should be read before this unit is operated.
- 2 Keep these instructions The safety and operating instructions should be retained for future reference.
- 3 Heed all warnings All warnings on the appliance and in the operating instructions should be adhered to.
- 4 Follow all instructions All operating and usage instructions should be followed.
- 5 **Do not use this unit near water** The appliance should not be used near water or moisture for example, in a wet basement or near a swimming pool or similar location.
- 6 Clean only with a dry cloth.
- 7 **Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions
- 8 Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 The unit is supplied with a standard mains lead and moulded plug which for safety reason must not be modified. If the provided plug does not fit into your wall socket, consult an electrician for replacement of the obsolete mains socket.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.



Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the unit. When a cart or rack is used.

use caution when moving the cart/unit combination to avoid injury from tip-over.

- 13 Unplug the unit during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified personnel. Servicing is required when the unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15 This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 16 Do not place liquid filled objects such as vases on the unit.
- 17 Minimum distance around the unit for sufficient ventilation is 5cm.
- 18 The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- 19 No naked flame sources, such as lighted candles, should be placed on the unit.
- 20 Batteries should be recycled or disposed of as per state and local guidelines.
- 21 The unit can be used in moderate or tropical climates.

Bluetooth

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG,. Inc.

HDMI

HDMI is a trademark or registered trademark of HDMI Licensing, LLC in the United States and/or other countries.

Dolby Audio

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



Roku TV Ready and the Roku TV Ready logo are trademarks of Roku, Inc.

Caution:

- To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.
 The unit must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on unit.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such fires, or other direct heat sources.
- Before operating this unit, check the voltage of this unit to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. **For more information**:

www.watts.com/prop65

⚠ Battery usage CAUTION

To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:

- Install all batteries correctly, + and as marked on the apparatus.
- Do not mix old and new batteries.
- Remove batteries when the unit is not used for a long time.

FCC INFORMATION (for US customers) Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

NOTE:

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

FCC RF Radiation Exposure Statement Caution:


To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


What's in the Box

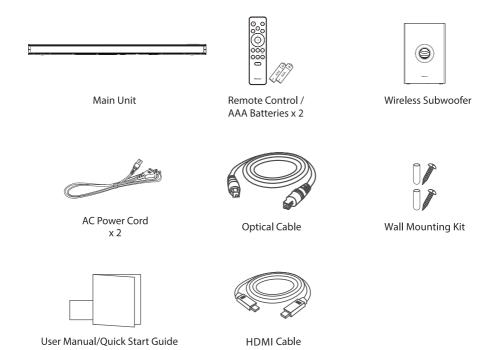

• Design and specifications are subject to change without notice.

Identifying the Parts

Main Unit

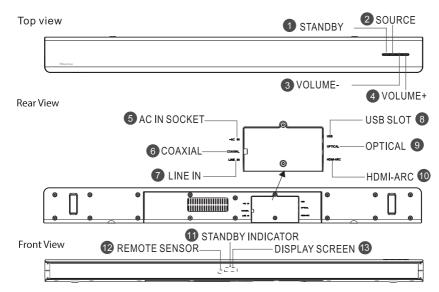

1 Standby

Switch the unit between ON and STANDBY mode.

2 Source

Select the play mode.

3 Volume-

decrease the volume level.

4 Volume+

Increase the volume level.

5 AC IN Socket

Connect to the power supply.

6 COAXIAL Socket

Connect to a coaxial audio output on the TV.

7 LINE IN Socket

Connect to an external audio output device.

8 USB Slot

Insert the USB device to play music.

9 OPTICAL Socket

Connect to an optical audio output on the TV.

10 HDMI-ARC Socket

Connect to a TV via HDMI cable.

11 Standby Indicator

Standby indicator keeps solid red.

12 Remote Sensor

Receive signal from the remote control.

13 Display Screen

Show the current status.

Wireless Subwoofer

1 PAIR Indicator


Light up solidly when the pairing succeed.

2 PAIR Button

Press to reconnect the unit

3 AC IN Socket

Connect to power supply.

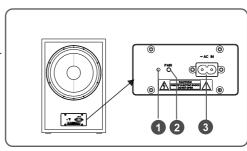

Remote Control

1 (l) Switch the unit between ON and

STANDBY mode.

2 ∃ (SOURCE) Select the play mode.

3 SURR Adjust the surround ON/OFF. **★**(BT) Select the Bluetooth mode.

Select MUSIC/MOVIE/NEWS/SPORT/NIGHT EQ

sound effect.

6 ||44 / ▶▶| Skip to previous/next track in BT/USB mode.

VOL+/VOL-Increase/decrease the volume level.

Play/pause/resume playback in BT/USB mode. 8 **▶**II


Press and hold to activate the pairing

function in Bluetooth mode or disconnect the existing paired Bluetooth device.

Increase/decrease the bass level.

9 BASS+/-10 TREBLE+/-Increase/decrease the treble level.

11 DIMMER+/-Adjust display brightness. 12 💢 (MUTE) Mute or resume the volume.

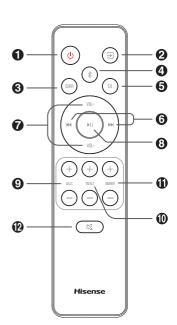

Instructions

Prepare the Remote Control

The provided Remote Control allows the unit to be operated from a distance.

- Even if the Remote Control is operated within the effective range 19.7 feet (6m), remote control operation may be disrupted if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

Replace the Remote Control Battery

- Press and slide the back cover to open the battery compartment of the remote control.
- 2 Insert two AAA size batteries (included). Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
- 3 Close the battery compartment cover.






Precautions Concerning Batteries

- Be sure to insert the batteries with correct positive " \oplus " and negative " \ominus " polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet obiect.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

Placement and Mounting

Placement


- A If your TV is placed on a table, you can place the unit on the table directly in front of the TV stand, centered with the TV screen.
- B If your TV is attached to a wall, you can mount the unit on the wall directly below the TV screen.

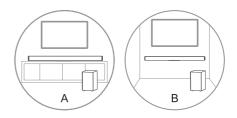


Wall Mounting (if using option-B)

Note:

- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe
 personal injury and property damage (if you intend to install this product yourself, you must check
 for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the
 installer's responsibility to verify that the wall will safely support the total load of the unit and wall
 brackets.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

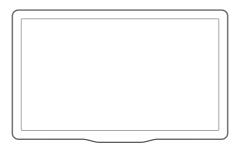

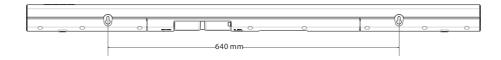

Connections

Connect to LINE IN Socket

- A Use a RCA to 3.5mm audio cable (not included) to connect the TV's audio output sockets to the **LINE IN** socket on the unit.
- B Use a 3.5mm to 3.5mm audio cable to connect the TV's or external audio device headphone socket to the **LINE IN** socket on the unit.

Connect to HDMI (ARC) Socket


Your Soundbar supports HDMI with Audio Return Channel (ARC). If your TV is HDMI ARC compliant, you can hear the TV audio through your Soundbar by using a single HDMI cable.

- Using a High Speed HDMI cable, connect the HDMI OUT (ARC)-TO TV connector on your Soundbar to the HDMI ARC connector on the TV.
- The HDMI ARC connector on the TV might be labeled differently. For details, see the TV user manual.
- 2 On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.

Tips:

- Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to your TV owner's manual
- Only HDMI 1.4 compatible cables can support the ARC function.

Headphone TV

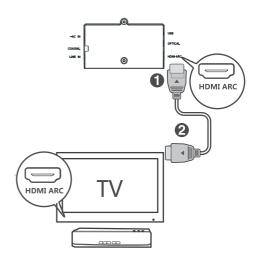

Roku TV™



This soundbar is Roku TV Ready $^{\text{TM}}$ certified. If you have a Hisense Roku TV $^{\text{TM}}$, simply connect the supplied HDMI cable to your soundbar and TV and follow the on screen instructions for simple setup.

Connect to COAXIAL Socket

 You can use the COAXIAL cable (not included) to connect the TV's COAXIAL OUT socket and COAXIAL socket on the unit.

Connect to OPTICAL Socket


 Use an OPTICAL cable insert into the OPTICAL socket on the unit, then connect the OPTICAL cable to the TV's OPTICAL OUT socket.


Tip: The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with HDMI / OPTICAI / COAXIAL input.

Connect Power

Risk of product damage!

- Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Before connecting the AC power cord, ensure you have completed all other connections.
- Connect the mains cable to the **AC IN** Socket
 of main unit and then into a mains socket

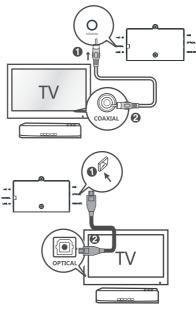

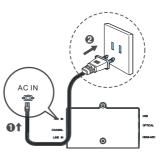

Subwoofer Connection

Make sure the AC power cord is connected to a power supply securely, subwoofer have the wireless bluetooth to receive the audio signal from the soundbar, when the blue indicator flashing, the subwoofer is in searching bluetooth signal status, the blue indicator keeps lighting means bluetooth was connected, if the subwoofer can not connect with the soundbar automatically, please press pair button on the rear panel of subwoofer to reconnect.

The subwoofer will memories the soundbar and repaired automatically when you power off the subwoofer then power on.

Manual Pairing


If the soundbar did not connect with the subwoofer automatically, you can make the soundbar connect with the subwoofer by manual pairing as below:

- Power on both soundbar and subwoofer, the blue indicator on the subwoofer flashing when the soundbar did not connect with the subwoofer.
- Press PAIR button on the subwoofer to pair with the soundbar, when the blue indicator on the subwoofer keeps solid blue means the soundbar paired with subwoofer successfully.




Using the Hisense EzPlay Function

For Hisense EzPlay, when the Soundbar connects with a Hisense TV via HDMIARC, there will be a Soundbar Setting menu on the TV, and you can control this menu via your TV remote to control most of the Soundbar features.

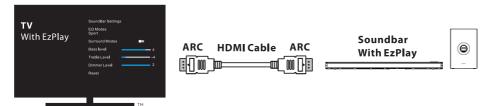

TV menu example(different models may have different menus): Setting--sound--Soundbar Setting.

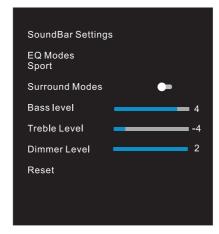

Note:

- This function is available only when both Soundbar and TV support Hisense EzPlay.
- This function requires Soundbar and TV connected via HDMI ARC, and the CEC of the TV must be turned ON.
- If everting setting right, for the first time connect, there would be a tip on the TV screen to guide you find the Soundbar setting menu.

Basic Operation

Standby/On

When you first connect the main unit to the mains socket, the main unit will be in **STANDBY** mode.

- Press the U button on the unit or on the remote control to switch the unit ON.
- Press the U button again to switch the unit back to STANDBY mode.
- Disconnect the mains plug from the mains socket if you want to switch the unit OFF completely.

Auto Wake

 If a TV or an external device is connected (/ OPTICAL / COAXIAL / HDMI ARC), the unit will switch on automatically when the TV or the external device is switched on.

How to Enable Auto Wake

Press and hold the (SOURCE) button and
 + (VOL +) button on the unit to enable or disable Auto Wake function.

sequentially. While in STANDBY mode, the LED is in solid red.

Automatic Power Off Function

The unit automatically turns to **STANDBY** mode after about **15** minutes if the TV or the external unit is disconnected, switched off.

- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use.

Select Modes

Press the 된 (SOURCE) button repeatedly on the unit or on the remote control to select the **OPTICAL, COAXIAL, HDMI ARC, BT**(Bluetooth), **USB, LINE IN** mode.

The selected mode will show on the display.

Adjust the Bass/Treble Level

- Press TREBLE +/- button to increase or decrease the treble. (treble+5 / treble-5)
- Press BASS+/- button to increase or decrease the bass. (bass+5 / bass-5)
- After about 3 seconds, the unit will exit from bass/treble setting. The display will show the current selected mode. You may now press the VOL+/- buttons to adjust volume.

Turn the Surround Sound ON/OFF

 Press the SURR button on the remote control to turn on the surround sound. Press this button again to turn off the surround sound.

Adjust the Volume

- Press the + / buttons on the unit or VOL+/VOLon the remote control to adjust the volume.
- If you wish to turn the sound off, press the ☒ (MUTE) button on the remote control. Press the ☒ (MUTE) button again or press the VOL+ / VOL- buttons to resume normal listening.

Adjust the Brightness

 Press the **DIMMER** +/- buttons on the remote control to select brightness level.

Select a Preset Sound Effect

 While playing, press the EQ button on the remote control to select desired preset equalizers: MUSIC, MOVIE, NEWS, SPORT, NIGHT.

OPTICAL/COAXIAL/HDMI ARC/LINE IN Operation

- 1 Ensure that the unit is connected to the TV or audio device.
- 2 Press the button repeatedly on the unit or on the remote control to select the OPTICAL, COAXIAL, HDMI ARC, BT, USB, LINE IN mode.
- 3 Operate your audio device directly for playback features
- 4 Press the **VOL** +/- button to adjust the volume to your desired level.

Tip:

 The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with HDMI ARC / OPTICAI / COAXIAL input.

Bluetooth Operation

Pair Bluetooth-enabled Devices

The first time you connect your bluetooth device to this player, you need to pair your device to this player.

Note:

- The operational range between this player and a Bluetooth device is approximately 26 feet (8m) (without any object between the Bluetooth device and the unit).
- Before you connect a Bluetooth device to this unit, ensure you know the device's capabilities.
- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between this unit and a Bluetooth device can reduce the operational range.
- If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.
- 1 During ON mode, press the ∃ button repeatedly on the unit or the 戊 (BT) button on the remote control to select Bluetooth mode. "BT" will show on the display and the BT signal bar will be blinking if the unit is not paired to any Bluetooth device.

- 2 Activate your Bluetooth device and select the search mode. "Hisense HS219" will appear on your Bluetooth device list.
- 3 Select "HS219" in the pairing list, the system is successfully connected and the "BT" will light up solidly and a beep will be heard.
- 4 Play music from the connected Bluetooth device.

To disconnect the Bluetooth function, you can:

- Switch to another function on the unit.
- Disable the function from your Bluetooth device.
- Press and hold the ►II button on the remote control.

Tips:


- Enter "0000" for the password if necessary.
- The player will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this player, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the player.
- If the connection is lost, follow the instructions above to pair your device to the player again.

Listen to Music from Bluetooth Device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
- If the device also supports Audio Video Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.
- 1 Pair your device with the player.
- 2 Play music via your device (if it supports A2DP).
- 3 Use supplied remote control to control play (if it supports AVRCP).
- To pause/resume play, press the ►II button on the remote control.
- To skip to a track, press the I◀◀ / ▶▶I buttons on the remote control.

USB Operation

1 Insert the USB device.

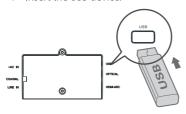

- 2 Press the 🔁 button repeatedly on the unit or on the remote control to select **USB** mode.
- 3 During playback:
- To pause or resume play, press the ►II button on the remote control.
- To skip to the previous/next file, press the **II**◀◀ / ▶▶**I** buttons on the remote control.

Tips:

- The unit can support USB devices with up to 32 GB of memory.
- This unit can play MP3/WAV/WMA.
- The unit support FAT32.
- Embedded USB full speed host for USB applications should not exceed 6.5Mbps.
- The block size of the file in FLAC format can not exceed 4608 byte, otherwise it would lead to staccato sound or no sound.

Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.

No power

- Ensure that the AC cord of the unit is properly connected.
- Ensure that there is power at the AC outlet.
- Press STANDBY button to turn the unit on.

Remote control does not work

- Before you press any playback control button, first select the correct source.
- Reduce the distance between the remote control and the unit.

- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

No sound

- Increase the volume. Press **VOL** + on the remote control or on the soundbar.
- Press ☒ (MUTE) on the remote control to ensure the soundbar is not muted.
- Press source buttons to select a different input source.
- When using either of the Digital inputs, if there is no audio:
 - Try setting the TV output to PCM or
 - Connect directly to your Blu-ray/other source, some TVs do not pass through digital audio.
- Your TV may be set to variable audio output. Confirm that the audio output setting is set to FIXED or STANDARD, not VARIABLE. Consult your TV's user manual for more detailed information.
- If using Bluetooth, ensure that the volume on your source device is turned up and that the device is not muted.

I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Ensure you have paired the unit with your Bluetooth device.

This is a 15 mins power off function, one of the ERPII standard requirement for saving power

 When the unit without external input signal ,the unit will be turned off automatically in 15 minutes.

Specifications

Model name	HS219
General	
Bar Power Supply	AC 100-240V~50/60Hz
USB	5V/0.5A
Main Unit Dimension(WxHxD)	998x60x93mm(39.3x2.4x3.7 inch)
Soundbar Net weight	1.9Kg (4.19lbs)
Audio Input sensitivity	500mV
Frequency Response	40Hz-20KHz

Amplifier(Output power)	
Total	320W
Main Unit	30 W×4 (4Ωx2 at 1 KHz,10%THD)
Subwoofer	200 W (4Ω at 80 Hz,10%THD)

Wireless Subwoofer	
Size	8 inch woofer ×1
Dimension(WxHxD)	245x360x312mm(9.6x14.2x12.3 inch)
Net weight	6.3Kg(13.89lbs)

Remote Control	
Distance/Angle	19.7feet(6m)/30°
Battery Type	AAA×2

• Design and specifications are subject to change without notice.

