

Table of Contents

Page 1- Table of Contents.

Page 2- Component Check List. Demonstration Wire.

Page 3- Charging the Battery Pack.

Page 4- Battery Pack Installation.

Page 5- Controller Battery Installation. Vehicle Antenna.

Page 6- Refill Flint for Real Spark. Features and Functions.

Page 7- Ford Features and Functions.

Page 8- Chevy Features and Functions.

Page 9- Driving the Vehicle. Proper Use, Precautions and Care.

Page 10- Please Note and Trouble Shooting.

Page 11- Caution, Warning and Attention Parents.

Component Check List

To protect components from damage, they may be packed in the styrofoam tray out of plain sight. Please search styrofoam tray and remove all of the components listed below.

IMPORTANT

The included 9.6V NiMH battery pack is NOT charged prior to shipment and must be charged before the first use.



Vehicle



Controller

(6 "AA" Batteries included)

Transformer



Charging Cradle

9.6V NiMH
Battery Pack



6 "AA" Batteries
(included in controller)



2 Vehicle
Antenna
Tubes




Spare Flints
(Inside the
instruction
manual P.6)

* The batteries included in the controller are for demonstration only

Demonstration Wire

This vehicle is shipped with a wire lead which runs from the controller to the vehicle chassis. The wire lead is for package demonstration only and should be removed and discarded as shown here.

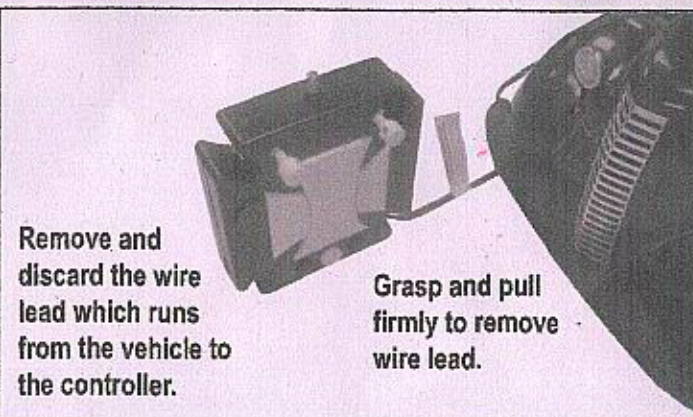

Remove and
discard the wire
lead which runs
from the vehicle to
the controller.

Grasp and pull
firmly to remove
wire lead.

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.