
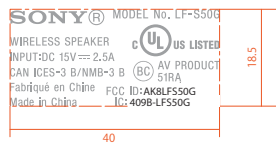


ボタン線	
DIMMER/RESTART	DIMMER SonyIDType HRC / H=1.9 RESTART SonyIDType HRC / H=1.8
HOLD	HOLD SonyIDType HRC / H=1.9

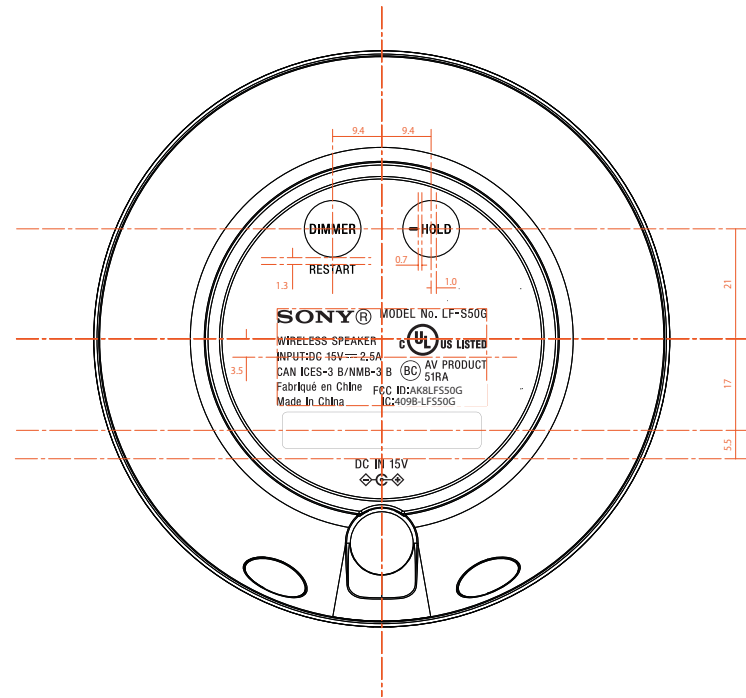

DC IN 15V $W=10$