

SOVXX

Basic Manual

■ **Online Manual (Japanese)**
Check "Online Manual" (Japanese) which describes detail explanations on various functions on the product from the following procedure.
In the Home screen, slide the screen up ▶[お客さまサポート (Customer support)] ▶[取扱説明書 (Online Manual)] (Japanese)


Also, you can check "Online Manual" (Japanese) on the au homepage.
https://www.au.com/online-manual/sovxx/ (Japanese)

In this manual, the contents on Android 9 are provided.
For the latest edition, refer to "Online Manual" (Japanese) or "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) available on the au homepage.
https://www.au.com/support/service/mobile/guide/manual/ (Japanese)

Notification LED

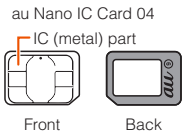
The Notification LED prompts charging, or informs battery level while charging, missed calls, new mails, etc. by turning on or flashing.

LED Status	Description
Red	The battery is charging when the remaining battery level is 14% or lower.
Orange	The battery is charging when the remaining battery level is 15% - 89%.
Green	The battery is charging when the remaining battery level is 90% or higher.
Flashing red	The remaining battery level is 14% or lower.
Flashing white ¹	Indicates a missed call, new au-mail, new message, etc.

¹ Flashes in sleep mode

au IC card

Your phone number etc. is recorded in au IC card.
The product is compatible with au Nano IC Card 04.



2 **Insert the USB Type-C plug of TypeC Common AC Adapter 02 (sold separately) into the USB Type-C connection terminal of the product straight**
When charging is started with the product powered on, the start sound for charging sounds and the Notification LED of the product lights.

Turning the power on/off

■ **Turning the power on**
1 **Press and hold Power key until the product vibrates once**
The lock screen appears.
When "ようこそ (Welcome)" appears after the product is powered on, follow the onscreen instructions to set the initial settings.
For details on the initial settings, refer to "Setting Guide" supplied with the product.
2 **Swipe (flick) the screen up**
The Home screen appears.

■ **Turning the power off**
1 **Press and hold Power key (over one sec.)**
2 **[Power off]**

Preface

Thank you for buying "Xperia" (simply called "the product" or "main unit" from here on).
Before using the product, read "Basic Manual" (this manual), "Cautions on using the product" and "Setting Guide" for proper handling.

Packaged items

Before your start using the product, make sure that you have all the following packaged items with the product.

- Xperia

• USB Type-C™-3.5 ϕ conversion/TV Antenna cable 01 (03SOHSA)
- 取扱説明書 (Basic Manual) (Japanese)

• ご利用にあたっての注意事項 (Cautions on using the product) (Japanese)

• 設定ガイド (Setting Guide) (Japanese)

The following items are not included in the package.

• microSD memory card

• AC adapter

• Earphones

• Desktop holder

• USB Type-C™ cable

Attaching/removing au IC card

Before attaching/removing au IC card, make sure to turn off the product.

■ **Attaching au IC card**
1 **Remove the tray from the main unit**
Put your fingertip (nail) into the groove of the microSD memory card/au IC card slot and draw the cover straight out.

2 **Set au IC card into the tray with the IC (metal) part facing up**
Pay attention to the location of the notch.
Surely set au IC card into the tray not to come off.

Connecting headphones or earphones

To hear sound from commercially available headphones or earphones, connect the supplied USB Type-C™-3.5 ϕ conversion/TV Antenna cable 01.

- 1 **Insert the plug on the commercially available headphones or earphones in the headset socket on the USB Type-C™-3.5 ϕ conversion/TV Antenna cable 01**

2 **Insert the USB Type-C plug of USB Type-C™-3.5 ϕ conversion/TV Antenna cable 01 to the USB Type-C connection terminal of the product**

Turning the power on/off

■ **Turning the power on**
1 **Press and hold Power key until the product vibrates once**
The lock screen appears.
When "ようこそ (Welcome)" appears after the product is powered on, follow the onscreen instructions to set the initial settings.
For details on the initial settings, refer to "Setting Guide" supplied with the product.
2 **Swipe (flick) the screen up**
The Home screen appears.


■ **Turning the power off**
1 **Press and hold Power key (over one sec.)**
2 **[Power off]**

❖ **Information**
• Purchase a specified charger (sold separately).
• The battery is built into the product.
• Illustrations used in this manual are just images for explanations. They may be different from actual ones.

About Operating Instructions

■ **"Setting Guide"/"Basic Manual" (this manual)**
Handles only basic operations for main features.

■ **Online Manual (Japanese)**
Check "Online Manual" (Japanese) which describes detail explanations on various functions on the product from the following procedure.
In the Home screen, slide the screen up ▶[お客さまサポート (Customer support)] ▶[取扱説明書 (Online Manual)] (Japanese)


Also, you can check "Online Manual" (Japanese) on the au homepage.
https://www.au.com/online-manual/sovxx/ (Japanese)

■ **"取扱説明書 (Full Instruction Manual)" (Japanese)**
For detailed descriptions on various functions, refer to the "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) available on the au homepage.
https://www.au.com/support/service/mobile/guide/manual/ (Japanese)

3 **Keep the product horizontal and then push the tray in straight**
Pay attention to the direction the tray is being pushed in.
Firmly press where circled ○, and check that there is no gap between the main unit and the microSD memory card/au IC card slot cover.

■ **Removing au IC card**
1 **Remove the tray from the main unit**
Put your fingertip (nail) into the groove of the microSD memory card/au IC card slot and draw the cover straight out.
2 **Remove the au IC card from the tray**
3 **Keep the product horizontal and then push the tray in straight**
Pay attention to the direction the tray is being pushed in.
Firmly press where circled ○, and check that there is no gap between the main unit and the microSD memory card/au IC card slot cover. (▶P.9)

❖ **Information**
• To restart the product in safe mode (start with almost default state), press and hold Power key (over one sec.) ▶ Long-touch "Power off" ▶[OK].

■ **Forcedly turning the power off**
1 **Press and hold Power key and the upper part of the volume key at the same time for approximately nine seconds, and release your fingers after the product vibrates three times consecutively**

Changing the language to English

You can change the display language from Japanese to English after the initial settings.

In the Home screen, slide the screen up ▶[設定 (Settings)] ▶[システム (System)] ▶[言語と入力 (Languages & input)] ▶[言語 (Languages)] ▶[言語を追加 (Add a language)] and select "English" ▶"United States", and then drag ≡ of "English (United States)" up to the top in the language list.

■ **For Those Requiring an English Instruction Manual**
Download URL:
https://www.au.com/english/support/manual/

Regarding notations used in this document

- In this manual, operations of tapping menu items/icons/ buttons on the screen, etc. are indicated as [(name of the item, etc.)].

• In this manual, screens and operations for the product with au Nano IC Card 04 attached are described.

• Screen illustrations shown in this manual may look different from the actual screens. In some cases, minor details or a part of a screen may be omitted.

• In this manual, "Basic Manual" (this manual), "Cautions on using the product", "Setting Guide" and "取扱説明書 (詳細版) (Full instruction manual)" (Japanese) are collectively referred to as "Instruction Manual".

• In this manual, explanations for the wallpaper "Black" are provided.

• In this manual, operations in portrait view are described as a standard. In horizontal view, menu items, icons, buttons on the screen, etc. may differ.

• In this manual, "au Nano IC Card 04" is abbreviated as "au IC card".

• In this manual, "microSD™ memory card (commercially available)", "microSDHC™ memory card (commercially available)" and "microSDXC™ memory card (commercially available)" are abbreviated as "microSD memory card".

❖ **Information**
• Note the following points, otherwise handling au IC card may cause malfunction or damage.
• Do not touch the IC (metal) part of au IC card.
• Insert in the correct direction.
• Do not use force to attach or remove.
• The error message appears when au IC card is not set properly or there is a malfunction in au IC card.
• Do not lose au IC card when it is removed.
• Do not insert au IC card with conversion adapter attached. Doing so may cause a malfunction.

Attaching/Removing a microSD memory card

Before attaching/removing microSD memory card, make sure to turn off the product.

■ **Attaching a microSD memory card**
1 **Remove the tray from the main unit**
Put your fingertip (nail) into the groove of the microSD memory card/au IC card slot and draw the cover straight out.

Locking the screen/Unlocking screen lock

■ **Locking the screen**
Turn off the screen to set sleep mode to prevent the touch panel or key from operating mistakenly or lock the screen.
1 **While the screen is displayed, press Power key**

■ **Unlocking screen lock**
The lock screen appears when turning the power on or sleep mode is canceled by pressing Power key.
• While Ambient display (which allows you to check date & time or notifications in sleep mode) is activated, double-tap the screen or press Power key to display the lock screen.
1 **On the lock screen, swipe (flick) the screen up**

Using the touch panel

The display of the product is a touch panel operated by touching it with your finger.

■ **Tap/Double-tap**
Tap: Gently touch the screen and then immediately release your finger. Double-tap: Touch the same position twice.

■ **Long-touch**
Keep touching an item with your finger.

■ **Slide**
While your finger is gently touching the screen, trace it to the desired direction to move over.

■ **Swipe (flick)**
Operate the screen by quickly moving (flicking) your finger up/down/left/right.

- All of the indicated amounts exclude tax unless otherwise specified.

• Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM and ® marks may be omitted in this manual.

• "The Company" as appears in the manual refers to the following companies:
Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: Sony Mobile Communications Inc.

2 **Set a microSD memory card into the tray with the terminal side facing up**
Surely set a microSD memory card into the tray not to come off.

3 **Keep the product horizontal and then push the tray in straight**
Pay attention to the direction the tray is being pushed in.
Firmly press where circled ○, and check that there is no gap between the main unit and the microSD memory card/au IC card slot cover.

Getting Ready

Names and functions of parts

① Headset connection terminal

② Second microphone¹:
Reduces noise so that the other party can easily hear your voice.

③ microSD memory card/au IC card slot

④ Notification LED (▶P.7)

⑤ Earpiece/Speaker

⑥ Proximity/Light sensor:
Switches the touch panel on and off to prevent from erroneous operation during a call/ Auto-control for display brightness.

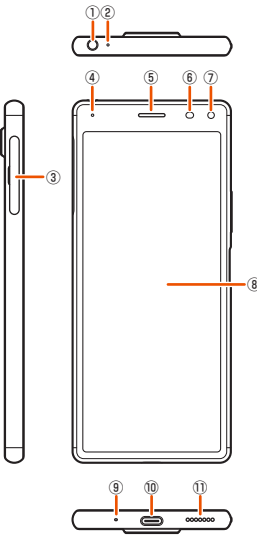
⑦ Front camera

⑧ Display (Touch panel)

⑨ Mouthpiece/ Microphone

⑩ USB Type-C connection terminal

⑪ Speaker

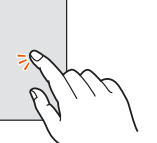


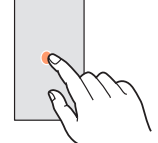
❖ **Information**
• Do not touch the terminal of the microSD memory card.
• Insert a microSD memory card in the appropriate direction. Inserting forcibly could result in removal failure or may cause damage the card.

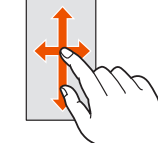
■ **Removing a microSD memory card**
1 **Remove the tray from the main unit**
Put your fingertip (nail) into the groove of the microSD memory card/au IC card slot and draw the cover straight out.
2 **Remove the microSD memory card from the tray**
3 **Keep the product horizontal and then push the tray in straight**
Pay attention to the direction the tray is being pushed in. Firmly press where circled ○, and check that there is no gap between the main unit and the microSD memory card/au IC card slot cover. (▶P.11)

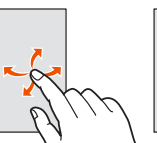
■ **Pinch**
Touch the screen with two fingers and widen (pinch-out) or narrow (pinch-in) the fingers' distance.

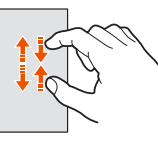
■ **Drag**
Keep touching an item or icon, trace it to the desired direction to move.

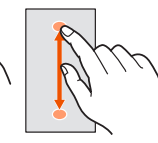

Tap/Double-tap


Long-touch




Slide


Swipe (Flick)


Pinch


Drag

Displaying the menu

To display the menu; tap the menu icon ( or ), or long touch the input field or item.

- Depending on application/function, color or shape of menu icon, or menu display may differ.

⑫ Volume key/Zoom key

⑬ Power key/Screen lock key/Fingerprint sensor

⑭ Wi-Fi®/ Bluetooth® antenna²


⑮ Built-in antenna/GPS antenna²

⑯ Flash/Photo light

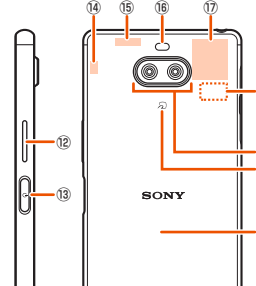
⑰ Built-in antenna²

⑱ au IC card

⑲ Camera lens

⑳  mark

㉑ Back cover³



- ¹ Do not jab with a sharp object such as a needle. Doing so may cause a malfunction.

² The antenna is built into the main unit. Covering around the antenna by your hand may affect the quality of call/ communication.

³ The back cover is not removable. Removing forcibly might cause damage or a malfunction. Also, battery is built into the main unit and not removable by customers.

FCC ID

To view the regulatory compliance mark

- Find and tap [Settings] ▶[System] ▶[Certificates]
Regulatory compliance mark such as FCC ID is displayed on the screen.

Charging

When you purchase your product, the internal battery is not fully charged. Charge the battery before use.

❖ **Information**
• When charging starts, the Notification LED of the product lights according to the battery level. To check the battery level, see the status bar in the top of the screen, or in the Home screen, slide the screen up ▶[Settings] ▶[Battery].

• If you start charging with the product turned off, a screen launches indicating the charging status but operations are not available. Thus, do not charge the product in a place where the use is prohibited.

• The charging time may take longer when charging with a PC or while using the camera function.

■ **Charging with the AC Adapter**
Charging with connecting TypeC Common AC Adapter 02 (sold separately) is explained.


1 **Insert the power plug of TypeC Common AC Adapter 02 (sold separately) into an outlet**


Using Side sense

Side sense is a function which supports operations of the product by one-hand. You can operate it with the side edge of the screen.




- Double-tap the side edge of the screen to display the Side sense menu which allows you to activate app or turn on/off functions.
- Slide the side edge of the screen down to go back (return to the previous screen).
- Slide the side edge of the screen up to display the multi-window menu.

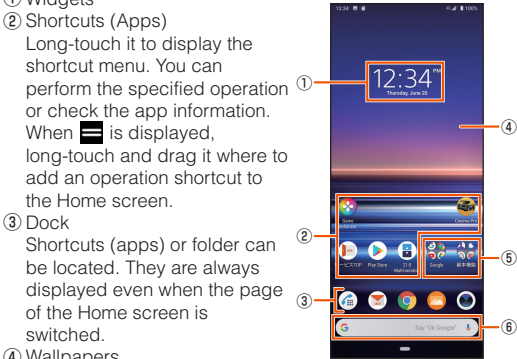
Home screen

Home screen consists of multiple pages. Tap  to return to the Home screen anytime.

- ① Widgets
- ② Shortcuts (Apps)
 - Long-touch it to display the shortcut menu. You can perform the specified operation or check the app information.
 - When  is displayed, long-touch and drag it where to add an operation shortcut to the Home screen.
- ③ Dock
 - Shortcuts (apps) or folder can be located. They are always displayed even when the page of the Home screen is switched.
- ④ Wallpapers
- ⑤ Folders (Google, 基本機能 (Basic functions))
 - Several shortcuts (apps) are stored.
- ⑥ Quick search box
 - Search for apps, contacts, etc., or search with words/phrases entered in the "Google" app.


❖**Information**

- In the Side sense menu, tap  ▶[TRY SIDE SENSE TUTORIAL] where you can practice double-tapping and sliding with Side sense.
- To exit the Side sense menu, operate as follows.
 - Tap  or .
 - Tap the outside of the Side sense menu
 - Double-tap the side edge of the screen
- When you cannot operate the Side sense function correctly, in the Home screen, slide the screen up ▶[Settings]▶[Display]▶[Advanced]▶[Side sense], and then change the Side sense operation settings with "Sensor sensitivity", "Configure touch position", or "Gestures".



❖**Information**

- When an app has notification, a dot or number may appear on the shortcut (app) or folder.

2 Tap " of "Airplane mode" to turn to  appears in the status bar.

❖**Information**

- Alternatively, tap "Airplane mode" in the quick setting panel (▶P.26) to turn to on/off.
- Even when airplane mode is on, you can set Wi-Fi® or Bluetooth® on. When using aboard an airplane, in a hospital, etc., follow the instructions of the airline or institution.

Checking own phone number

1 In the Home screen, slide the screen up ▶[Settings]▶[System]

You can check the phone number of the product in "About phone" field.

❖**Information**

- Alternatively, in the Home screen, slide the screen up▶[Contacts]▶[≡]▶[My info] to check your phone number.

Entering characters

Use the software keyboard (keyboard on the screen) to enter characters.

The software keyboard appears when you tap the entry field for registering a contact, composing a mail, etc.

■ **Using the software keyboard**


With "Gboard", which is default when the language is set to English, you can use QWERTY keyboard to enter characters, Numeric keypad to enter numbers and symbols, and Symbol keypad for more symbols.

22



- ① Keyboard menu
- ② Display the search bar
- ③ Switch between all lower case and sentence case/double-tap for all upper case
- ④ Toggle entry modes
- ⑤ Enter a comma
- ⑥ Input emoticon, etc.
- ⑦ Voice input
- ⑧ Delete character
- ⑨ Enter a line feed
- ⑩ Enter a period
- ⑪ Enter a space

❖**Information**

- Tap  at the bottom left of the screen to hide the software keyboard.
- To enter a character variant, touch and hold a key to show a list of available options, and then select from the list.
- To enter a full stop, double-tap the space key after you enter a word.
- To use the glide typing, slide your finger from a character to character on the keyboard to trace the word you want to write, and then lift up your finger when finishing entering the word.

29

- The battery built-into the main unit is not covered by free-of-charge repair warranty excluding events arising from defects of battery material or the production.
- The accessories excluding the main unit is not covered by free-of-charge repair warranty.

■ **Performance parts for repair**

The Company retains performance parts for repair of the Xperia main unit and its peripherals for four years after discontinuation of production. "Performance parts for repair" refers to parts required for maintaining the functions of the product.

■ **Provisions for free-of-charge repair**

- Please notify us of the production number (IMEI number) for repair request. The production number (IMEI number) can be checked on the product main unit, sticker on the outer packaging box etc.
- During the warranty period, we will repair the product free of charge for the malfunction under the condition that it is used correctly in line with the directions given in the instruction manual.
- Even if the warranty period has not expired, a fee will be charged for repair under the following circumstances. (or, repair may not be possible).
 - The product has not been used correctly in line with the directions given in the instruction manual.
 - The malfunction or damage is due to unauthorized repair or modification of the product.
 - The product has been repaired other than at our specified repair offices.
 - The malfunction or damage is due to negligence in use or handling, or due to an accident. There are signs of the product having been dropped, wet, exposed to humidity, etc.

❖**Information**

- You can apply for the membership only at the time of purchasing your au terminal.
- Once you cancel the membership, you cannot reapply for it until you purchase an au terminal next time.

Using the Apps screen

In the Apps screen, apps which are installed to the product are displayed. Tap the icon to activate the app.

- You may incur communication charges depending on the function.

■ **Starting an app**

- In the Home screen, slide the screen up**
- Tap an app icon to use**
 - Some apps are stored in a folder.





Main apps		
	Phone	 Play Store
	Contacts	 Camera
	au-mail	 Album
	+メッセージ(SMS) (+Message(SMS))	 Maps
	Chrome	 Google
	Settings	 Gmail
	Calendar	
	故障紛失サポート (Repair and Delivery Support)	

23



Phone

Making a call

■ **Direct input calling**

- From the Home screen, []▶[**
- Enter a phone number▶[**
 - To make a call to a land-line phone, enter from the city code even when you stay in the same city.
- Call▶[**
 - To adjust the in-coming volume (volume of the other party's voice), press the upper part or lower part of the volume key while calling.

■ **Calling from call history**

- From the Home screen, []▶Tap " " tab**
- [] of call history**

■ **Calling overseas from au mobile phones (au International Call Service)**

You can make international calls without any special procedure from the product.

Example: To call to "212-123-XXXX" in the United States from the product

- Dialpad screen ▶Enter the international access number "010"**
 - Touch and hold "0" to enter "+" which adds "010" automatically when dialing.

- Enter the country code of the United States**

30

- The malfunction or damage is due to natural disasters (earthquakes, storm or flood damage, etc.), fire, salt damage, abnormal voltage, etc.
- Repair may not be possible depending on the degree of damage.
- The Company shall have no liability for any damage or loss resulting from the malfunction of the product.
- The Company shall not bear any responsibility for accidents resulting from use of the product having been connected to unspecified devices.
- Do not accept requests for service calls to the owner's home, place of business, etc.
- This warranty is valid only in Japan.

* This warranty guarantees repair free of charge during the period and under the conditions specified on this warranty card. Thus this warranty does not limit the legal rights of the owner with respect to the issuer of this warranty card (the guarantor) or any other business person or enterprise.

■ **Repair and Delivery Support**

An after-sales service membership program on a monthly basis called "Repair and Delivery Support" is available for using your au terminal for a long time without worries. This service expands coverage for many troubles including malfunction, theft and loss. For monthly charge and details of the service, refer to au homepage.

https://www.au.com/mobile/service/kosho-funshitsu/ (Japanese)

❖**Information**

- You can apply for the membership only at the time of purchasing your au terminal.
- Once you cancel the membership, you cannot reapply for it until you purchase an au terminal next time.

35

■ **Setting app permission**

When you activate an app/function that access the functions or information of the product for the first time, a confirmation screen for requesting access permission appears.


If such confirmation screen appears, confirm the content and tap "DENY"/"ALLOW".

- If you do not permit, app/function may not be activated or use of function may be restricted.
- For some apps/functions, an explanation screen for the permission may appear. Several request screens may appear or the screen content may differ. Confirm each content and follow the onscreen instructions.
- In this manual, description of the confirmation screen may be omitted.


Knowing the status of the product

■ **Status bar**

You can check the status of the product with the icons displayed on the status bar at the top of the screen. On the left of the status bar, the notification icons appear to inform new mails, operations in progress, etc., and on the right, the status icons appear to indicate signal status, battery level, etc.







24


- Enter the city code "212"**
 - If the area code starts with "0", omit the "0". However, there are exceptions such as Italy.
- Enter the phone number of the other party "123XXXX"▶[**

Receiving a call

■ **When the screen is OFF or on the lock screen**


- Incoming call screen▶Swipe (flick) "" up**
 - To reject the incoming call, swipe (flick) "" down.
 - To answer with Answering Machine, swipe (flick) ".
- Call▶[**

■ **When the screen is ON (except on the lock screen)**

- In the displayed notification, [ANSWER]**
 - To reject an incoming call, tap "DECLINE".
 - To answer with Answering Machine, tap the top part of the notification▶Swipe (flick) ".

- Call▶[**

Making a call from Contacts

- In the Home screen, slide the screen up▶[Contacts]**
- Tap a contact to call**
- Tap []/phone number**

31

- Note that when changing the model or purchasing an extra terminal, this service only covers the most recently purchased au terminal.
- When an au mobile phone is handed over to you or someone else, the "Repair and Delivery Support" membership is also handed over to the successor of the terminal.
- When you get a new au terminal by changing the model or purchasing an extra terminal, the "Repair and Delivery Support" membership for the old au terminal is automatically canceled.
- Service contents are subject to change without notice.

■ **au IC card**

The au IC card is lent to you by au. In case of loss or damage, the card will be replaced at your expense. When a malfunction is suspected, or in case of theft or loss, contact an au shop or Toyota store.









Peripheral devices









- USB Type-C™-3.5 φ conversion/TV Antenna cable 01 (03SOHSA)
- Sony Mobile Desktop Holder 02 (02SOPUA) (sold separately)¹
- TypeC Common AC Adapter 01 (0601PQA) (sold separately)
- TypeC Common AC Adapter 02 (0602PQA) (sold separately)
- Common AC Adapter 05 (0501PWA) (sold separately)²
- Common DC Adapter 03 (0301PEA) (sold separately)²
- Micro-B Type-C Adapter (0601PHA) (sold separately)


¹ Use the Attachment 52B.

² For use, Micro-B Type-C Adapter (sold separately) is needed.

37

Examples of notification icons	
	Missed call
	Incoming call/dialing call/calling
	New PC mail message
	New Gmail message
	New au-mail message
	New +Message/new SMS
	USB device is connected/Moisture is detected on the USB Type-C connection terminal
	Wi-Fi® open network available

Main status icons	
	Battery level (100%, Charging)
	Signal level (Level 4 ¹ , Out of service area)
	4G (LTE/WiMAX 2+) data communication status ²
	GSM/UMTS/LTE network roaming is ON
	Silent mode (vibrate) is set
	Silent mode (no vibrate) is set
	Wi-Fi® is connected ¹
	Airplane mode is activated

¹  appears in the right of the icon during communication.

² Two types of network, "LTE" and "WiMAX 2+" can be used. "4G" appears on the screen for both networks.

The company determines which network is less busy depending on the condition of the line to connect.

32

Appendix

Updating Software

You can update the product to the most recent software for optimal performance and to get the latest enhancements.

- You are charged for the data communication when accessing the Internet from the product via data communication. A large amount of data communication is required especially for upgrading the software (OS upgrading). Using Wi-Fi® connection is recommended.
- You are recommended to back up your data before updating software.
- For details, visit <https://www.sonymobile.co.jp/support/> (Japanese) or refer to the Online Manual or "取扱説明書 (詳細版) (Full instruction manual)" (Japanese) available on au homepage.

■ **Downloading and updating software**

The update software can be downloaded from the product directly via Internet.

- Note that when Wi-Fi® communication becomes unstable, data communication takes the place automatically, which may incur communication charges.

- In the Home screen, slide the screen up▶[Settings]▶[System]▶[Advanced]▶[Software update]**
- [:]▶[Refresh]**
 - After that, follow the onscreen instructions.

32

❖**Information**

- Accessories can be purchased from the au Online Shop. **https://onlineshop.au.com/ (Japanese)**

Main specifications

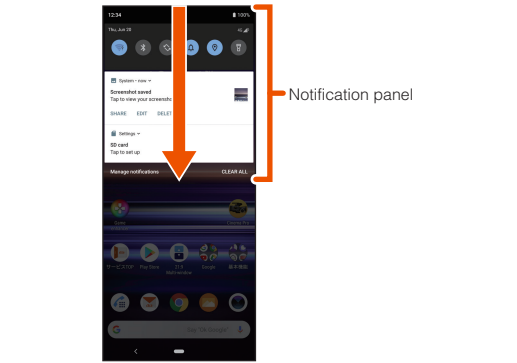
Main unit	
Display	Approx. 6.5 inches Organic EL (HDR-capable), Approx. 16.77 million colors 1,644 x 3,840 dots
Weight	Approx. 178 g
Dimension (W x H x T)	Approx. 69 mm x 158 mm x 8.1 mm (10.0 mm where thickest)
Internal memory	ROM: Approx. 64 GB RAM: Approx. 6 GB
Camera pixels	Camera: Effective pixels Approx. 12.2 million pixels/ 12.2 million pixels Front camera: Effective pixels Approx. 8 million pixels
Continuous call time	In Japan Approx. 1,930 min. Overseas (GSM) Approx. 620 min.
Continuous stand-by time	In Japan Approx. 470 hours Overseas (GSM) Approx. 490 hours

39


Setting app permission

If any notification icons are displayed on the status bar, slide down the status bar to open the Notification panel. You can check the contents of notifications or start corresponding apps.

Slide the status bar down with two fingers or slide the Notification panel down to display the quick setting panel. You can set on/off of the functions.



❖**Information**

- To delete a notification, swipe (flick) the notification left or right. However, some notifications may not be deleted.
- To close the Notification panel/quick setting panel, tap  or slide the Notification panel/quick setting panel up.

36

Troubleshooting

Before you assume that the product is malfunctioning, perform "クイック診断 (Quick diagnosis)" or "トラブル診断 (Diagnosis for trouble)" in "故障紛失サポート (Repair and Delivery Support)" app.

■ **クイック診断 (Quick diagnosis)**

In the Home screen, slide the screen up▶[お客さまサポート (Customer support)]▶[故障紛失サポート (Repair and Delivery Support)]▶[クイック診断してみる (Go to Quick diagnosis)]

■ **トラブル診断 (Diagnosis for trouble)**

In the Home screen, slide the screen up▶[お客さまサポート (Customer support)]▶[故障紛失サポート (Repair and Delivery Support)]▶[便利な機能 (Useful functions)]▶[トラブル診断を試す (Go to Diagnosis for trouble)]

Or you can visit the following au homepage.

https://www.au.com/trouble-check/ (Japanese)



Also refer to "故障とお考えになる前に" (troubleshooting) in the "Online Manual" (Japanese) or "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) available on the au homepage.

https://www.au.com/online-manual/sovxx/ (Japanese)

https://www.au.com/support/service/mobile/guide/manual/ (Japanese)



33

Charging time	Using TypeC Common AC Adapter 01 (sold separately): Approx. 170 min. Using TypeC Common AC Adapter 02 (sold separately): Approx. 130 min.										
Continuous Full Seg watching time	Approx. 8 hours 20 min.										
Continuous 1Seg watching time	Approx. 9 hours 0 min.										
Continuous tethering time	Approx. 670 min.										
Wi-Fi® tethering maximum connection number	10										
Bluetooth® function	<table><tr><td>Communication type</td><td>Compliant with Bluetooth® standard Ver.5.0</td></tr><tr><td>Output</td><td>Compliant with Bluetooth® standard Power Class 1</td></tr><tr><td>Communication coverage distance¹</td><td>Within 10 m with good visibility</td></tr><tr><td>Supported Bluetooth® profile²</td><td>HSP, HFP, PBAP³, A2DP, apt-X, AVRCP, SPP, OPP, HID, HOGP, MAP, DUN⁴, GATT, PAN-NAP, PANU</td></tr><tr><td>Radio frequency band</td><td>2.4 GHz band (2,400 MHz - 2,483.5 MHz)</td></tr></table>	Communication type	Compliant with Bluetooth® standard Ver.5.0	Output	Compliant with Bluetooth® standard Power Class 1	Communication coverage distance ¹	Within 10 m with good visibility	Supported Bluetooth® profile ²	HSP, HFP, PBAP ³ , A2DP, apt-X, AVRCP, SPP, OPP, HID, HOGP, MAP, DUN ⁴ , GATT, PAN-NAP, PANU	Radio frequency band	2.4 GHz band (2,400 MHz - 2,483.5 MHz)
Communication type	Compliant with Bluetooth® standard Ver.5.0										
Output	Compliant with Bluetooth® standard Power Class 1										
Communication coverage distance ¹	Within 10 m with good visibility										
Supported Bluetooth® profile ²	HSP, HFP, PBAP ³ , A2DP, apt-X, AVRCP, SPP, OPP, HID, HOGP, MAP, DUN ⁴ , GATT, PAN-NAP, PANU										
Radio frequency band	2.4 GHz band (2,400 MHz - 2,483.5 MHz)										




39

Setting silent mode


■ **Setting silent mode (vibrate)**

- Press the upper or lower part of the volume key**
 - The volume adjusting bar appears.
- []**
 - The icon on the volume adjusting bar changes to .

■ **Setting the silent mode (no vibrate)**

- Press the upper or lower part of the volume key**
 - The volume adjusting bar appears.
- []▶[]**
 - The icon on the volume adjusting bar changes to .

❖**Information**

- Even in silent mode, sounds for shutter, shooting start/end sound when shooting videos, alarm, playback of video, or music, etc. are not muted.
- Adjusting sound volume with "Ring and notification volume" of "Sound" setting in silent mode cancels silent mode.
- Press Volume key and then drag the volume adjusting bar up/down to adjust volume of media sound. Also, tap "" to display "Sound" setting where you can change Ring and notification volume, Alarm volume, etc.

Setting Airplane mode

When the airplane mode is set, all wireless functions (phone, packet communication, Wi-Fi® function, Bluetooth® function) are turned off.

- In the Home screen, slide the screen up▶[Settings]▶[Network & internet]**

27

After-sales service

■ **When asking for repair**

For repair, contact Repair and Delivery Support Center.

During the warranty period	Repairs will be done based on the terms of services of the free-of-charge repair warranty.
Outside the warranty period	We shall repair the product for a charge as requested by the customer if repair renders it usable.

* The warranty period is one year from the date you purchased the product.

❖**Information**

- Before handing in the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
- Recycled parts that meet the Company's quality standards are sometimes used for repair.
- Your old au terminal collected by replacement mobile phone delivery service is serviced for reuse and recycled as a replacement terminal. Also, parts replaced through au after-sales service are collected and recycled by KDDI. They cannot returned to customers.
- The product which is processed, remodeled, analyzed (including by modifying or analyzing the software (including by rooting etc.), reverse engineering, decompiling), or repaired by an unauthorized repair office is not covered by the warranty and repair may be refused.

34

*1 Varies by obstruction between communication devices or radio wave reception status.

*2 It is a specification according to purpose of use of Bluetooth® device and is defined by Bluetooth® standard.

*3 Some contacts data may not be displayed correctly on the other party's device.

*4 Supported to some car navigation systems. For use, refer to the au homepage.

❖**Information**

- The continuous call time, continuous stand-by time, continuous Full Seg watching time, continuous 1Seg watching time and continuous tethering time may drop to less than half depending on the battery charging status, usage environment such as temperature, reception condition at the location where the product is used, and the function settings.

■ **USB Type-C™-3.5 φ conversion/TV Antenna cable 01**

Size	Length Approx. 117 mm
Weight	Approx. 5 g

35

36

37

39

39

34