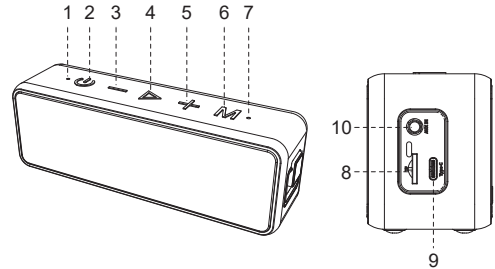


<div>Adak BT Speaker IX7</div> <div>IC : 21530-100500 FCC ID: 2AGR4-100500</div> <div>BC</div> <div>Instruction Manual</div>	<div>OVERVIEW</div> <div></div> <div>Product structure:</div> <div><div>1.Power LED indicator</div><div>2.Power switch</div><div>3.PREVIOUS/VOL-</div><div>4.Multi-function button(MFB)</div><div>5.NEXT/VOL+</div><div>6.Mode switching</div><div>7.LED indicator</div><div>8.Micro SD card slot</div><div>9.Type-C charging interface</div><div>10.AUX in</div></div>	<div>Power ON/OFF</div> <div>1.Long press the power switch for 2 seconds to turn on, the LED status indicator flashes blue and the power LED indicator lights up white.</div> <div>2.Long press the power switch for 2 seconds to turn off, the LED status indicator goes off.</div> <div>Bluetooth Operation</div> <div>1. Please ensure that the Bluetooth function has been turned on in the settings of your Bluetooth enabled device.</div> <div>2. Turn the speaker on, the indicator light will flash to detect Bluetooth enabled devices near you and will enter pairing mode. The indicator light will go off if no Bluetooth devices are detected within 10 minutes.</div> <div>3."GEMLINE SPKR" will appear on the Bluetooth device list, select "GEMLINE SPKR" to establish pairing. If instructed to enter a PIN code, please enter '0000'.</div> <div>4. When you want to play audio from another Bluetooth device, disconnect the speaker from the original device and follow steps 1-3 to re-pair the speaker with a new Bluetooth enabled device.</div> <div>Answer incoming calls</div> <div>Press the MFB button to answer incoming calls.</div> <div>Tip: Since some mobile phones default to answer calls via their own receiver, please refer to the instructions of your phone and set on your</div>	<div>phone.</div> <div>End the call</div> <div>Press the MFB button once to end the current call.</div> <div>Refuse incoming calls</div> <div>Long press the MFB button for 2s to reject when there comes a call.</div> <div>Last number redial</div> <div>Dual press the MFB button to redial the last calling number.</div> <div>Mode switching</div> <div>Short press M to select mode. (Bluetooth/Micro SD card/AUX in)</div> <div>Bluetooth disconnection</div> <div>Long press the MFB button for 2 seconds to cut off the Bluetooth connection.</div> <div>TWS connection</div> <div>1. Long press the M button for 2 seconds to cut off the speakers TWS connection.</div> <div>2. Long press the M button for 5 seconds to erase the pairing record. (The speaker will automatically shut down when the pairing record erased successfully.)</div>	<div>Micro SD card mode</div> <div>Insert a micro SD card, the speaker will automatically recognize (with a voice prompt) and automatically broadcasts MP3 format music in it. (The Max storage of the micro SD card is 32GB).</div> <div>AUX mode</div> <div>Connecting your music player/phone to the speaker via the provided dual 3.5mm audio cable, then the speaker will automatically recognize.</div> <div>Music playing</div> <div>1. Short press the MFB to pause/play;</div> <div>2. Long press the "-"for PREV;</div> <div>3. Long press the "+"for NEXT.</div> <div>4. Short press the "-"for VOL -;</div> <div>5. Short press the "+"for VOL +.</div> <div>True Wireless Stereo (TWS) Fit for two GEMLINE SPKR speakers</div> <div>You can connect two GEMLINE SPKR speakers as a pair for stronger stereo and surrounding effect.</div> <div>1. Make sure the Bluetooth function is OFF on your Bluetooth player;</div> <div>2. Turn on two speakers;</div> <div>3. Long press M button on either speaker for 2 seconds, then there</div>	<div>comes up a melody which means the two speakers are now in TWS pairing status. Until LED of the right channel speaker lights up steady blue and the LED of the left channel speaker flashes, the TWS connection is successful.</div> <div>4. Then active the Bluetooth of your phone and search for "GEMLINE SPKR". Click manually to connect. The two speaker LED turns to be steady blue if the connection is successful.</div> <div>5.The function of TWS must be matched before connecting to the mobile devices. Otherwise, the function of TWS cannot be matched after connecting to mobile devices.</div> <div>6. The two speakers can automatically achieve TWS re-connection for the future use.</div> <div>7. Long press the M for 5s after power on can reset and restart the speak.</div> <div>8. In TWS connection, only the left channel speaker has hands-free call function.</div> <div>Charging</div> <div>1.As product has built-in non-removable and rechargeable battery, please use the provided micro USB cable to charge.</div> <div>2.Charging voltage and current is 5V/2.4A, PLS charge the speaker with the input power below 5V/2.4A.</div> <div>3. Please choose the charger that is certified by the regular manufacturer.</div>										
Front Cover	page 02	page 03	page 04	page 05	page 06										
<div>SPECIFICATION</div> <div>Model: 100500-001B</div> <div>Bluetooth version: Bluetooth® V5.0</div> <div>Profiles supported: A2DP、AVRCP、HFP、HSP</div> <div>Battery: 3600mAh</div> <div>Input voltage: DC5V/2.4A</div> <div>Frequency Response: 115Hz-15kHz</div> <div>SNR:≥80DB</div> <div>Product size: 186x50x62mm</div> <div>IPX7 waterproof</div> <div>PACKING LIST</div> <div><div>• Bluetooth® Speaker</div><div>• USB Charging Cable</div><div>• Audio Cable</div><div>• User Manual</div><div>• Gift Box</div></div>	<div>4. The battery performance may decrease as repeating charging and using the speaker. It's a normal phenomenon for all rechargeable batteries.</div> <div>5.Charge if the power LED indicator lights up red, and it goes off upon charging finished.</div> <div>WARNING</div> <div>1. Do not disassemble, repair, or modify the speaker.</div> <div>2. Do not place product in or near fire to avoid danger, as it uses a lithium battery.</div> <div>3. Avoid storage at extreme temperatures, this can shorten the battery life and may affect the speaker.</div> <div>4. Keep the speaker dry and do not store the speaker in damp areas to avoid damage to the speaker.</div> <div>5. Avoid dropping the speaker as it may damage the speaker.</div> <div>KIND REMINDER</div> <div>1. To prolong the speaker's life span and to avoid hearing damage, please do not listen to music under high volume for long periods of time.</div> <div>2. When an error occurs with the speaker, please turn off the speaker and restart it to troubleshoot.</div> <div>3. When the speaker's power is low, the Bluetooth range may be affected. Please charge the speaker to avoid disruptions during use.</div>	<table><tr><th>Problem</th><th>Troubleshooting Method</th></tr><tr><td>Unable to pair the speaker with a mobile device</td><td>1. Inspect whether the speaker is searching for a Bluetooth enabled device to connect to. If not, restart the speaker. 2. Difficulty in searching and connecting to a desired device can be affected if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable the Bluetooth function on the other devices. 3. The power of the battery is insufficient, please recharge the speaker.</td></tr><tr><td>The music stops from time to time</td><td>1. Inspect the distance between the speaker and the Bluetooth enabled device, it may exceed the Bluetooth transmission range. 2. Inspect if there is an obstacle between the speaker and the Bluetooth enabled device. 3. The power of the battery is insufficient, please recharge the speaker.</td></tr><tr><td>The sound is low or distorted</td><td>1. Inspect the volume of the connected speaker or Bluetooth enabled device and adjust the volume as needed. 2. The power of the battery is insufficient, please recharge the speaker.</td></tr></table>	Problem	Troubleshooting Method	Unable to pair the speaker with a mobile device	1. Inspect whether the speaker is searching for a Bluetooth enabled device to connect to. If not, restart the speaker. 2. Difficulty in searching and connecting to a desired device can be affected if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable the Bluetooth function on the other devices. 3. The power of the battery is insufficient, please recharge the speaker.	The music stops from time to time	1. Inspect the distance between the speaker and the Bluetooth enabled device, it may exceed the Bluetooth transmission range. 2. Inspect if there is an obstacle between the speaker and the Bluetooth enabled device. 3. The power of the battery is insufficient, please recharge the speaker.	The sound is low or distorted	1. Inspect the volume of the connected speaker or Bluetooth enabled device and adjust the volume as needed. 2. The power of the battery is insufficient, please recharge the speaker.	<table><tr><td>The Bluetooth indicator light remains OFF</td><td>1. The power of the battery is insufficient, please recharge the speaker. 2. Restart the speaker.</td></tr></table> <div>The <i>Bluetooth</i>® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by The Gem Group is under license. Other trademarks and trade names are those of their respective owners.</div>	The Bluetooth indicator light remains OFF	1. The power of the battery is insufficient, please recharge the speaker. 2. Restart the speaker.	<div>This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:(1) This device may not cause interference.(2) This device must accept any interference, including interference that may cause undesired operation of the device.</div> <div>L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) L' appareil ne doit pas produire de brouillage; (2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.</div> <div>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the</div>	<div>instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</div> <div>-Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help</div> <div>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)this device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.</div>
Problem	Troubleshooting Method														
Unable to pair the speaker with a mobile device	1. Inspect whether the speaker is searching for a Bluetooth enabled device to connect to. If not, restart the speaker. 2. Difficulty in searching and connecting to a desired device can be affected if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable the Bluetooth function on the other devices. 3. The power of the battery is insufficient, please recharge the speaker.														
The music stops from time to time	1. Inspect the distance between the speaker and the Bluetooth enabled device, it may exceed the Bluetooth transmission range. 2. Inspect if there is an obstacle between the speaker and the Bluetooth enabled device. 3. The power of the battery is insufficient, please recharge the speaker.														
The sound is low or distorted	1. Inspect the volume of the connected speaker or Bluetooth enabled device and adjust the volume as needed. 2. The power of the battery is insufficient, please recharge the speaker.														
The Bluetooth indicator light remains OFF	1. The power of the battery is insufficient, please recharge the speaker. 2. Restart the speaker.														
Back Cover	page 07	page 08	page 09	Page 10	Page 11										